


Arco

Design by BoConcept

Samvejledning - Assembly Instructions - Montageanleitung - Instructions d'assemblage - Instrucciones de montaje

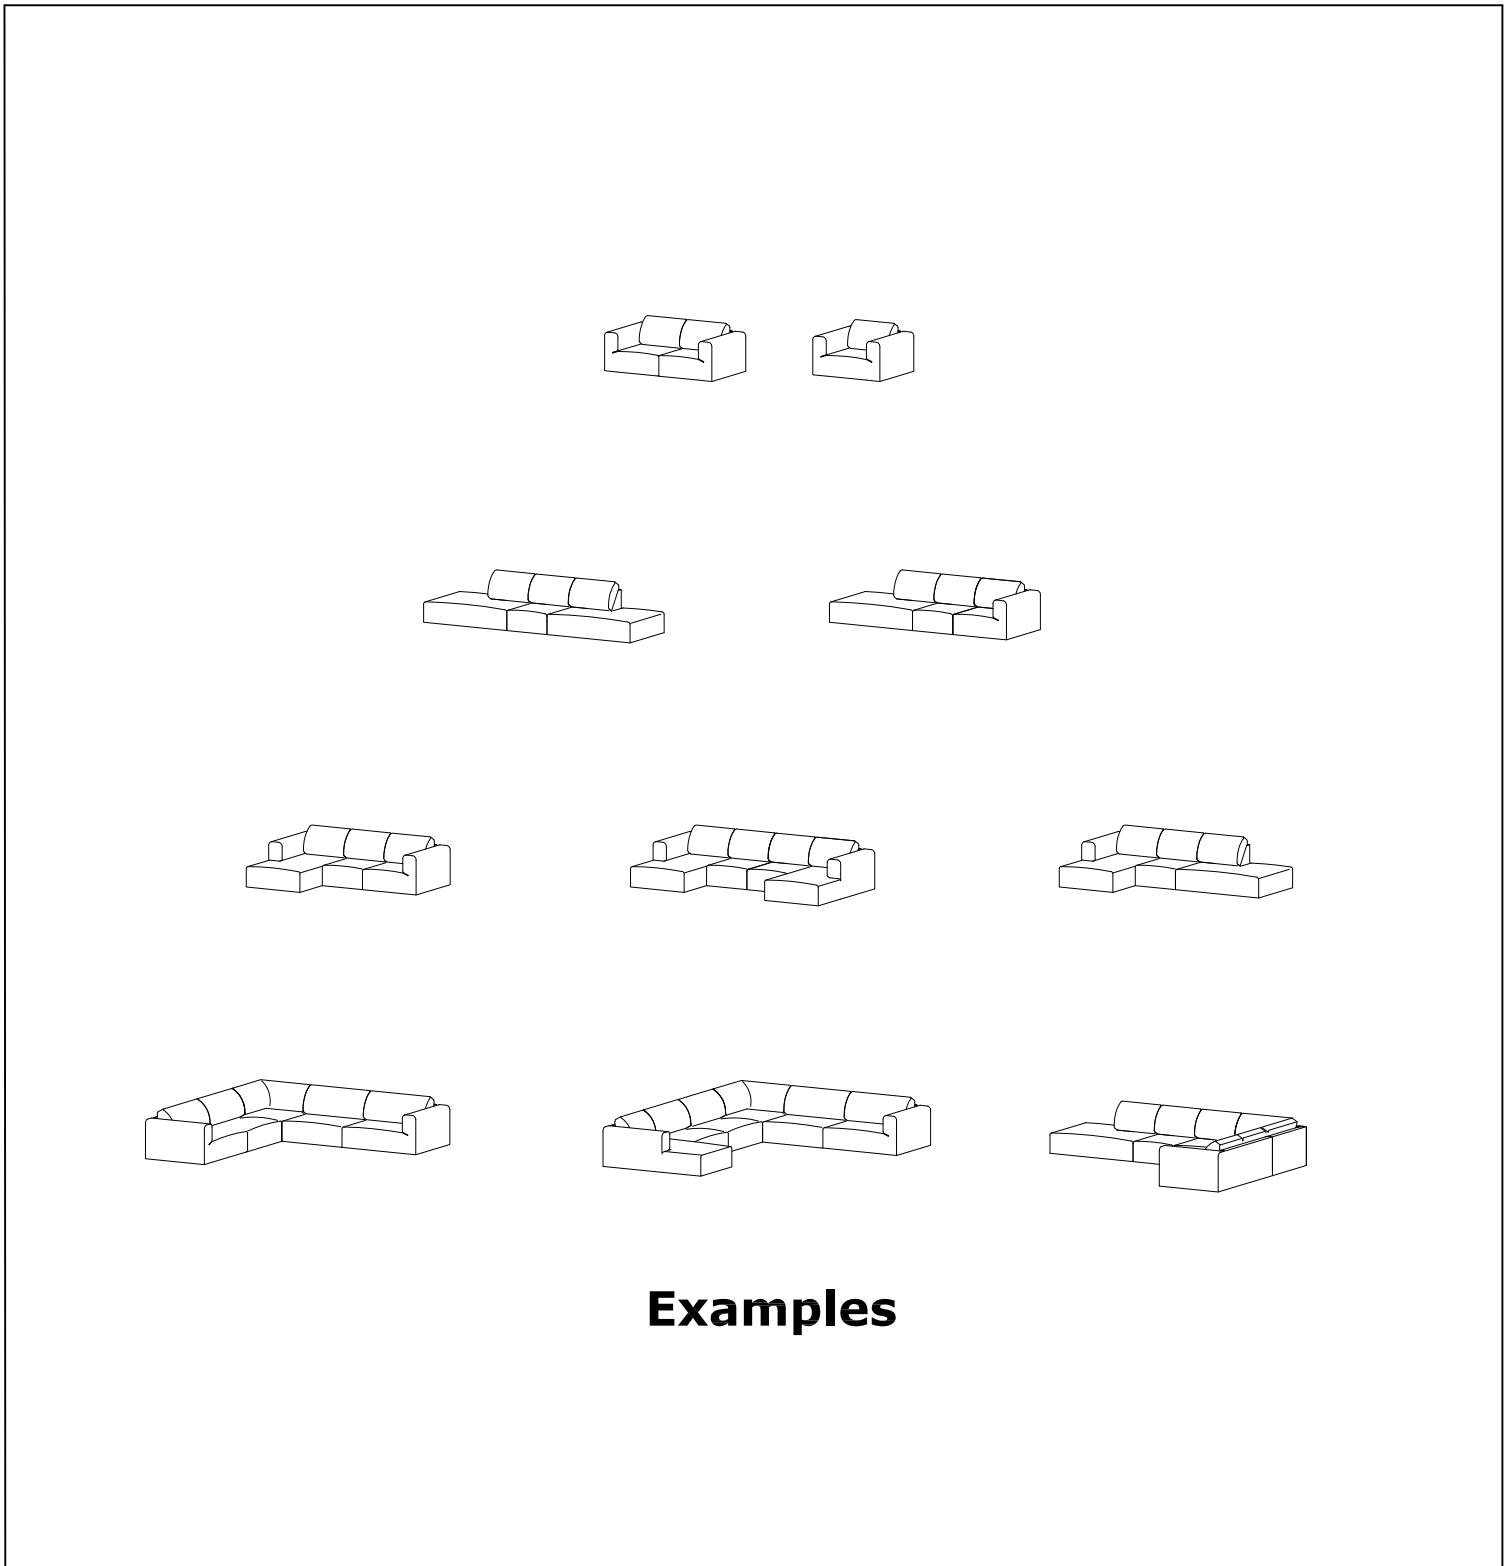

Examples

Beslag – Beschläge – Fittings – Set de montage



A
932000159
KON001



B
932000197
M8x60mm



C
932000157
M8 25x8,5x2




D
932000162
M8



E
1979300005
5mm



F
932000188
3,5x20mm



G
932000158




H
932000198
M8 17x8,5x1



D
932000162
M8

FIG. 1



Example



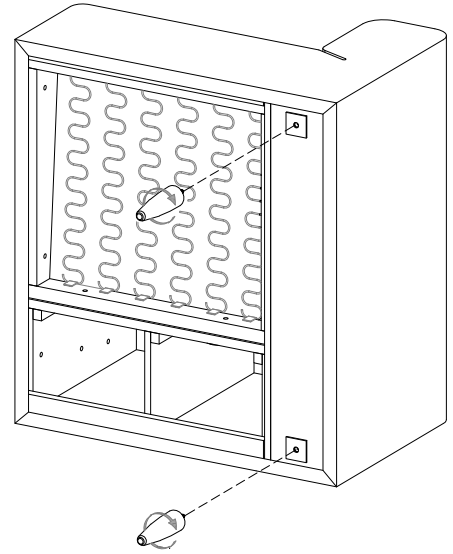


FIG. 2

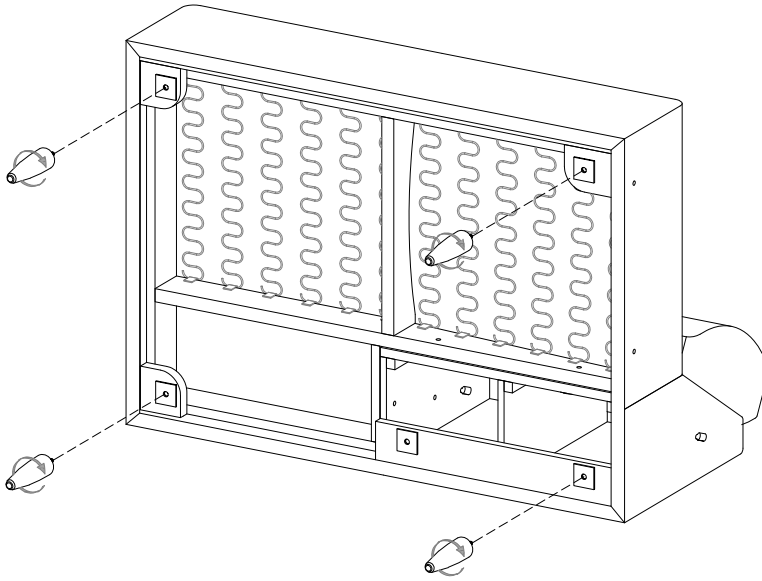

A




B
M8x60mm



C
M8 25x8,5x2



D
M8



E
5mm



F
3,5x20mm

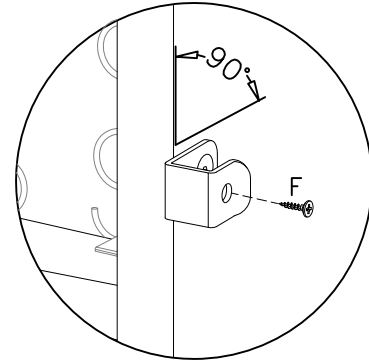
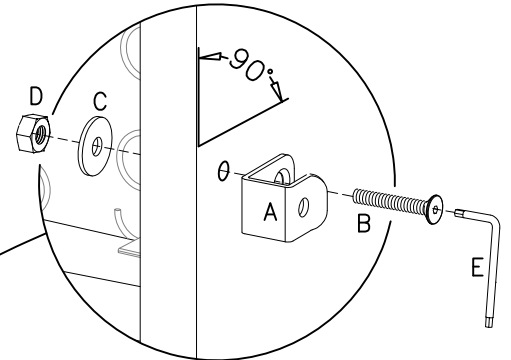
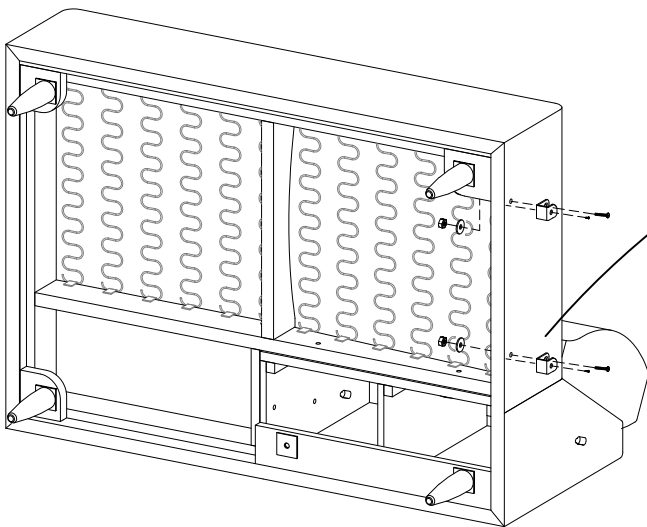


FIG. 3


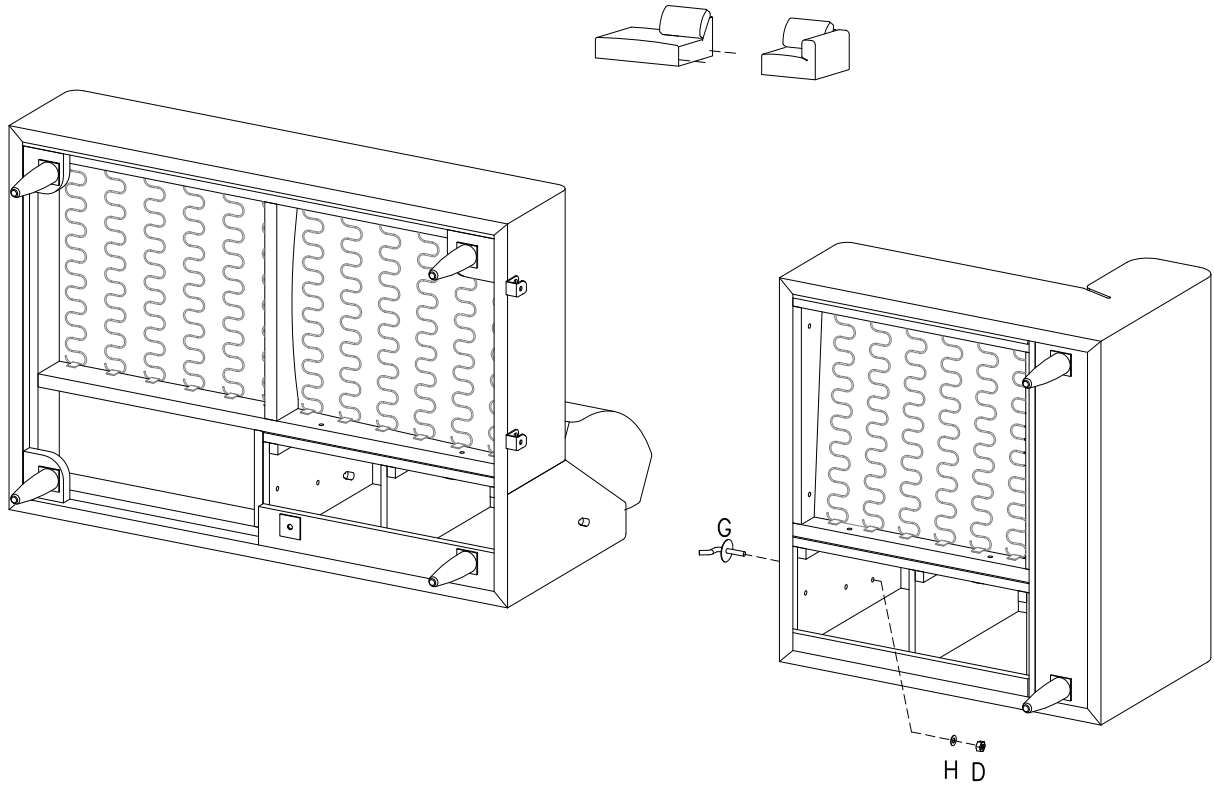


FIG. 4

