
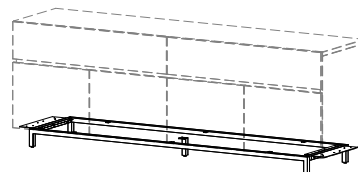


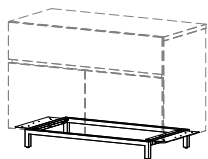


# Volani

Design by BoConcept

Samlevejledning - Assembly Instructions - Montageanleitung - Instructions d'assemblage - Instrucciones de montaje



**35**

10,6x82x46,8 cm

**36**

10,6x133,4x46,8 cm

**37**

10,6x184,5x46,8 cm

Beslag - Beschläge - Fittings - Set de montage  
Acessórios



**A**  
970003125  
M6x12mm



**B**  
1979300004  
4mm



**C**  
1978104020  
4,0x20mm


No. 35      4      1      20

No. 36      4      1      27


No. 37      4      1      29

No. 35

x2

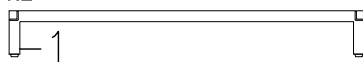


x2

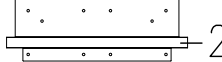


No. 36 ,37

x2

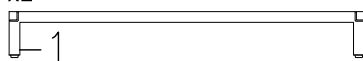

x2

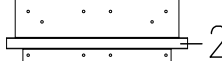

Værktøj -  
Werkzeuge -  
Tools - Outils




FIG.  
**1**

Example Volani 35

**A X 4**  
M6x12mm

**B X 1**  
4mm



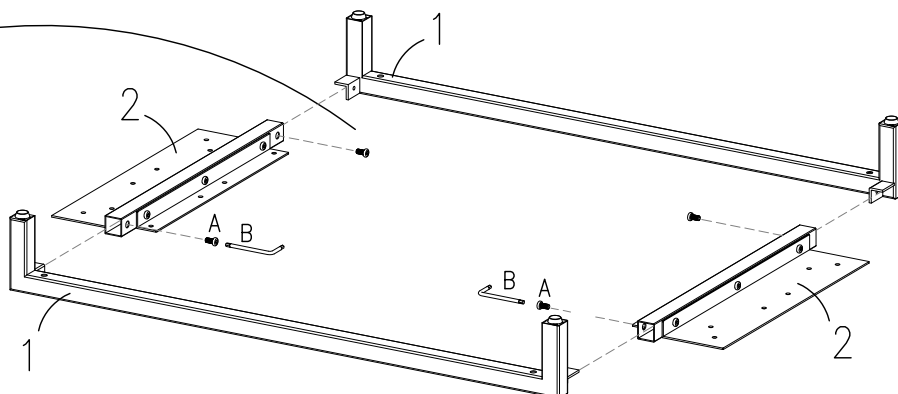


FIG. 2

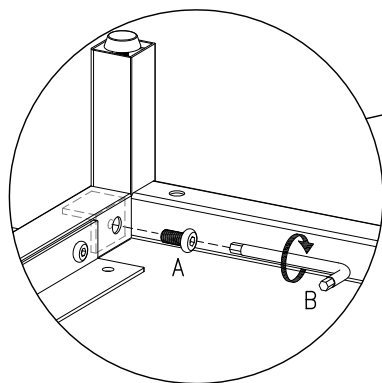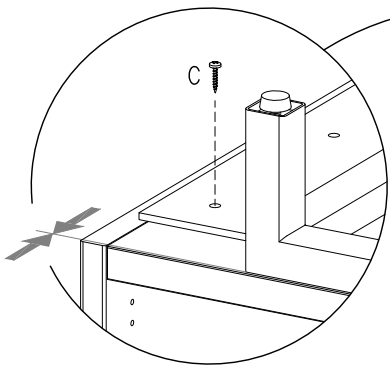

Volani 1100

C X 20  
4,0x20 mm



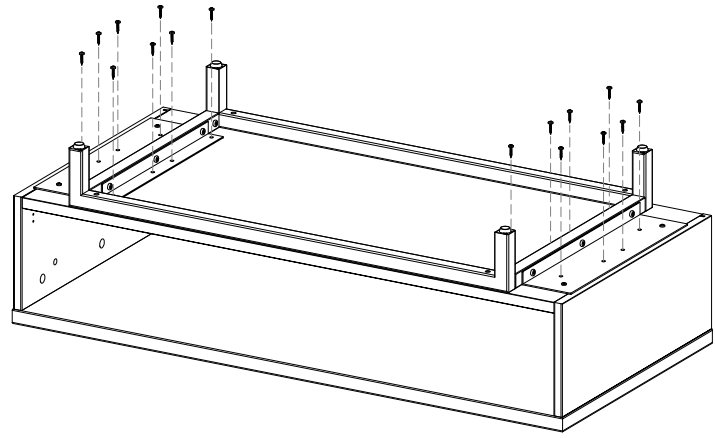


FIG. 3

C X 3  
4,0x20 mm



Attention!

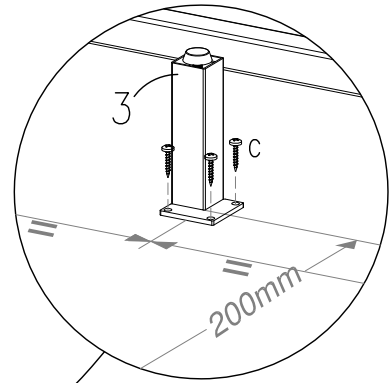

200mm

