



Volani

Design by BoConcept

Samlevejledning - Assembly Instructions - Montageanleitung - Instructions d'assemblage - Instrucciones de montaje

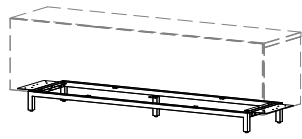

260
10,6x133,4x36,8 cm

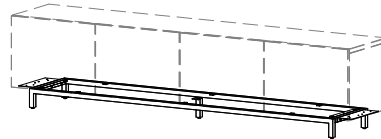

270
10,6x184,5x36,8 cm

Beslag - Beschläge - Fittings - Set de montage
Acessórios



A
970003125
M6x12mm



B
1979300004
4mm



C
970001124
4,0x16mm


No. 260	4	1	25
No. 270	4	1	27

No. 260/270

x2



x2



Værktøj -
Werkzeuge -
Tools - Outils





FIG.
1

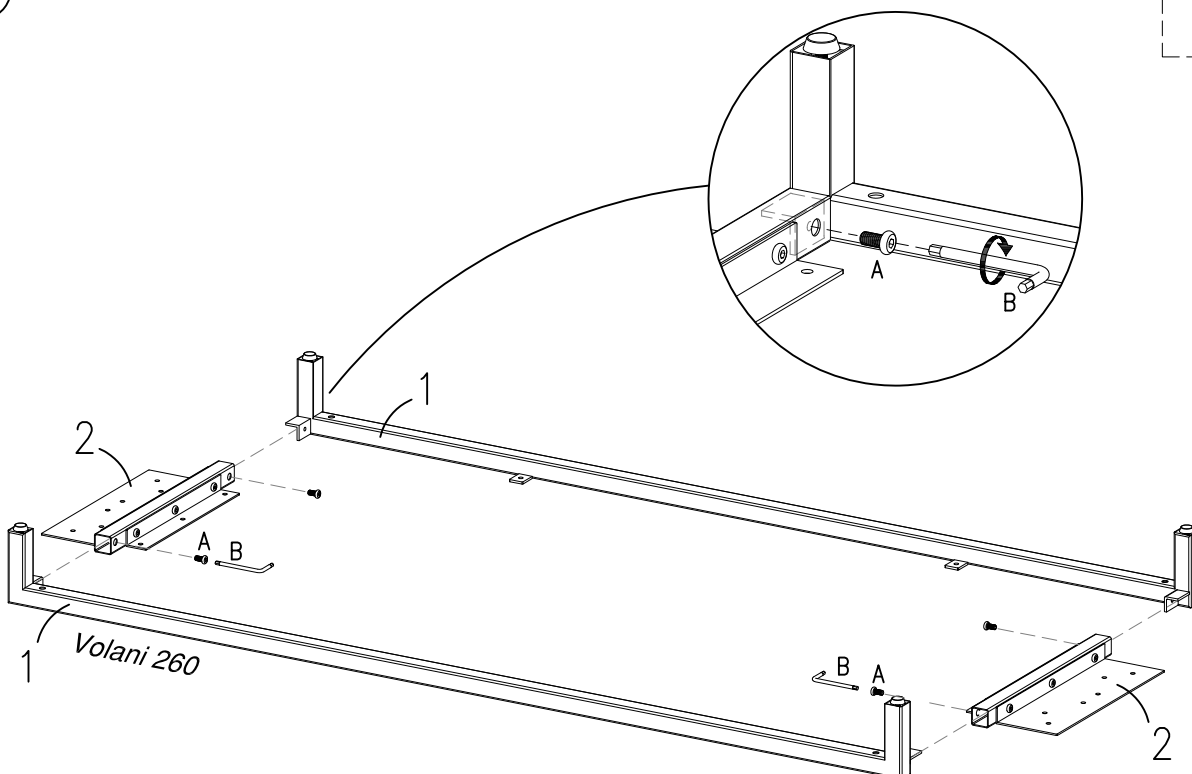

A X 4
M6x12mm

B X 1
4mm

FIG. 2

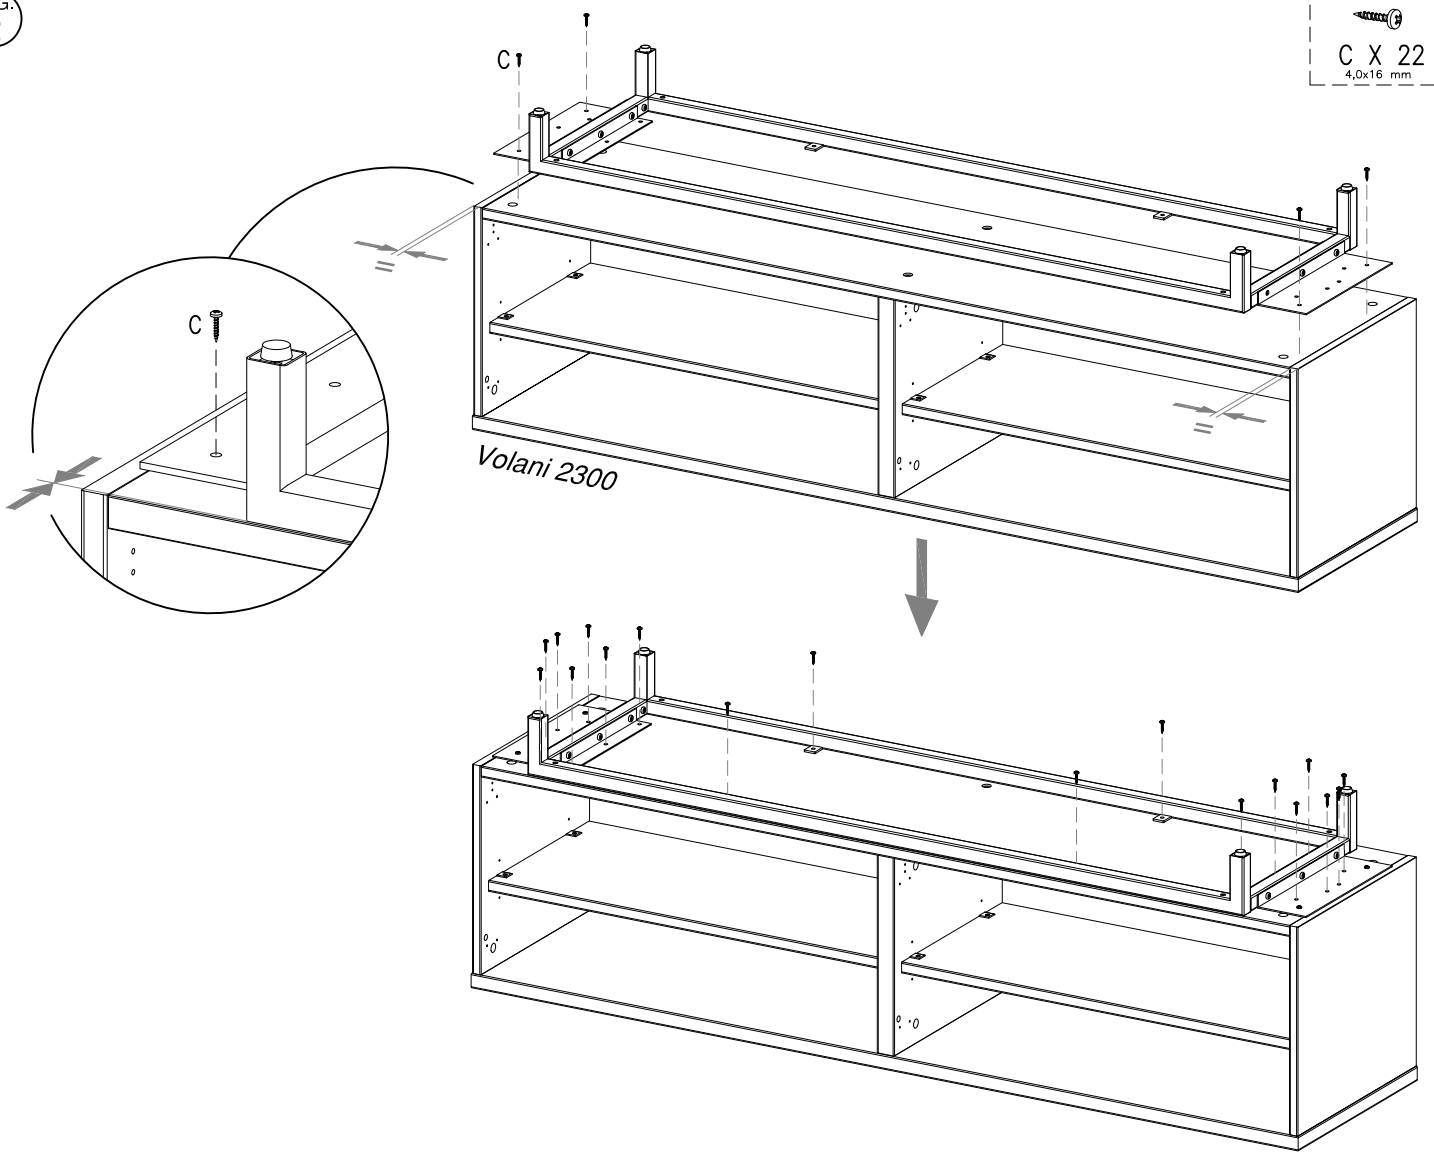


FIG. 3

