


Volani


Design by BoConcept

Samvejledning - Assembly Instructions - Montageanleitung - Instructions d'assemblage - Instrucciones de montaje

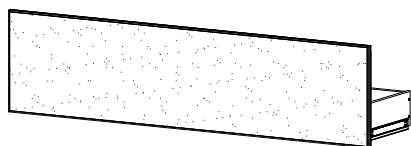

600

38,1x153,5x34,9 cm / max. 2x10 kg

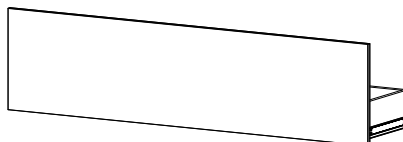


400

38,1x153,5x34,4 cm / max. 2x10 kg

Korpus - Korpus - Carcase - Carcasse


col.1

x2

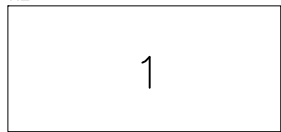


1

x2




3

x2




4

x2




2

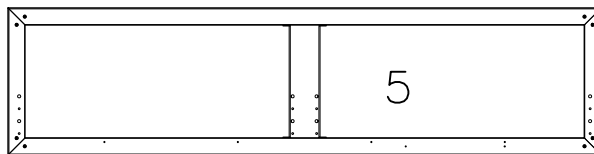


5

Værktøj - Werkzeuge
Tools - Outils

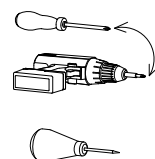

Beslag - Beschläge - Fittings - Set de montage

col.1

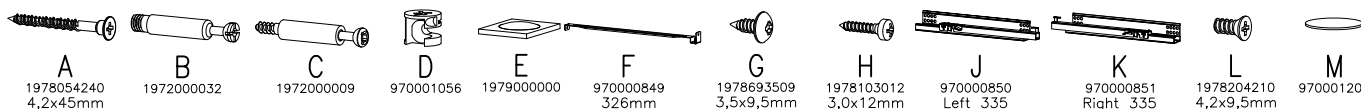

A

1978054240
4,2x45mm

B

1972000032

C

1972000009

D

970001056

E

1979000000

F

970000849
326mm

G

1978693509
3,5x9,5mm

H

1978103012
3,0x12mm

J

970000850
Left 335

K

970000851
Right 335

L

1978204210
4,2x9,5mm

M

970001204

Volani 600

8

8

0

8

2

4

4

4

2

2

16

8

Volani 400

8

0

8

8

2

4

0

8


2

2

16

8

FIG.
1

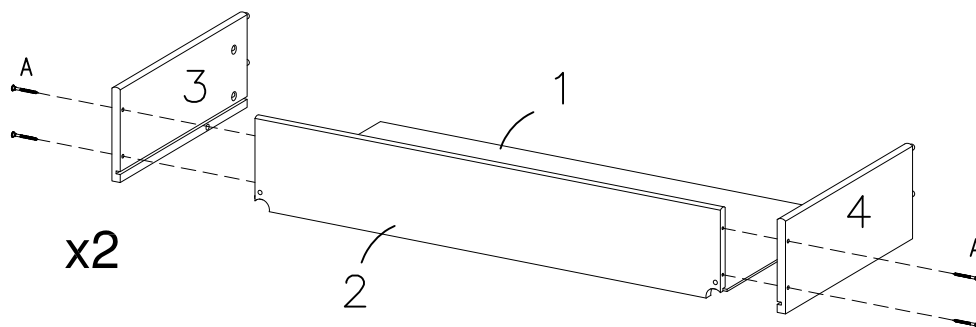

x2

2

1


4

A




A X 8
4,2x45mm


FIG. 2



Example



No. 600



No. 400

B X 8	D X 8	E X 2	M X 8
C X 8	D X 8	E X 2	M X 8




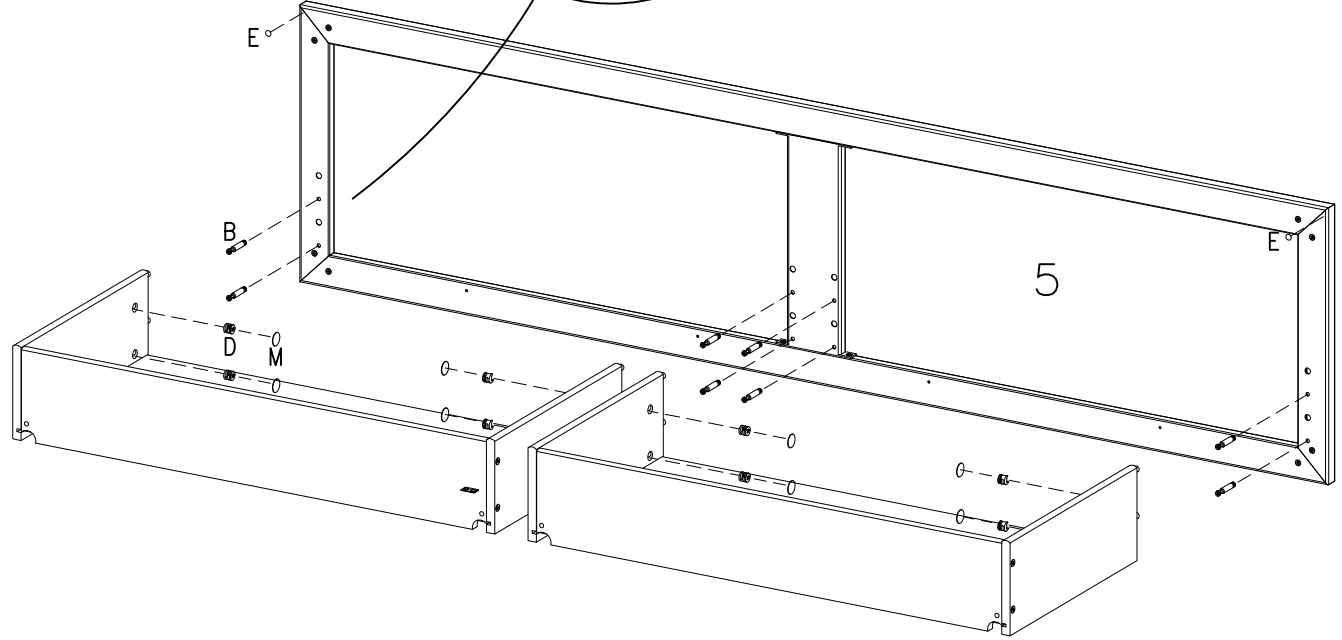



FIG. 3

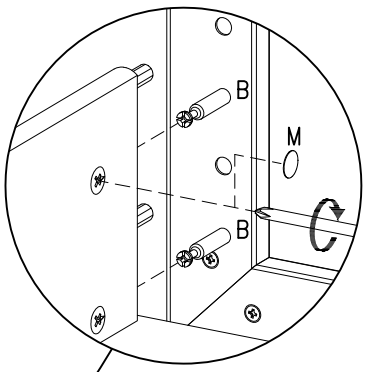

Example



No. 600



No. 400

F X 4 326mm	G X 4 3,5x9,5mm	H X 4 3,0x12mm
F X 4 326mm	H X 8 3,0x12mm	




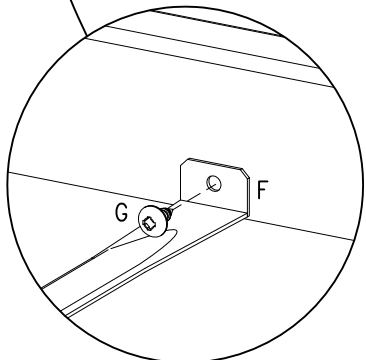


FIG. 4

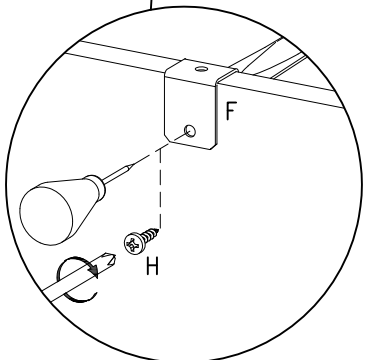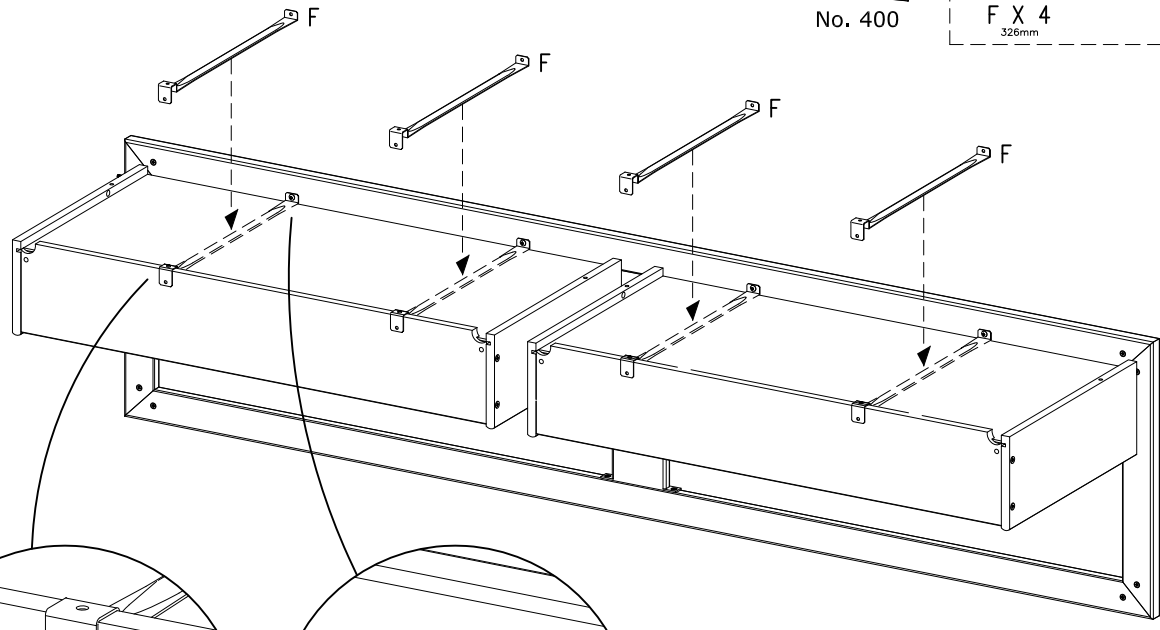

Example

J X 2
Left 335

K X 2
Right 335

L X 16
4,2x9,5mm




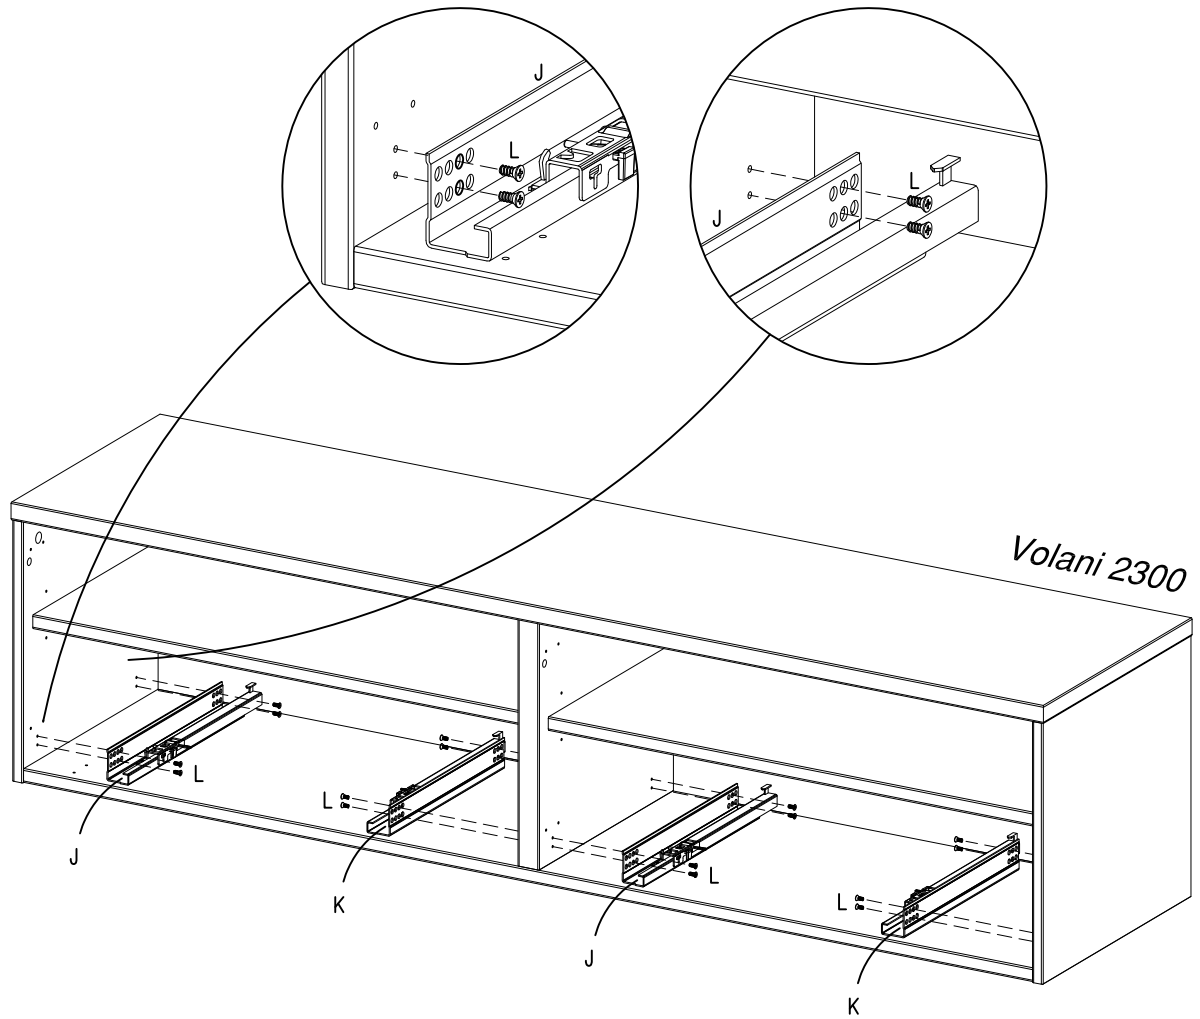


FIG. 5






Example

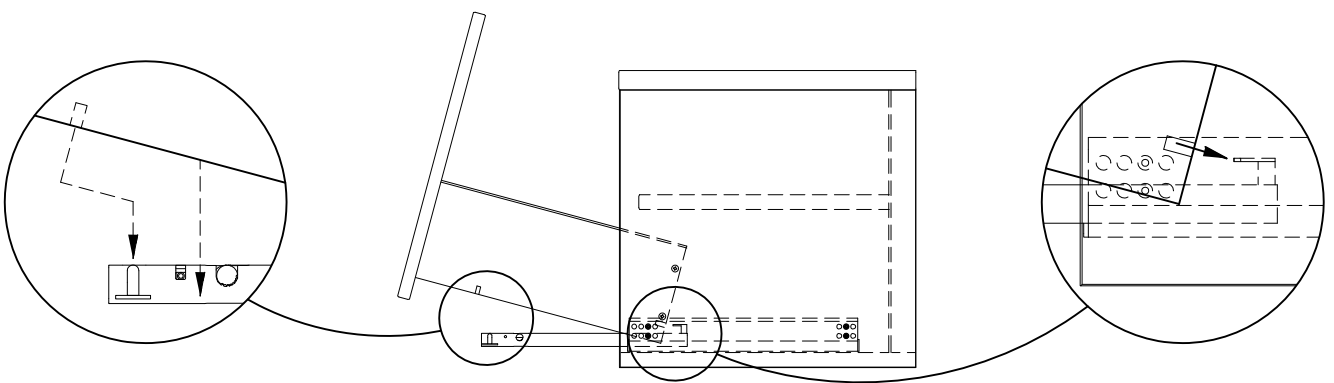

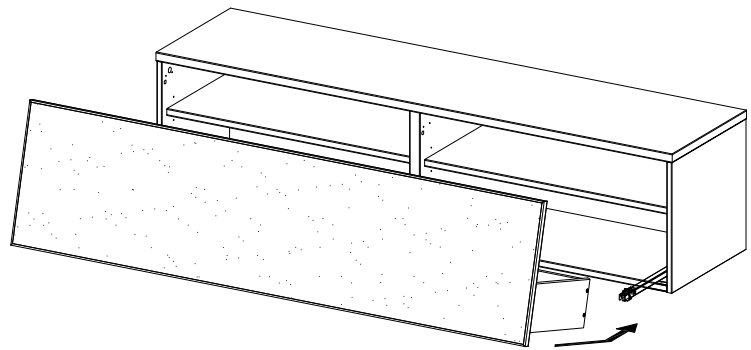

Example

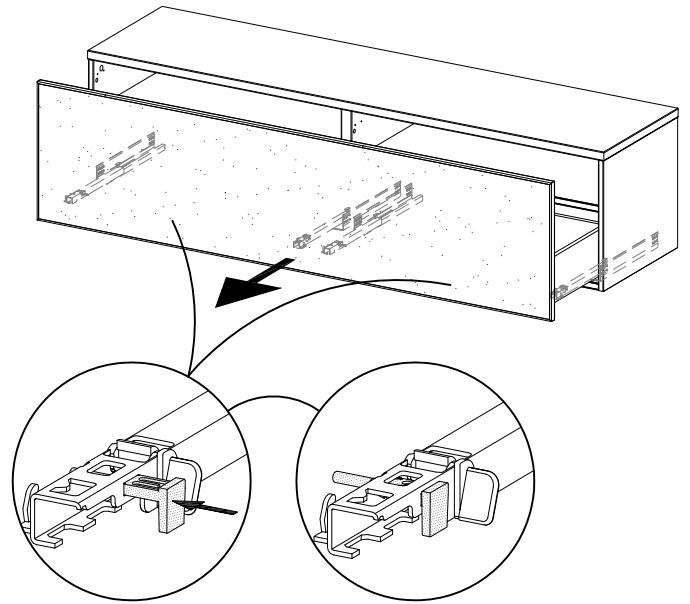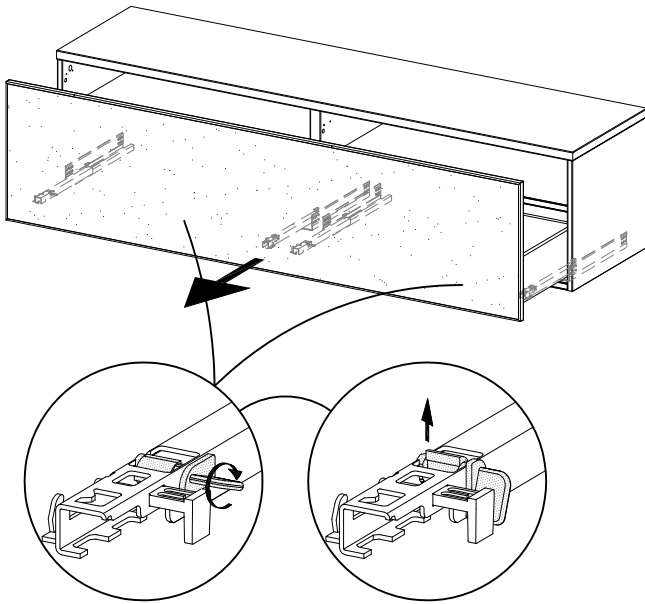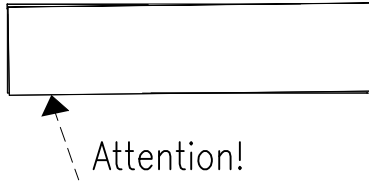

- DK Ved reklamation oplyses følgende:
- D Im Reklamationsfall, bitte folgendes erläutern:
- US In case of claims, please state the following:
- F En cas de réclamation, veuillez indiquer:
- NL Bij service volgene mededelen
- E En caso de reclamacion, indicar lo siguiente:
- P No caso de reclamação, por favor indique o seguinte:
- JP お気づきの点等ございましたら、以下の点をお知らせください。

Example!

