



Adelaide

Design by BoConcept


Samlevejledning - Assembly Instructions - Montageanleitung - Instructions d'assemblage - Instrucciones de montaje

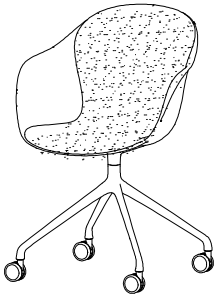


402-D044
2120 + 2280
87x60,0x58,4

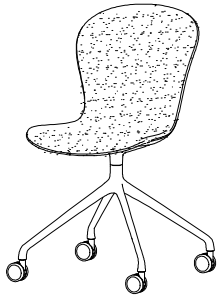


402-D045
2130 + 2280
87,0x45,0x58,4

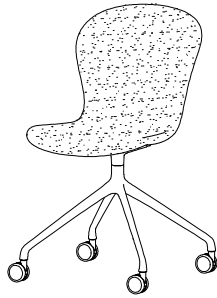


402-D046
2170 + 2280
87,5x45,5x57,5

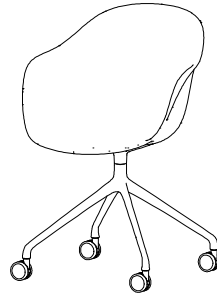

402-D047
2100 + 2280
87,0x60,0x58,4

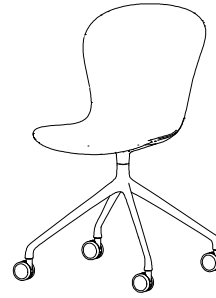


402-D048
2110 + 2280
87,0x45,0x58,4

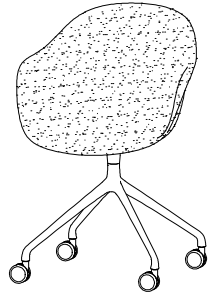

402-D049
2240 + 2280
87,5x61,0x58,4


Legbase 2280

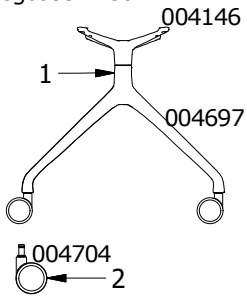

125kg/275lb




402-D046
Exempel

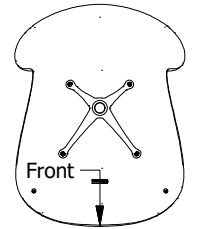

Beslag - Beschläge - Fittings - Set de montage

Fittingbag no: 937000002




A X 4
979900020
Ø10x7x1 mm

B X 4
970003125
M6x12 mm





C X 4
970001692
Allen key 4 mm

Sparepart box: 937000083

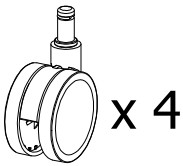


X 4

STEP 1: 50%
STEP 2: 100%

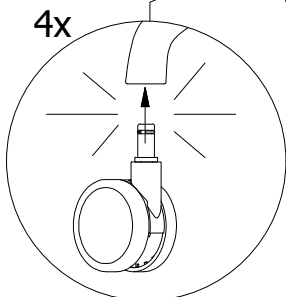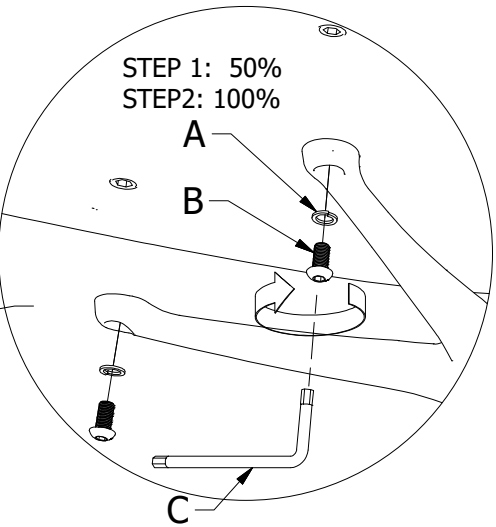

4x

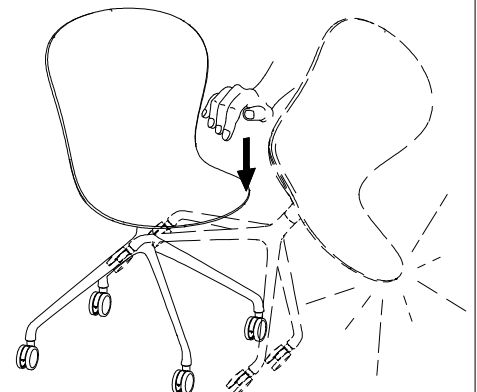

ATTENTION!