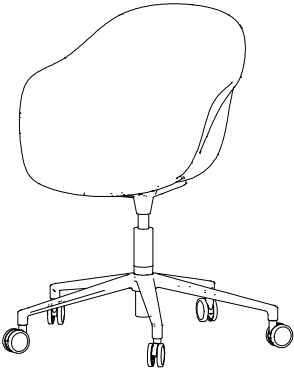
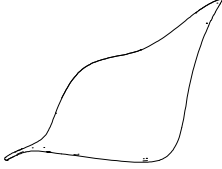
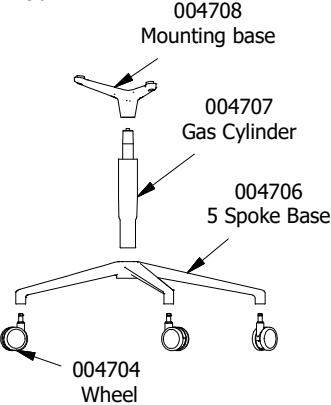



# Adelaide

Design by BoConcept

Samvejledning - Assembly Instructions - Montageanleitung - Instructions d'assemblage - Instrucciones de montaje

 <p>400-2290+402-2240 87/99x60x58 cm</p>	<p>Seat 2240</p> 	<p>Leg 2290</p> 	<p>Beslag - Beschläge Fittings - Set de montage No. 937000009</p> 
---	--	--	---

Sparepartbag:  
937000128

