

# Princeton

Design by BoConcept

Samvejledning - Assembly Instructions - Montageanleitung - Instructions d'assemblage - Instrucciones de montaje


Eksempelkombinationer - Example combinations - Beispielkombinationen - Exemples d' combinaisons - Ejemplos de combinaciones



402-D172


71/46x160x52 Max 275kg.

400-2430

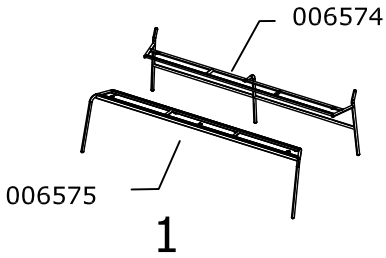

1

402-2550

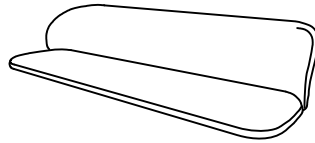

2

sparepart bag 937000168 grey  
937000169 black



x 4



x 1

Beslag - Beschllge - Fittings - Set de montag  
Fitting bag 937000165



A x 10  
M6x18mm



B x 10  
D14 d6,5x1,5mm



C x 1  
4mm

FIG.  
1



A x 4



B x 4



C x 1

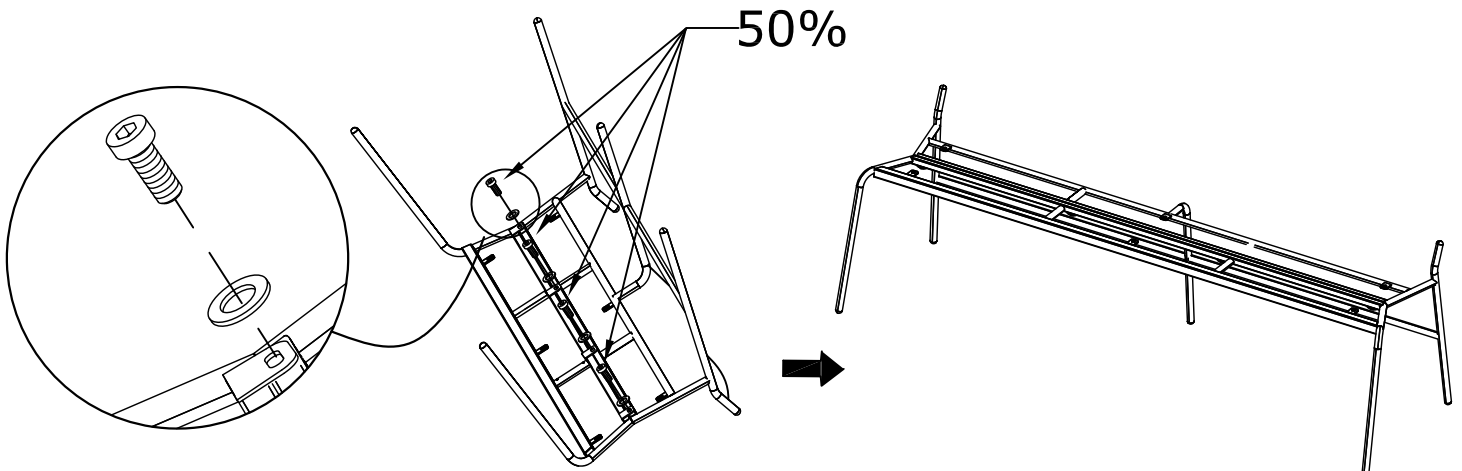
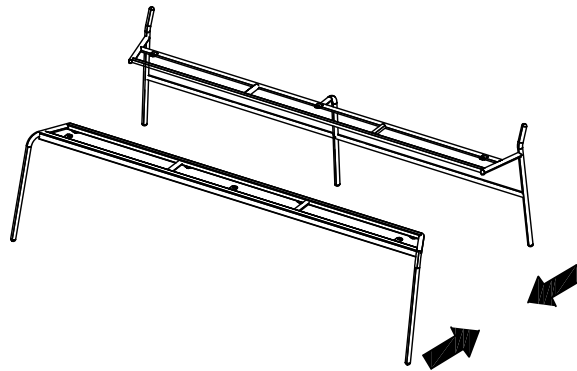


FIG.

2

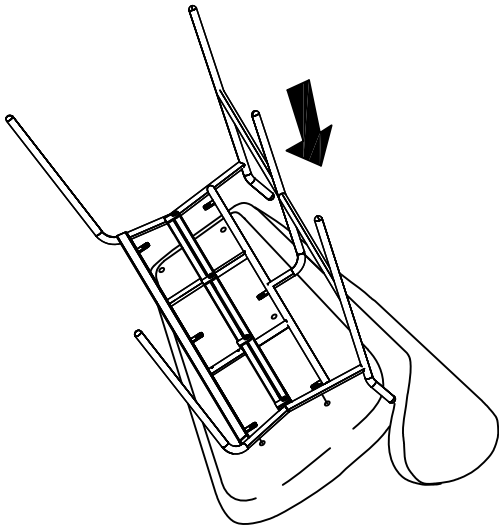


FIG.

3

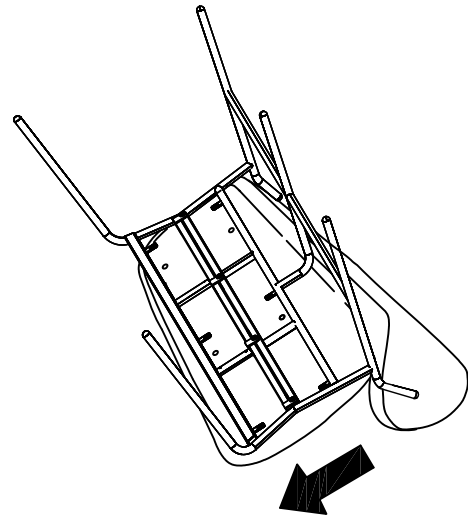


FIG.

4

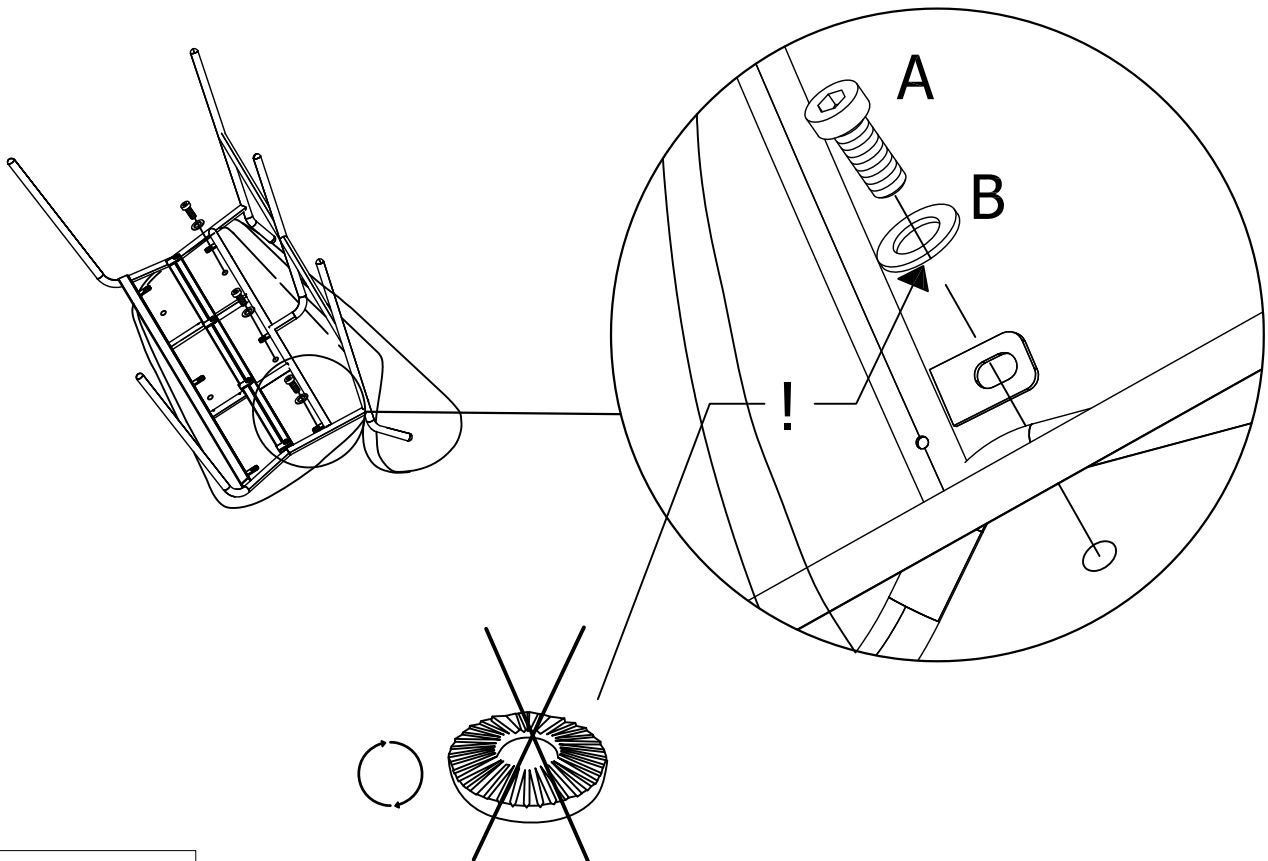





FIG.  
5

1 person icon x2

		
A x 3	B x 3	C x 1

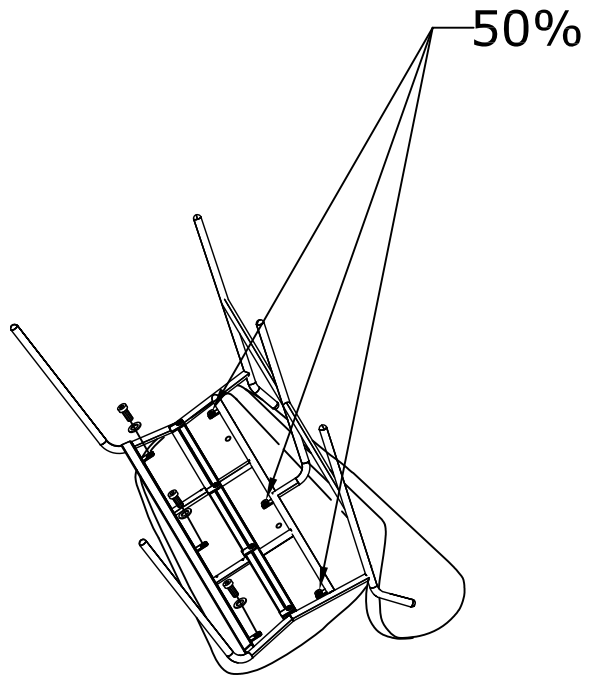


FIG.  
6

1 person icon x2

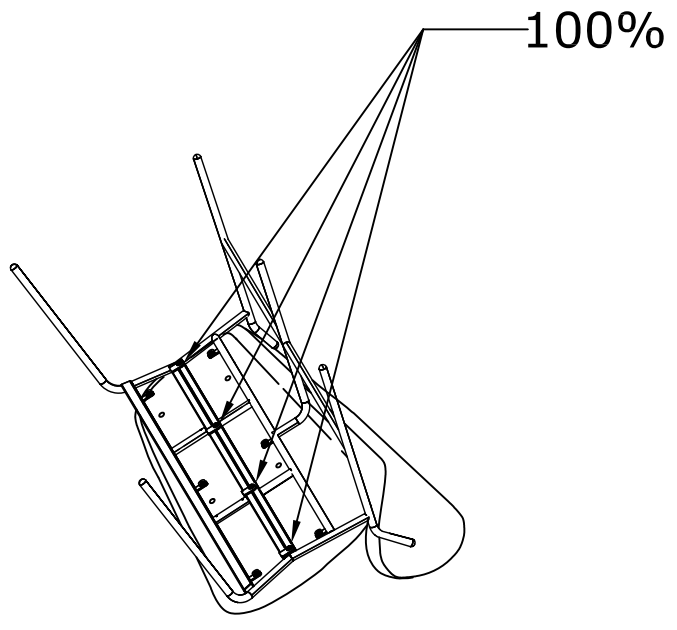


FIG.  
7

1x2

100%

100%

