


LUGO


Design by BoConcept

Samvejledning - Assembly Instructions - Montageanleitung - Instructions d'assemblage - Instrucciones de montaje

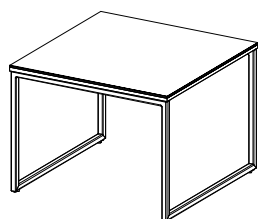


370-AM05

0860+1030
35,8x48x48 cm
Maks. 20 kg

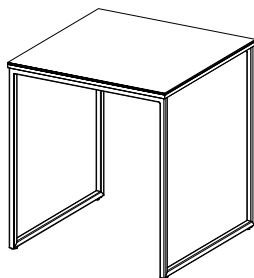

370-AM06

0870+1030
52,8x48x48 cm
Maks. 20 kg

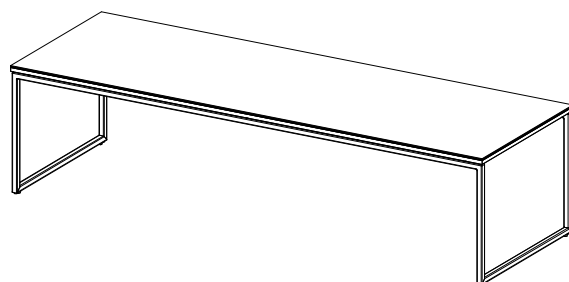

370-AM07

0880+1040
35,8x144x48 cm
Maks. 20 kg

Korpus - Carcase - Carcasse
0860-0870-0880

x2 2

x2 1

005406 (0860)
005409 (0870)
005408 (0880)

Beslag - Beschlage - Fittings - Set de montage

Fittingbag: 0860/870
937000045
Fittingbag: 0880
937000046


A x 4
979900239
Screw ma M6x55

B x 1
970001692
Allen key 4 mm


C x 4
979900238
Adjustable foot

D x 6/10
979900240
plastic pad

Verkstoj - Werkzeuge -
Tools - Outils

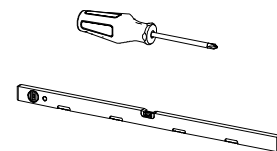


Tabletops: 1030
Fittingbag 1030:
932000024

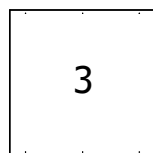

E x 6
970001680
Euro screw 4,2x9,5 mm

Tabletop: 1040
Fittingbag 1040: 932000025

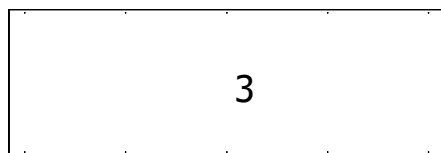


E x 10
970001680
Euro screw 4,2x9,5 mm

Sparepartbag:
937000096

C x 4
979900238

FIG. 1 **Example**

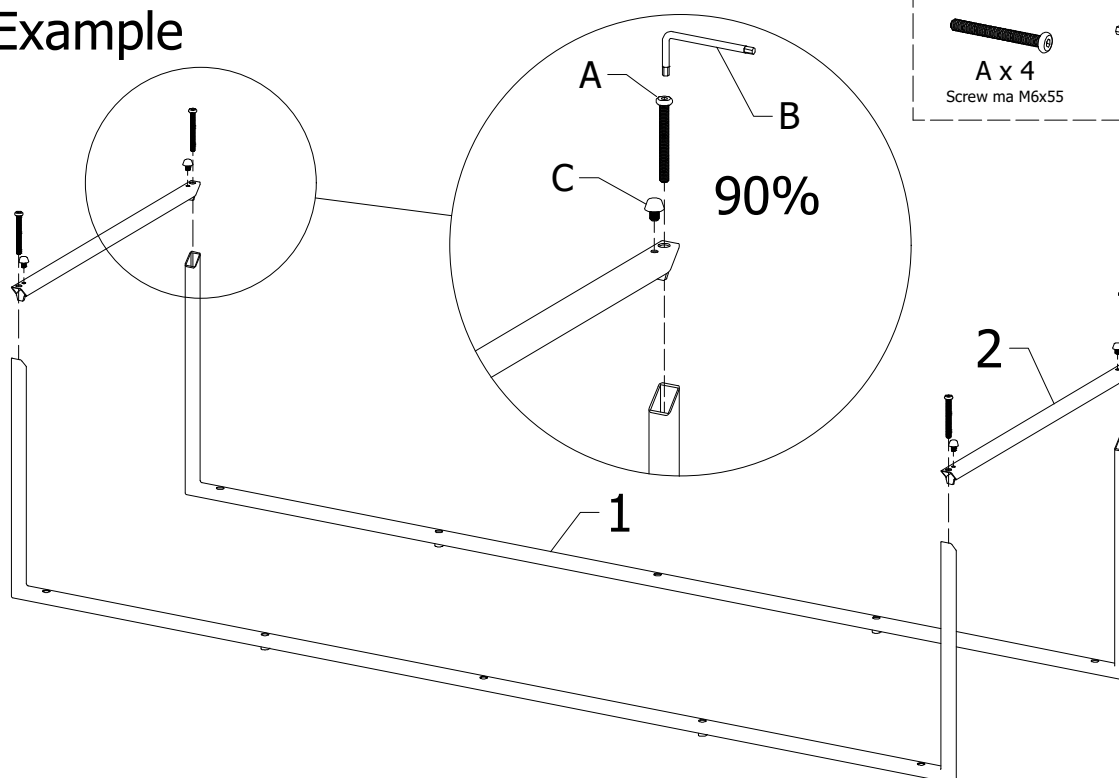

A x 4
Screw ma M6x55


B x 1
Allen key 4 mm

C x 4
Adjustable foot


FIG. 2

Efterspændes
Tighten screws fully after assembly
Nachziehen
Resserrer
Aanspannen
Reapretar
Serrare le viti dopo il montaggio
Reapertar

100%

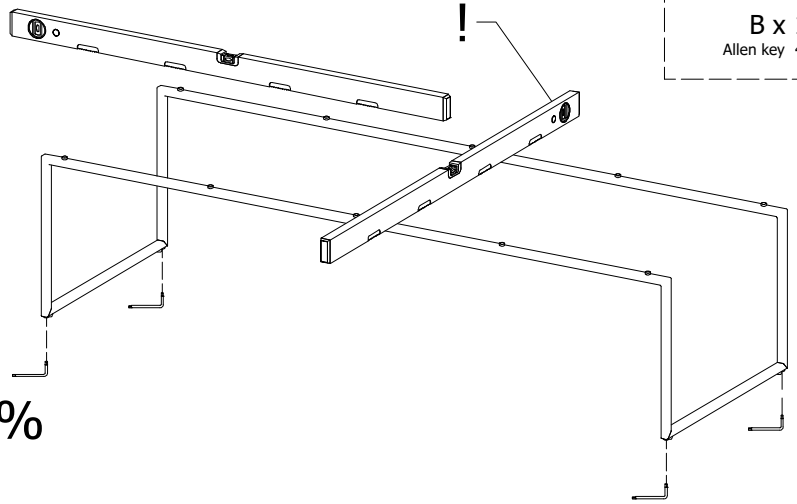

Example:
0880+1040 Wood
0880+1040 Ceramic

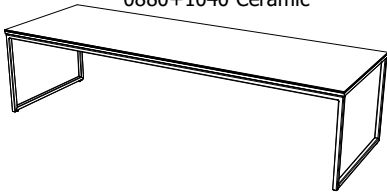


Occa 1040




Ex10
Euro screw 4,2x9,5 mm

Example:
0880+1040 Wood
0880+1040 Ceramic

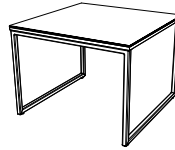

Example:
0880+1040 Wood
0880+1040 Ceramic

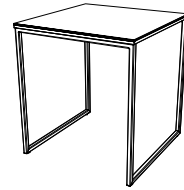


Occa 1030




Ex6
Euro screw 4,2x9,5 mm

FIG. 3

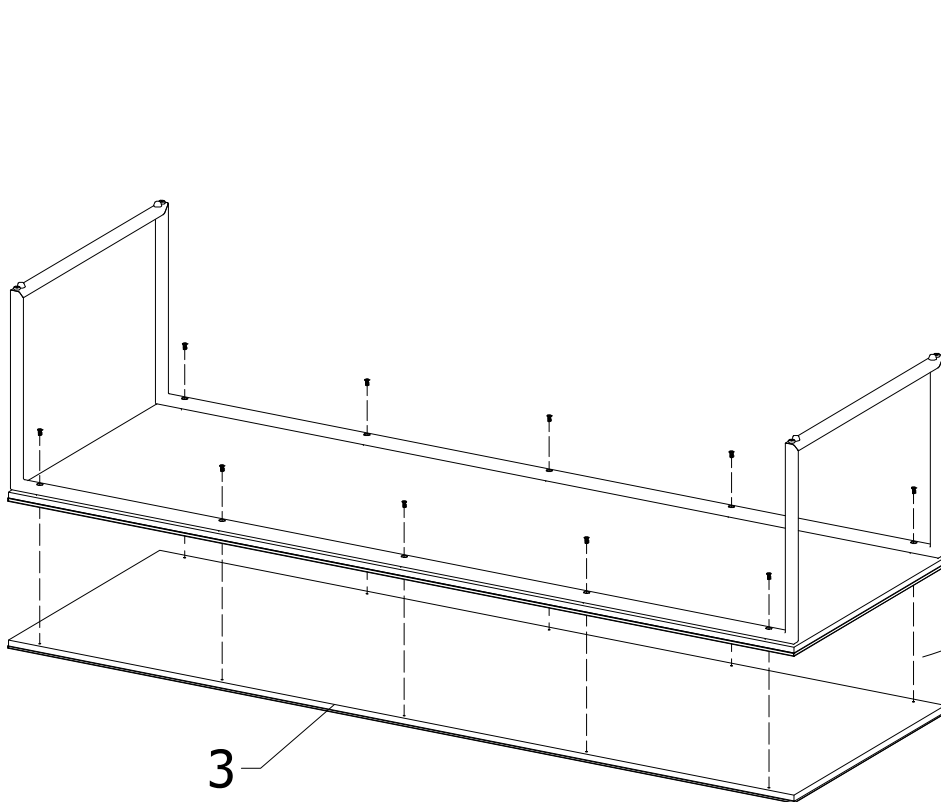


3

FIG. 4

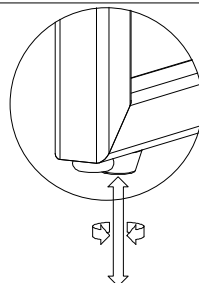

=



OK