
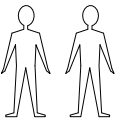


# Adelaide Outdoor


Design by BoConcept

Samvejledning - Assembly Instructions - Montageanleitung - Instructions d'assemblage - Instrucciones de montaje


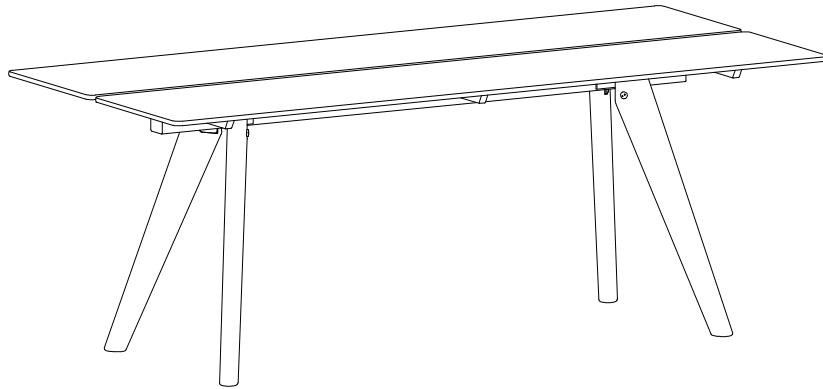


**300-1300**  
75x90x200 cm


Korpus - Korpus - Carcase - Carcasse  
Colli: 1301



Colli:1303



Colli: 1302

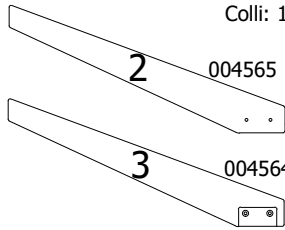

Beslag - Beschläge - Fittings - Set de montage

Colli:1303  
No. 937000006




**970001518**  
Hexagon socket Countersunk screw  
A x 6



**970001519**  
O-Ring Ø8xØ1,8  
B x 6



**979900036**  
Screw ph 4,0x12 mm  
C x 24



**970001477**  
Pignose M6x35  
D x 8






**970001478**  
Wrench  
E x 1







**970003166**  
Allen key 5mm,40x90mm  
F x 1

12x

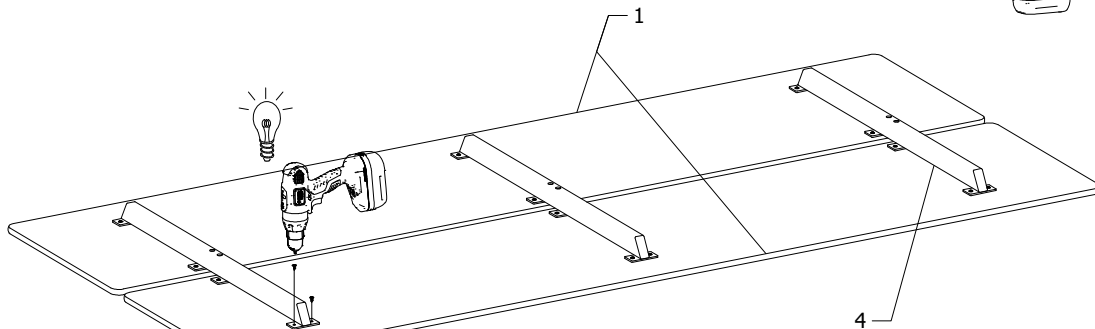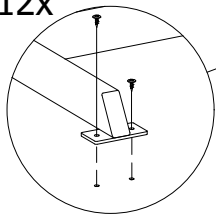

**979900036**  
C x 24

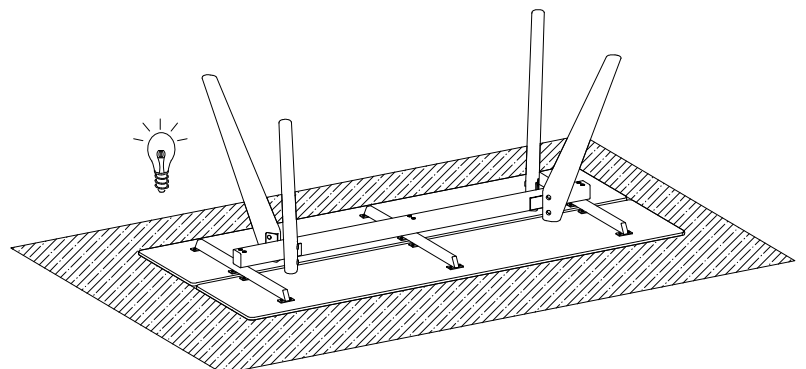

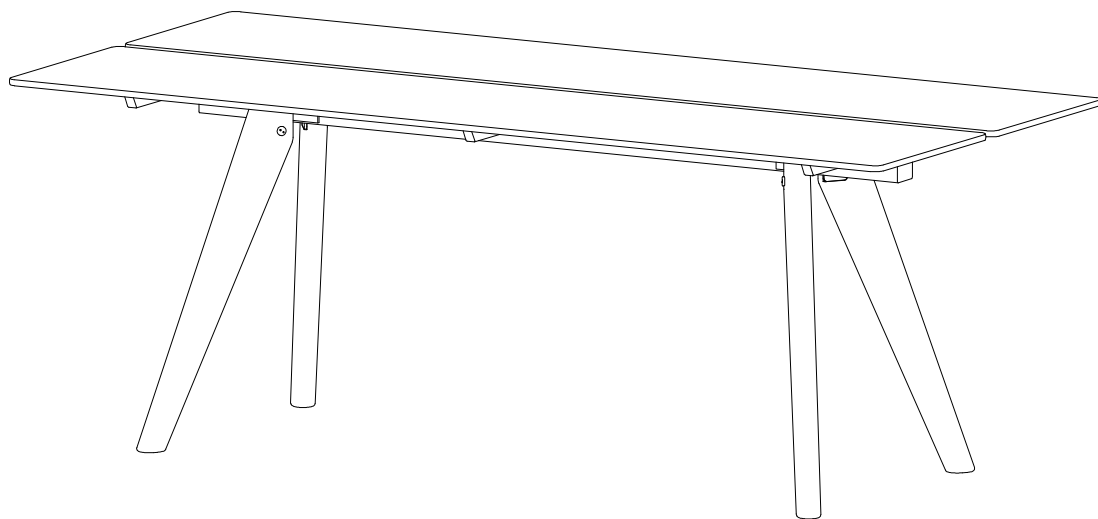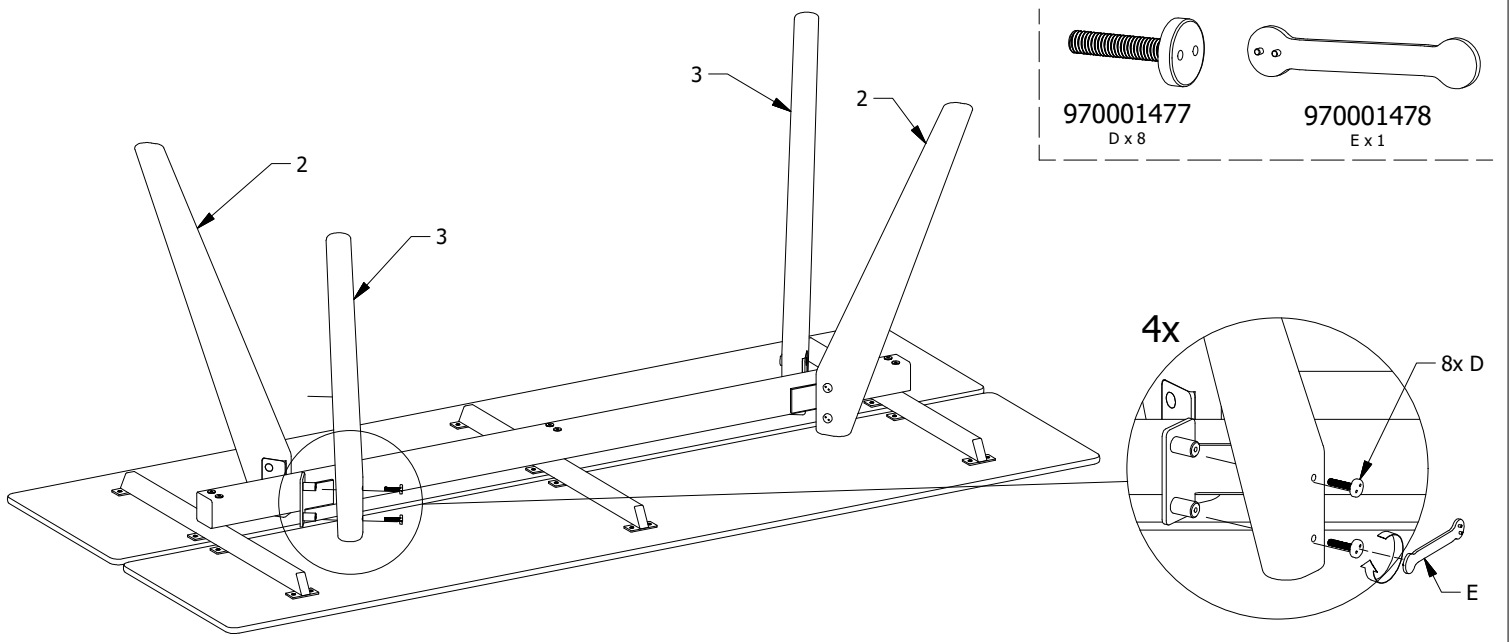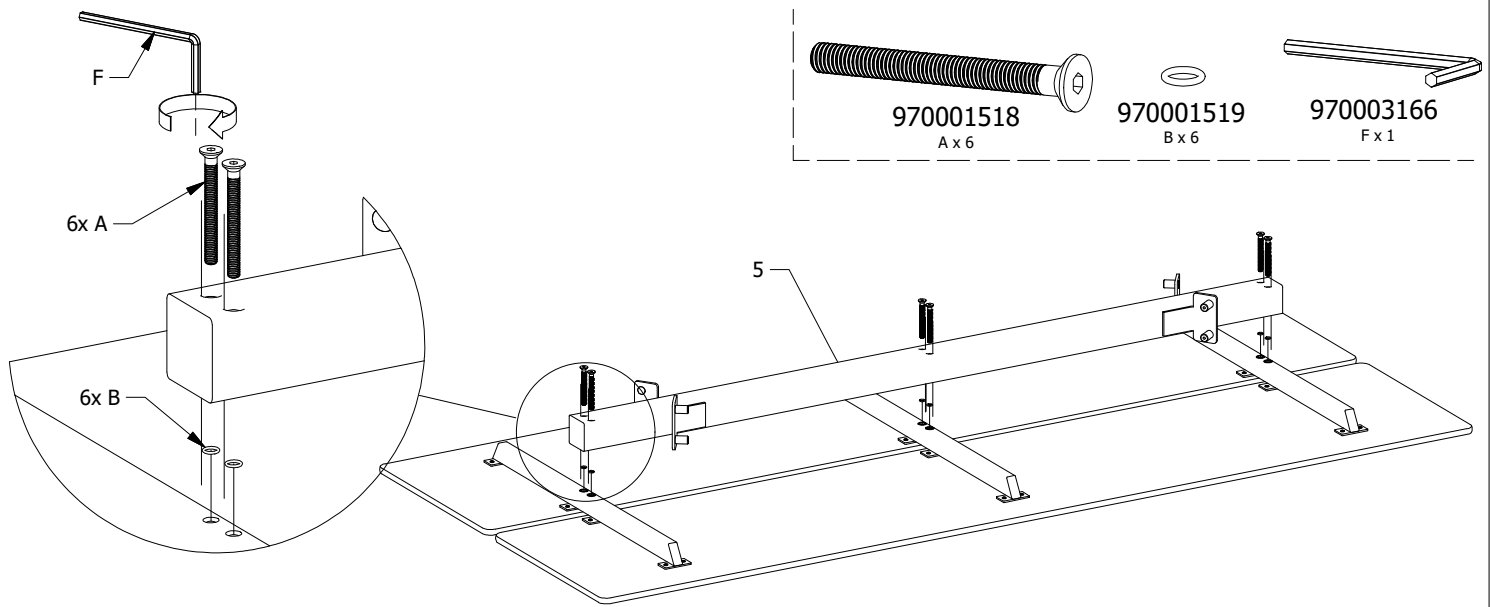

DK Ved reklamation oplyses følgende:  
 D Im Reklamationsfall, bitte folgendes erläutern:  
 US In case of claims, please state the following:  
 F En cas de réclamation, veuillez indiquer:  
 NL Bij service volgene mededelen  
 E En caso de reclamación, indicar lo siguiente:  
 P No caso de reclamação, por favor indique o seguinte:  
 JP お気づきの点等ございましたら、以下の点をお知らせください。

**Example!**

