


Adelaide Outdoor lounge chair


Design by BoConcept

Samvejledning - Assembly Instructions - Montageanleitung - Instructions d'assemblage - Instrucciones de montaje

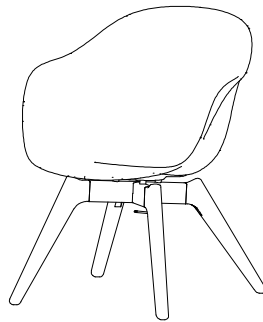


300-L002
73,0x60,0x61,0 cm


Korpus - Korpus - Carcase - Carcasse
402-2100

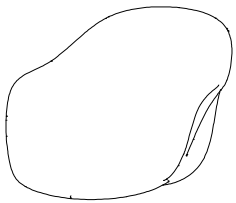

300-1610

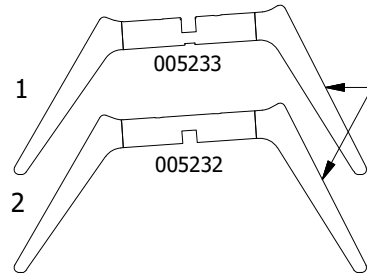

FRONT LEG !

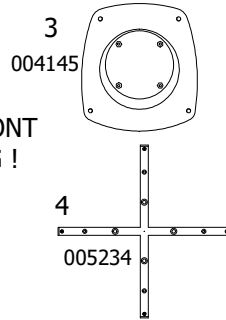

Beslag - Beschlage - Fittings - Set de montage
Colli 2 - no. 937000004

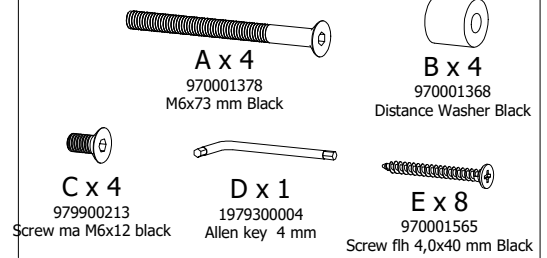


FIG. 1



C x 4
Screw M6x12 black

STEP 1: 50%
STEP 2: 100%

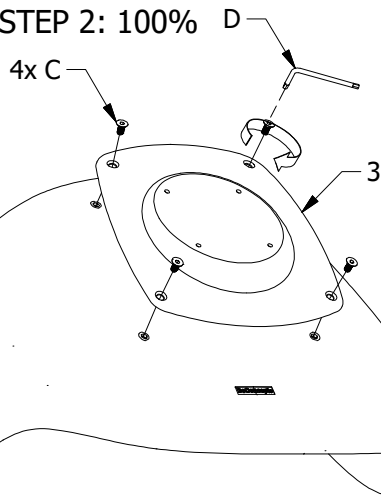



FIG. 2



A x 4
M6x73 mm Black




B x 4
Distance Washer Black

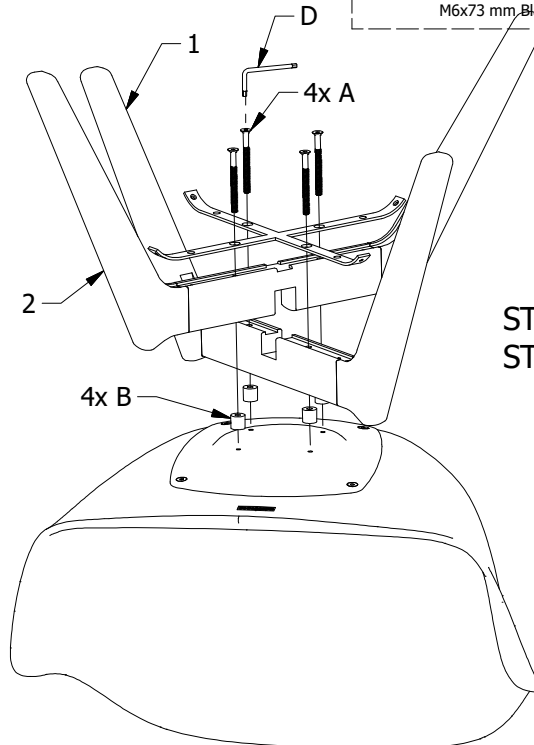


STEP 1: 50%
STEP 2: 100%

FIG.
3



E x 8
4x40mm

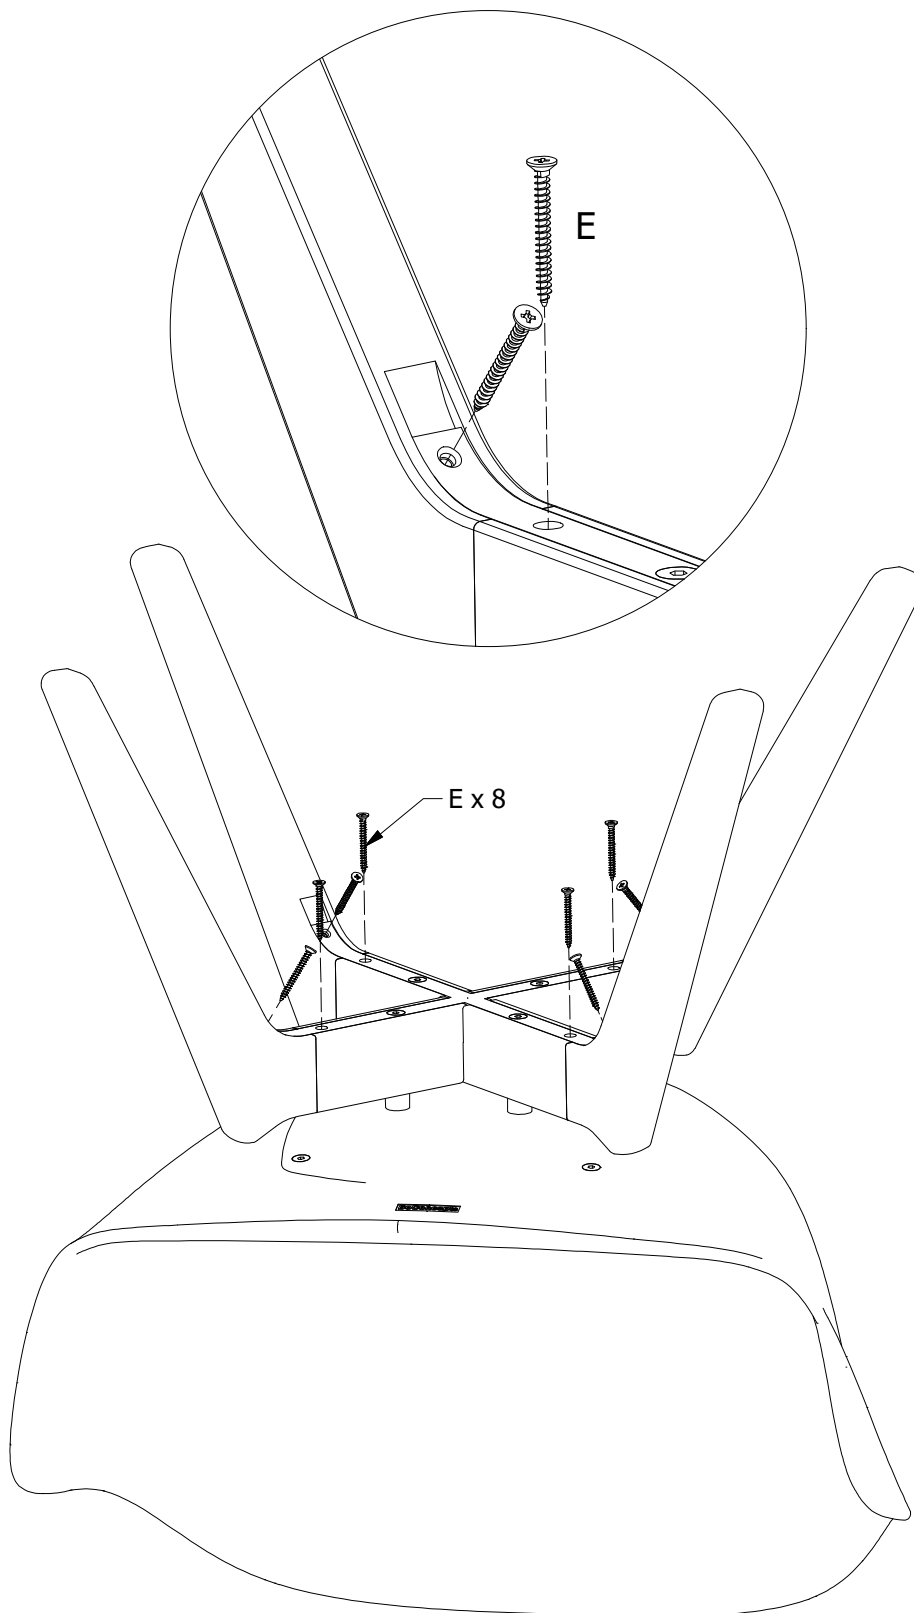

DK Ved reklamation oplyses følgende:

D Im Reklamationsfall, bitte folgendes erläutern:

US In case of claims, please state the following:

F En cas de réclamation, veuillez indiquer:

NL Bij service volgense mededelen


E En caso de reclamación, indicar lo siguiente:

P No caso de reclamação, por favor indique o seguinte:

JP お気づきの点等ございましたら、以下の点をお知らせください。

Example!

Korpus - Korpus - Carcase - Carcasse

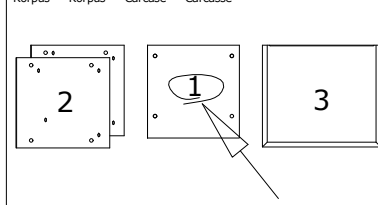

Beslag - Fittings - Beschläge - Set de Montage

