



Adelaide Outdoor dining chair

Design by BoConcept

Samvejledning - Assembly Instructions - Montageanleitung - Instructions d'assemblage - Instrucciones de montaje

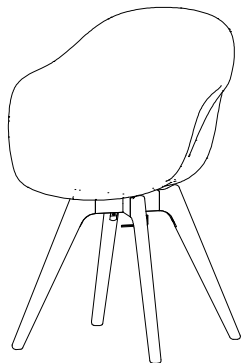


300-D001
85,8x60,0x57,5

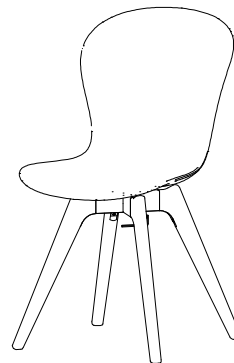

300-D002
85,8x45,0x57,5

Korpus - Korpus - Carcase - Carcasse
Colli 1

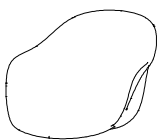


402-2100




402-2110

Colli 2 - 300-2191

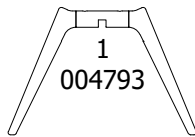

1
004793

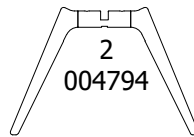

2
004794



3
004145



4
004795

Beslag - Beschläge - Fittings - Set de montage
No. 937000004



A x 4
M6x73 mm Black
970001378




B x 4
970001368
Distance Washer Black



C x 4
Screw ma M6x12 black
979900213




D x 1
970003040
Allen key 4x72x28mm



E x 8
970001565
Screw flh 4,0x40 mm Black


FIG. 1

STEP 1: 50%
STEP 2: 100%

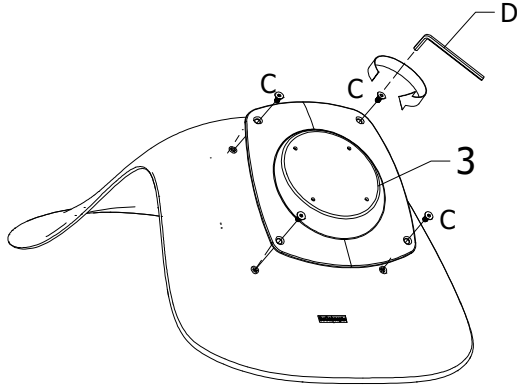


C x 4


FIG. 2




A x 4



B x 4

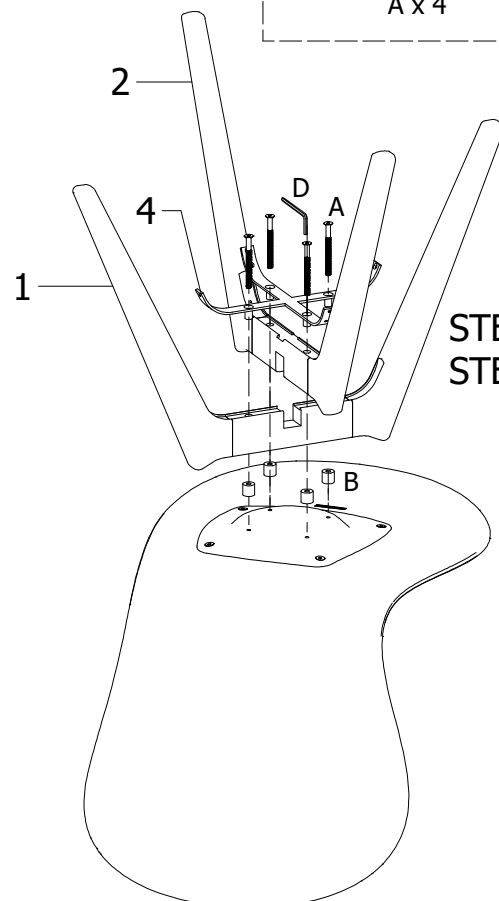

STEP 1: 50%
STEP 2: 100%

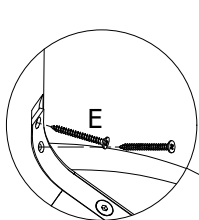

E x 8

125kg/275lb

