


Mezzo - Cenova

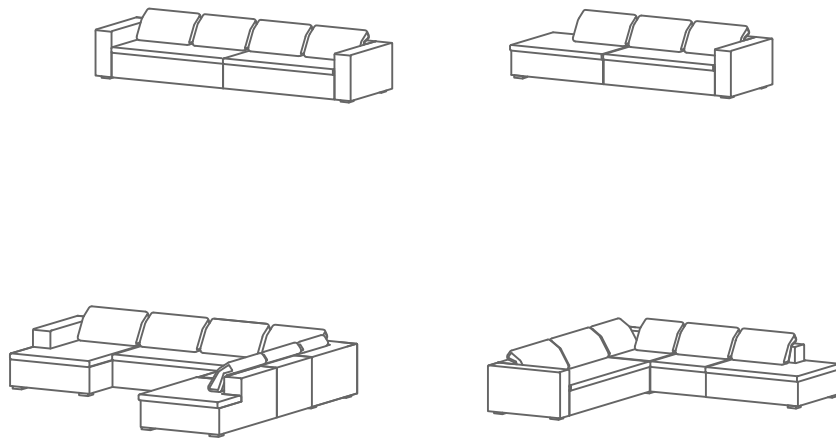

Design by Bo Concept


Samvejledning - Assembly Instructions - Montageanleitung - Instructions d'assemblage - Instrucciones de montaje



Example

Beslag - Beschläge - Fittings - Set de montage

932000232 (2 leg)
930000314 (3 leg)



F



B
M8x35



G
M8x85mm



H
M8




E



J

930000234 (1 leg) oversize model



F



B
M8x35



K
M8x60mm



E



J

930000315 (2pcs.)



K



M
M8x50mm



B
M8x35



H
M8



P
3,5x20mm



N
5mm

2152



A

612215200xx (2 leg)



C
M8x50mm



B
M8x35



D



E

FIG. 1





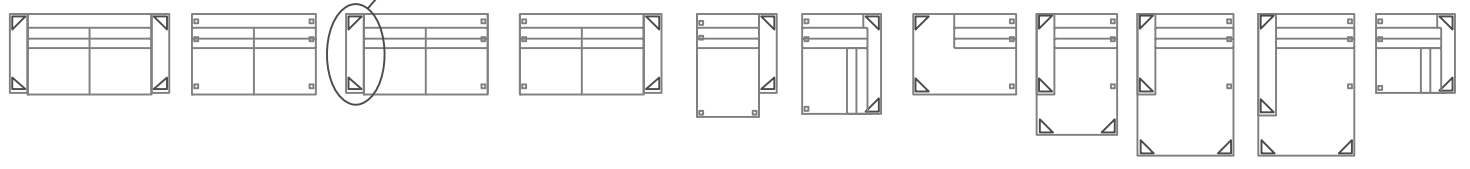


FIG. 2

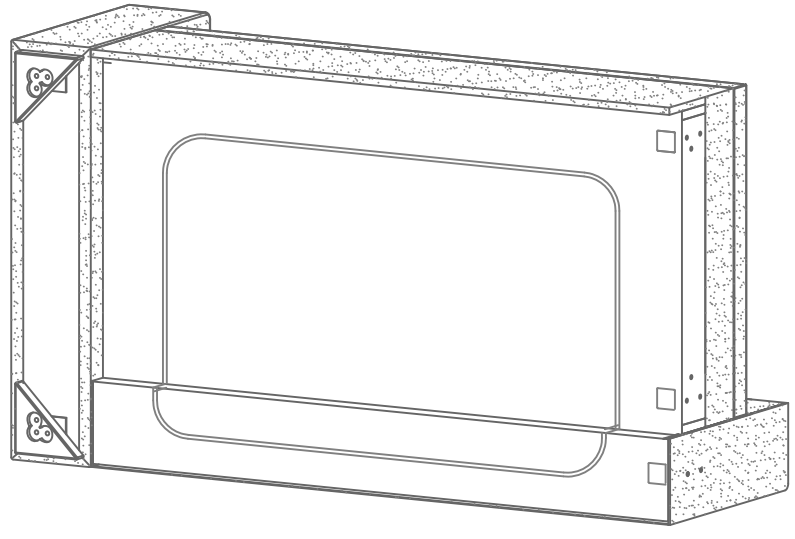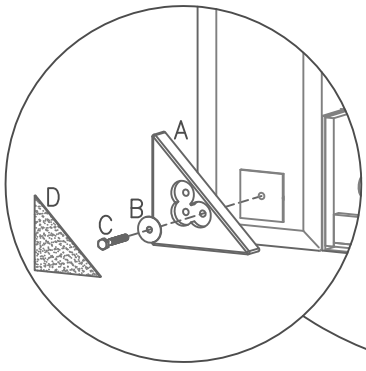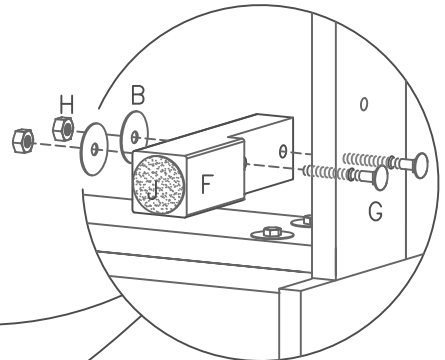

Attention!



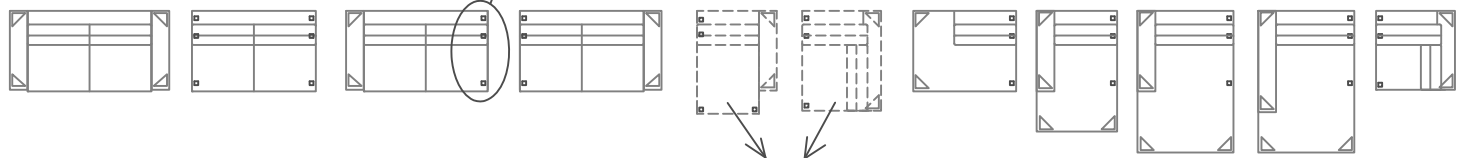


FIG. 3

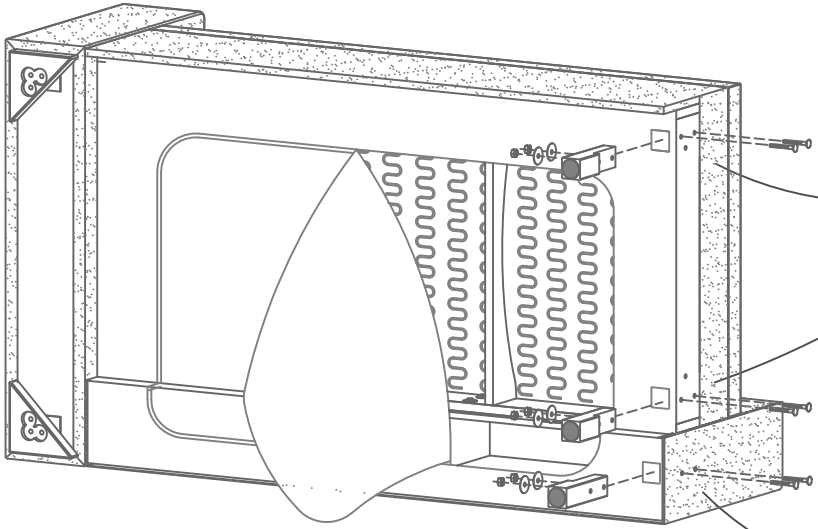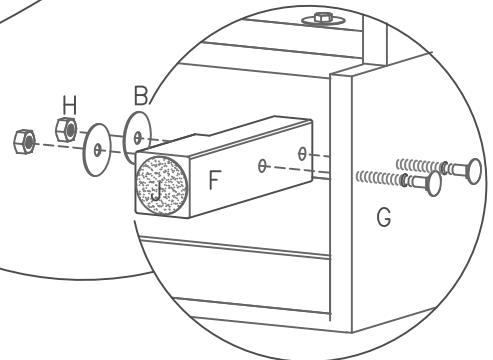