


Indivi sleeper


Design by BoConcept

Samvejledning - Assembly Instructions - Montageanleitung - Instructions d'assemblage - Instrucciones de montaje

Moduler - Modules - Module - Modules - Módulos

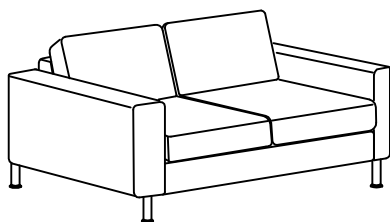

Attention!

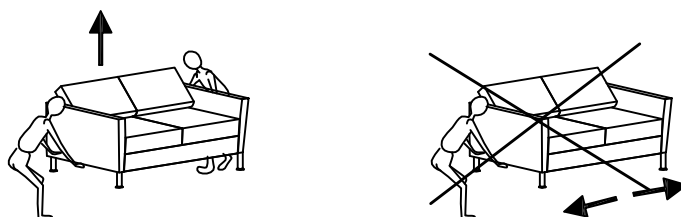

Monteringstilbehør - Fittings - Montagezubehör - Raccords d'assemblage - Accesorios de montaje

A	B	C	D
x4	x4	x4	x4
	M8x80mm		

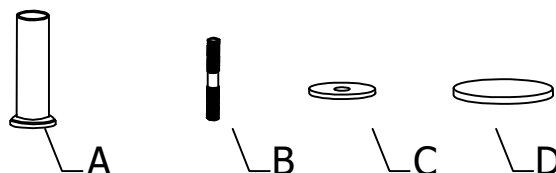


FIG. 1 **Example**




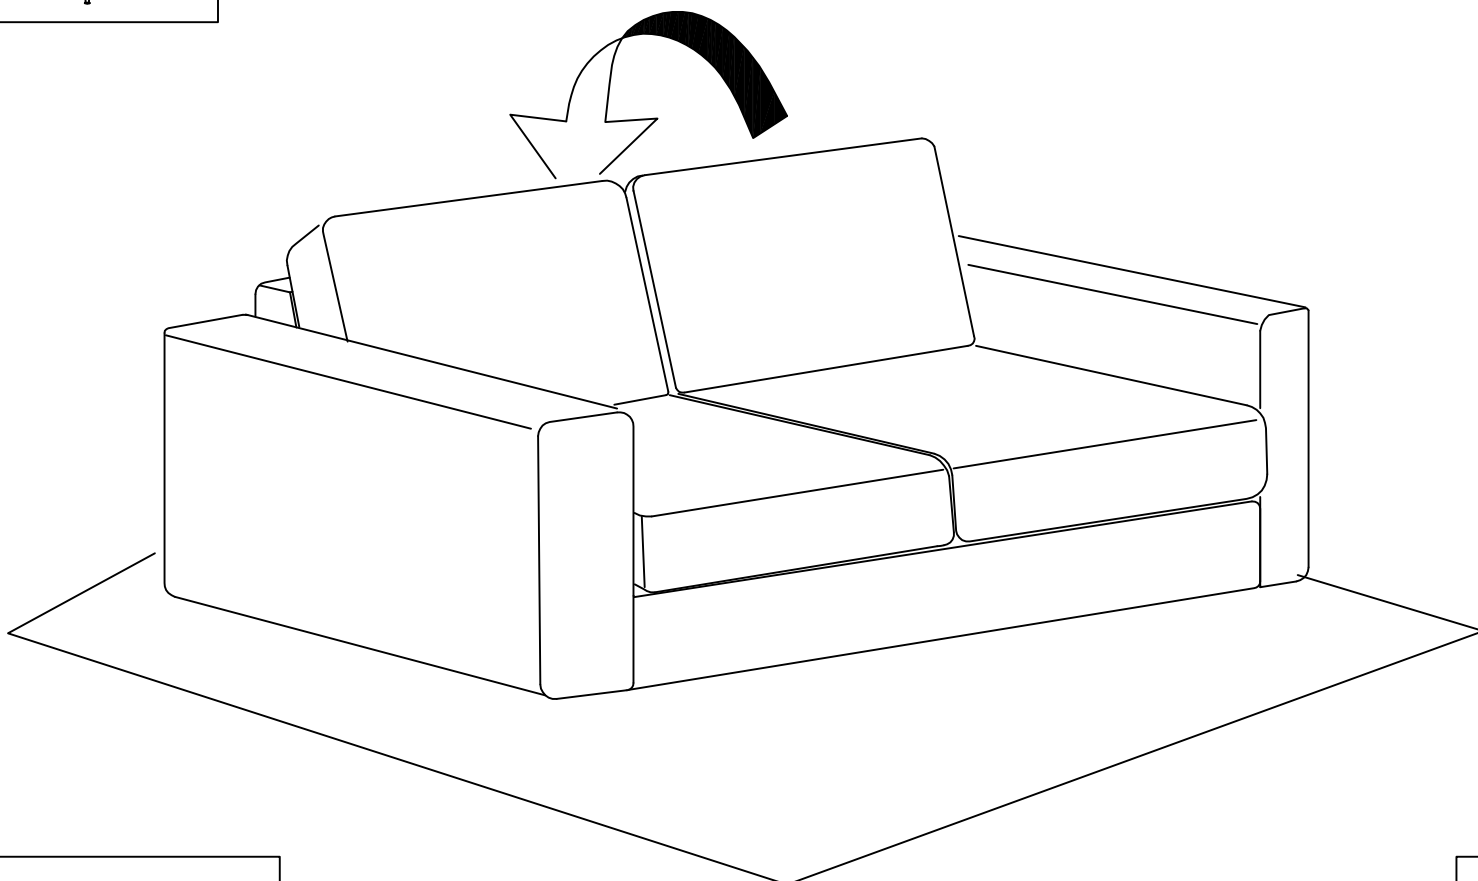


FIG. 2 Example



Ax4



Bx4



Cx4



Dx4

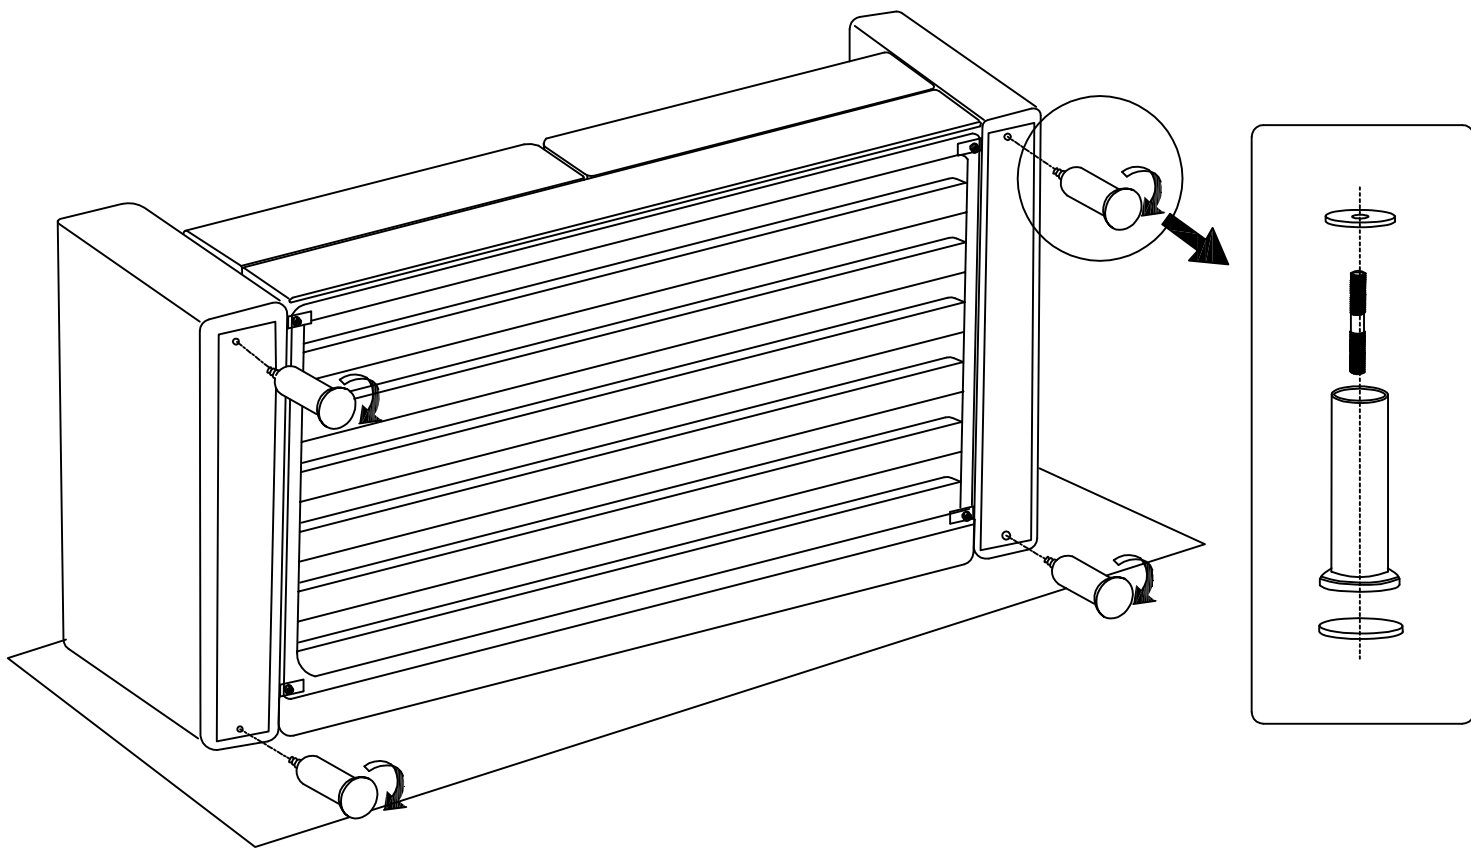


FIG. 3 Example


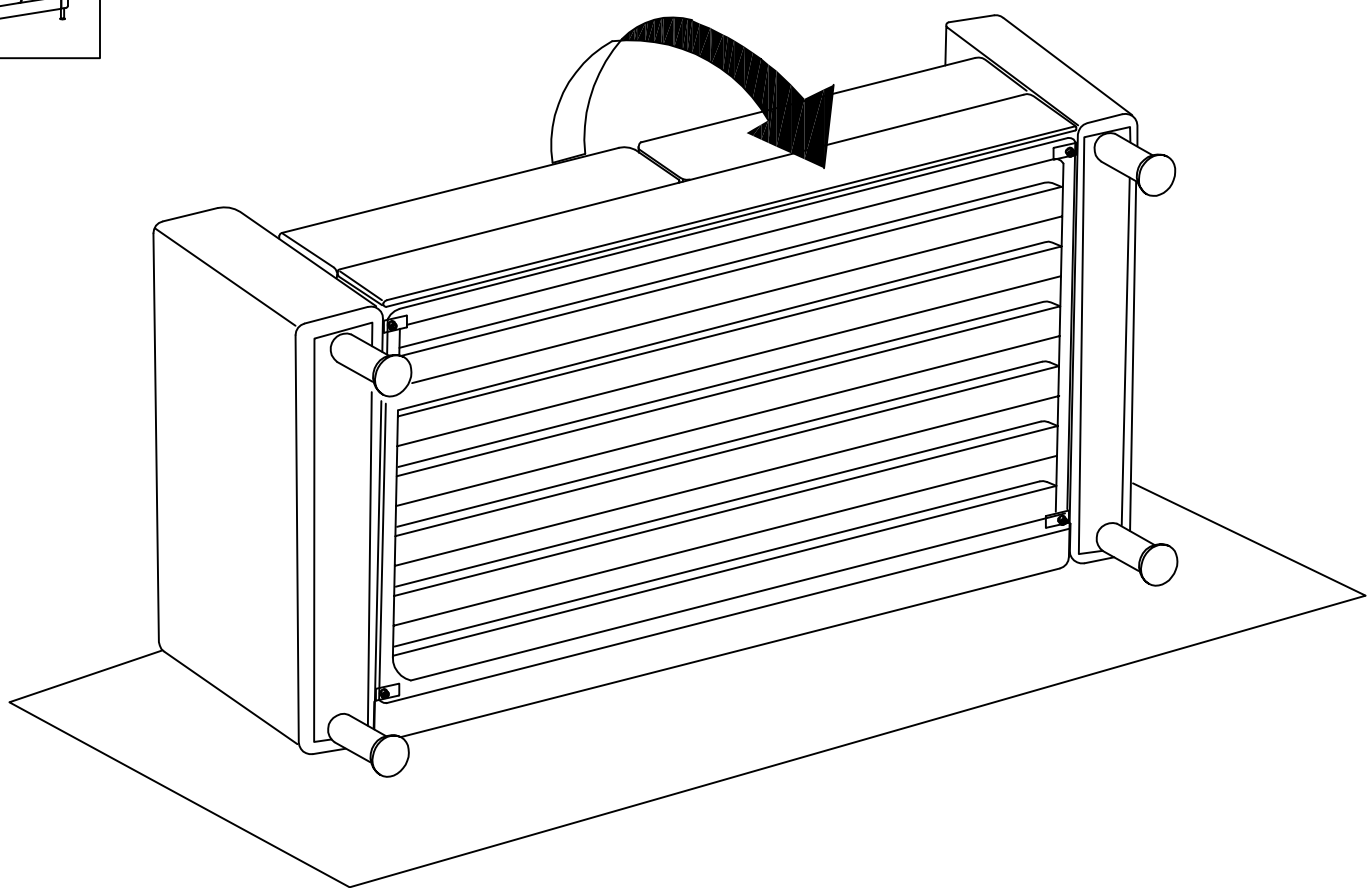


FIG.
4

Example

