



Indivi2 - Leg

Design by BoConcept


Samvejledning - Assembly Instructions - Montageanleitung - Instructions d'assemblage - Instrucciones de montaje




3000



3300

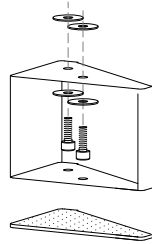


3600




3610




4070



4080

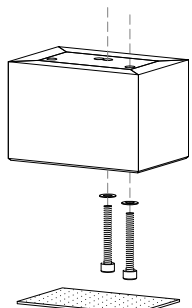


3800



3810



4001




4011



4040



4130

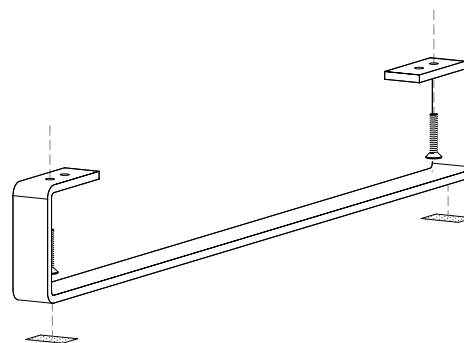

4010