
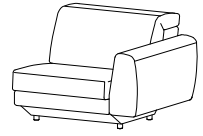
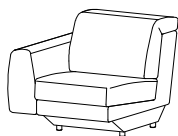
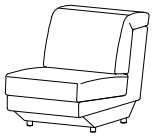
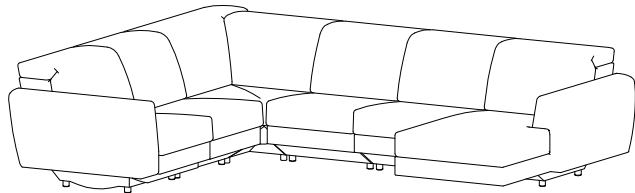
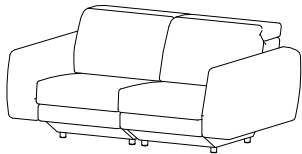
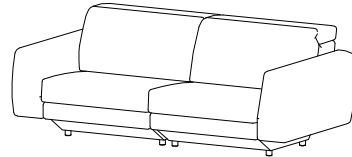
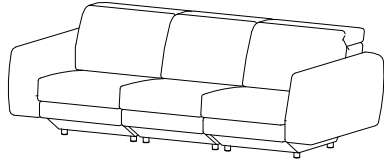
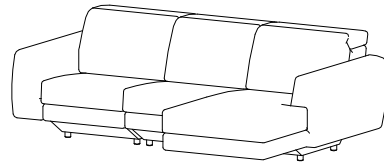


Madison

Design by BoConcept

Samvejledning - Assembly Instructions - Montageanleitung - Instructions d'assemblage - Instrucciones de montaje

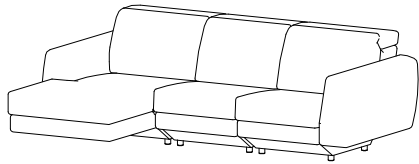

1000



1500

2002/2102/2202

2003/2103/2203

3002/3102/3202

3003/3103/3203

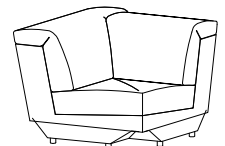

0100

4002

4003

4502

4503

6000

Beslag - Beschläge - Fittings - Set de montage 2102/2103/2202/2203/3102/3103/3202/3203



US



AUS




EU







UK

Attention!

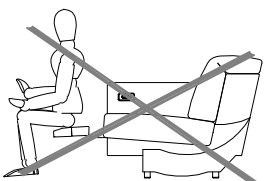



MAX

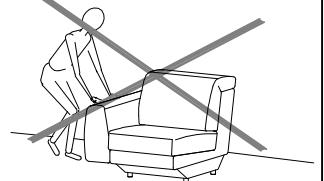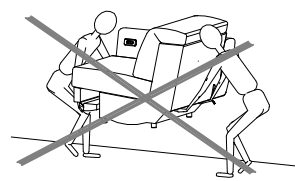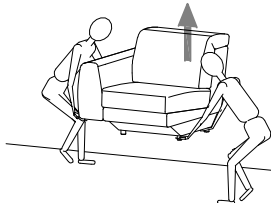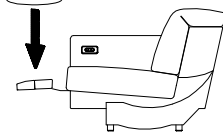








Leg 4280

Example

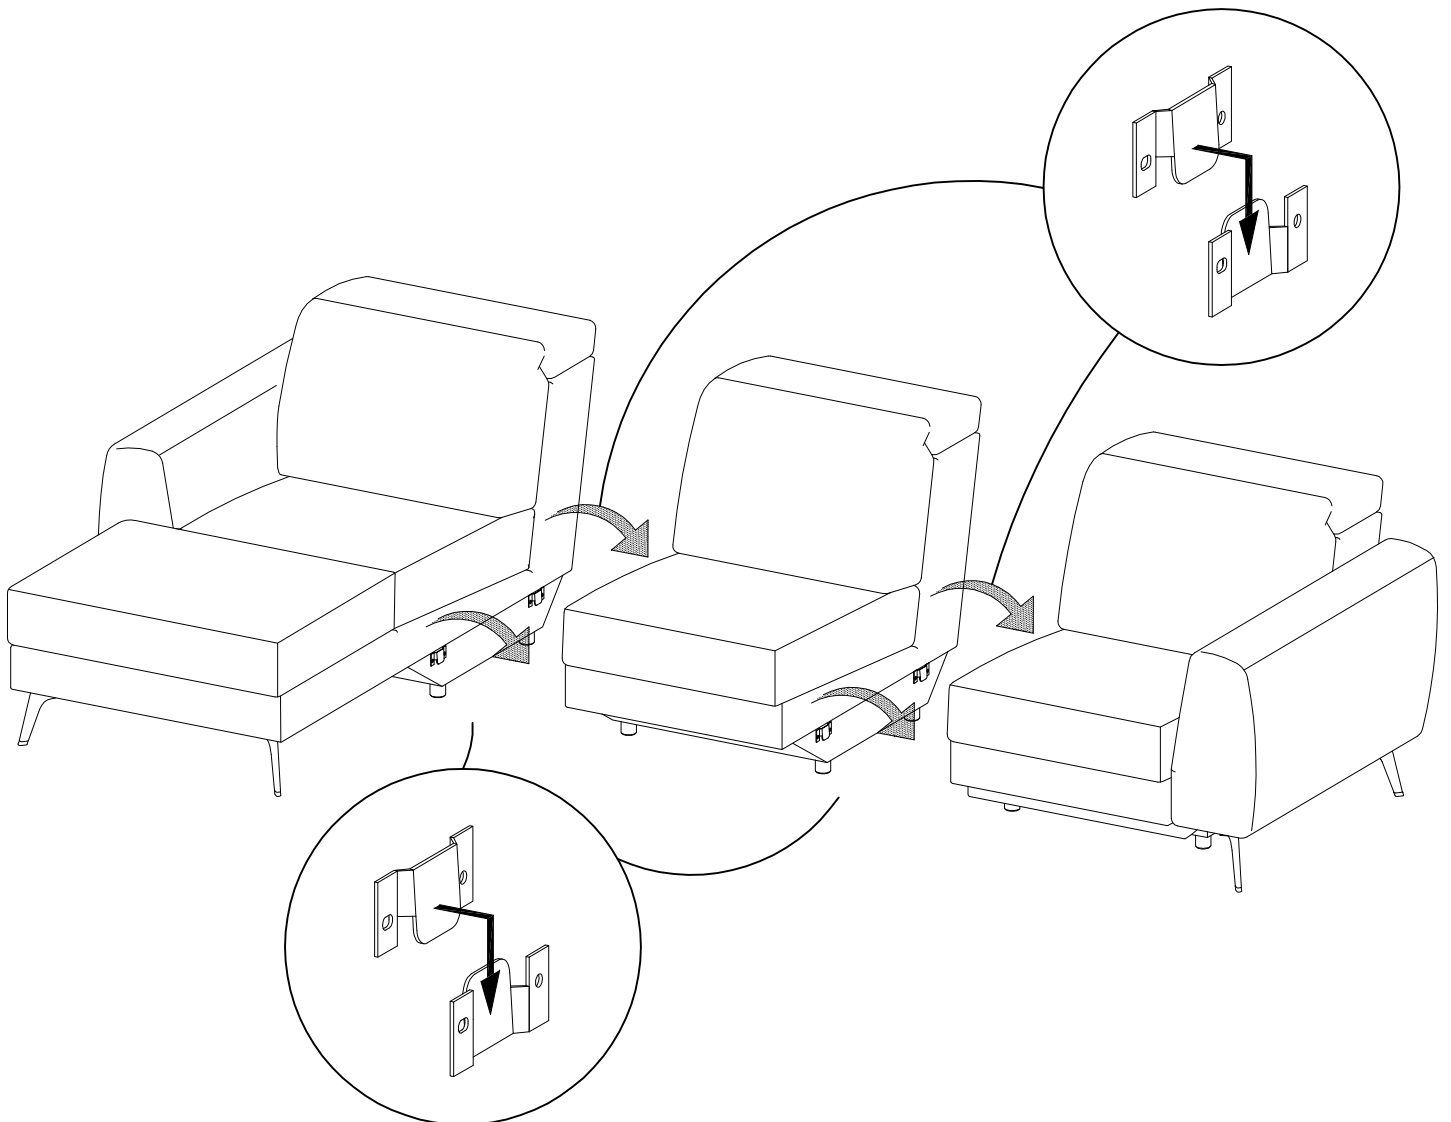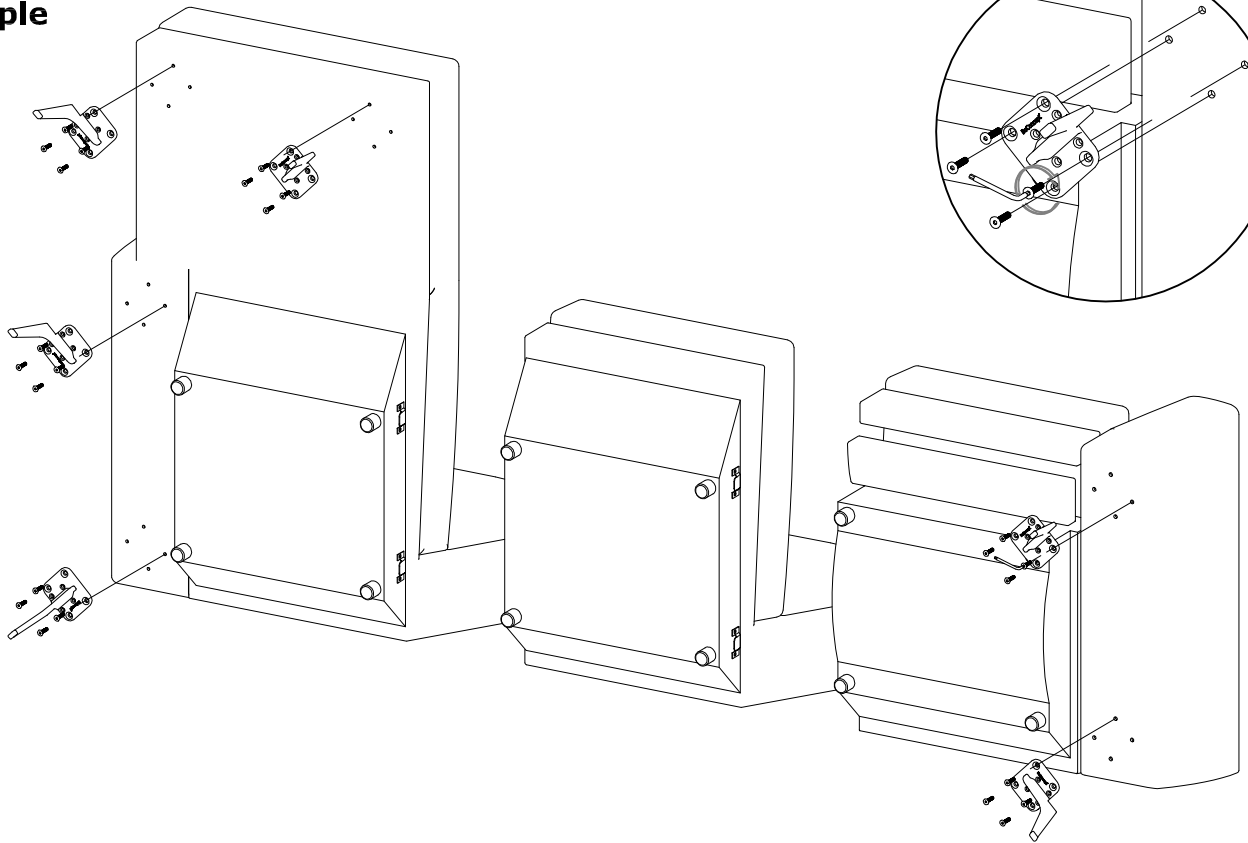




Example

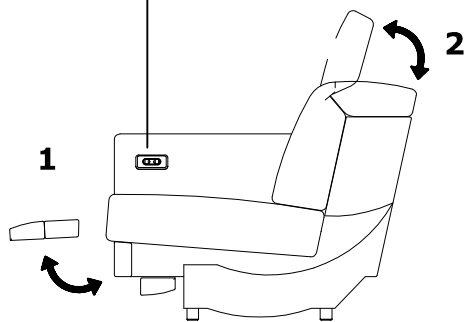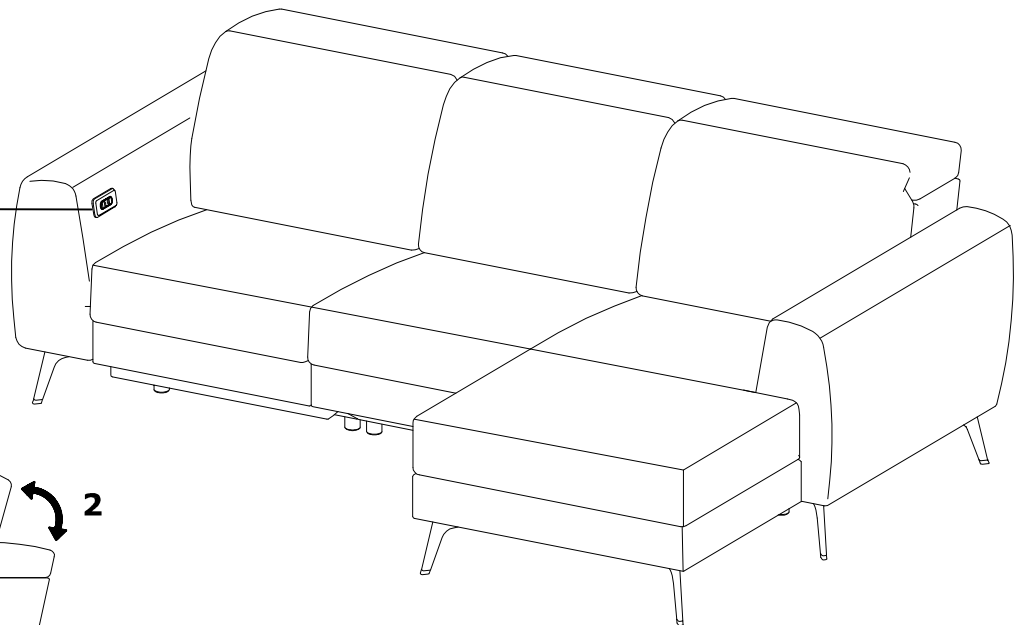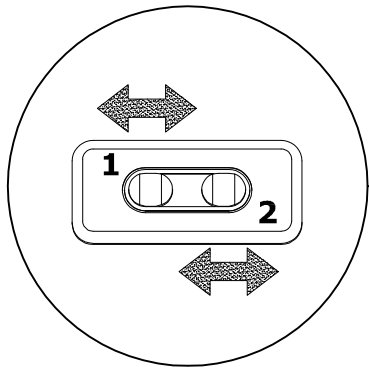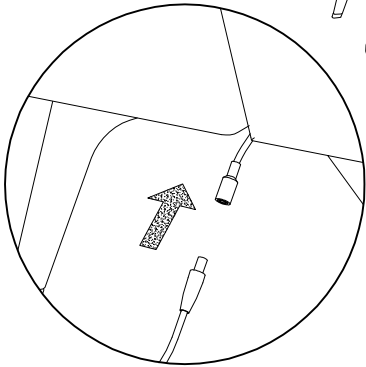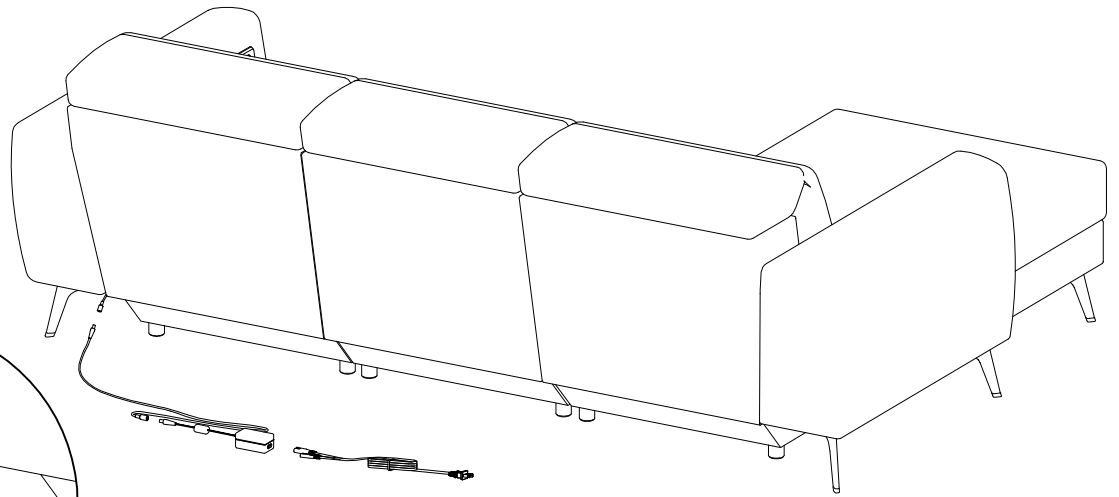

2102/2103/2202/2203
3102/3103/3202/3203

STEP 1

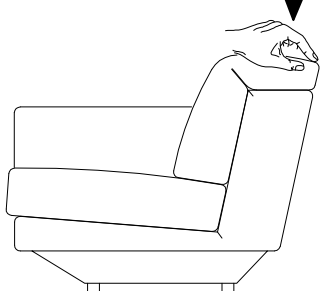

STEP 2

