
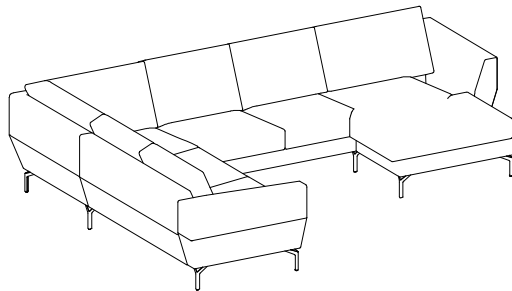
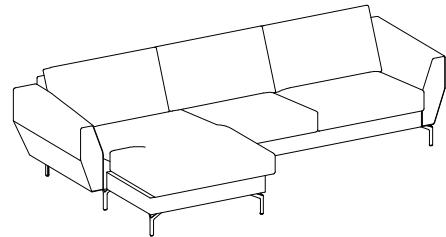
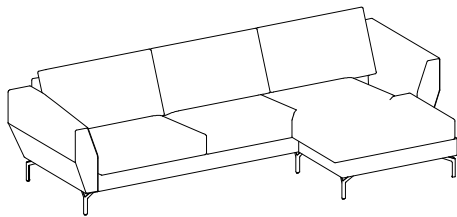
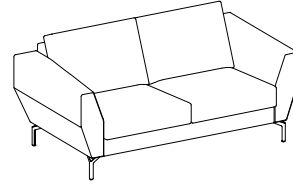


Nice

Design by BoConcept

Samlevejledning - Assembly Instructions - Montageanleitung - Instructions d'assemblage - Instrucciones de montaje

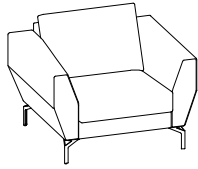


Examples


Fittings



A
004703
Sofa leg









B
970003056
M8x50

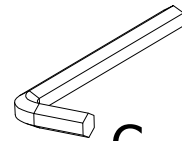

C
970000807
Allen key 6 mm

Leg info

SOLO Modues

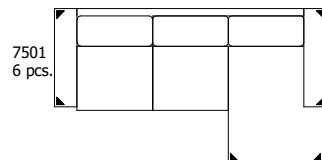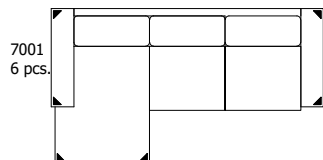

- Legs

Nice

Design by BoConcept

Samlevejledning - Assembly Instructions - Montageanleitung - Instructions d'assemblage - Instrucciones de montaje

BUILDING Modules

