

Adelaide lounge

Design by BoConcept

Samlevejledning - Assembly Instructions - Montageanleitung - Instructions d'assemblage - Instrucciones de montaje




406-1380

53,0x45,0x37,5




406-1390

53,0x45,0x37,5

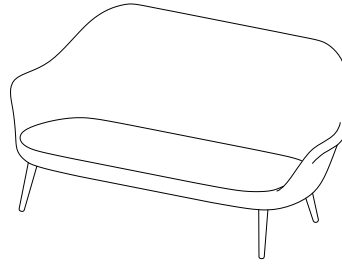

490-2001

163,0x84,0x86,0

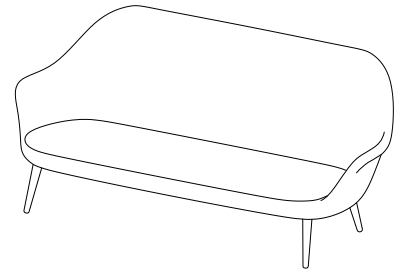


490-2501

198,0x84,0x86,0



406-1400

86,0x84,0x88,0

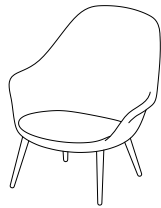

406-1410


86,0x84,0x88,0




A x 8
Screw ma M8x25




B x 1
Allen key 5 mm




406-1390



406-1390



406-1410




490-2001
490-2501




B x 1
Allen key 5 mm



C x 4
Screw ma M8x30



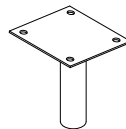


406-1380

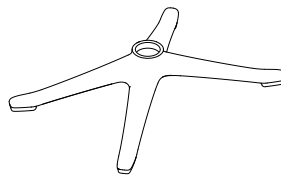



406-1400

EX. 406-1410

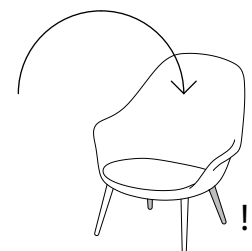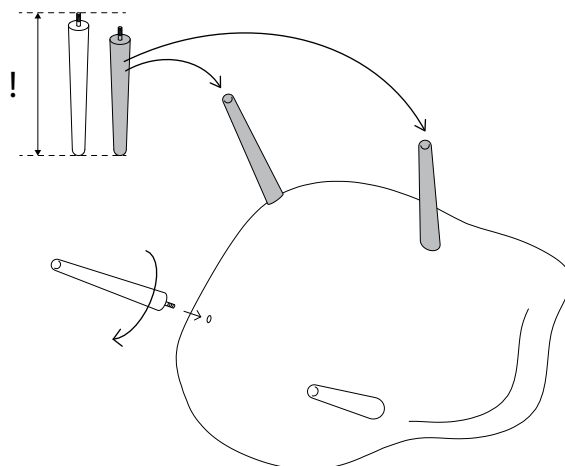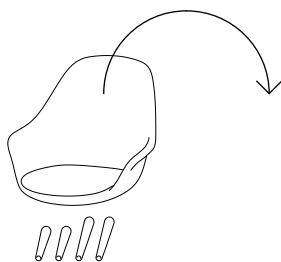



406-1380

Ax8 Bx1

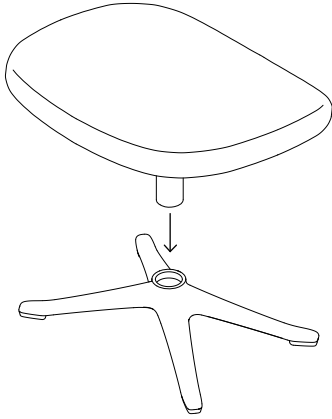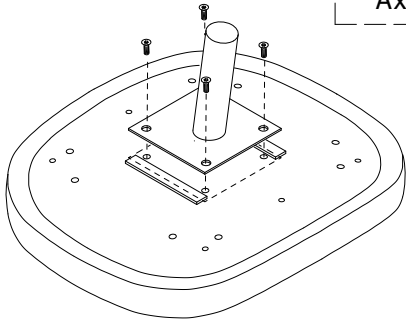

406-1390

Cx8 Bx1

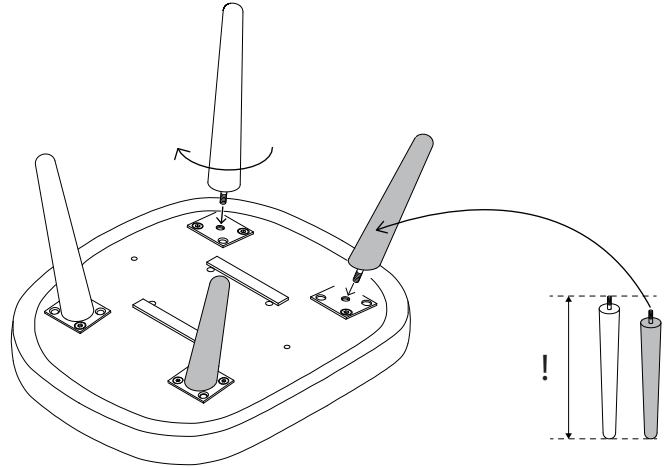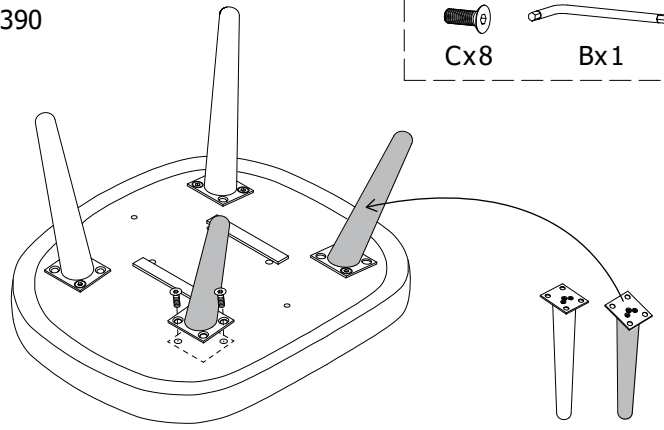

406-1400



- DK Ved reklamation oplyses følgende:
- D Im Reklamationsfall, bitte folgendes erläutern:
- US In case of claims, please state the following:
- F En cas de réclamation, veuillez indiquer:
- NL Bij service volgene mededelen
- E En caso de reclamación, indicar lo siguiente:
- P No caso de reclamação, por favor indique o seguinte:
- JP お気づきの点等ございましたら、以下の点をお知らせください。

Example!

