


# Adelaide


Design by BoConcept

Samvejledning - Assembly Instructions - Montageanleitung - Instructions d'assemblage - Instrucciones de montaje

Indoor/Outdoor

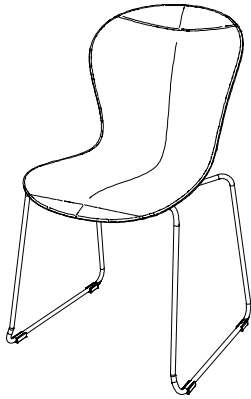


**402-D106**  
1x2350, 1x2110  
46,5/85,8x56,8x57,4 cm

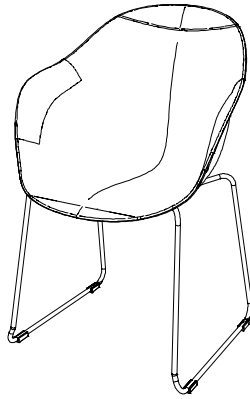


**402-D107**  
1x2350, 1x2100  
46,5/85,8x59,8x57,4 cm

Indoor

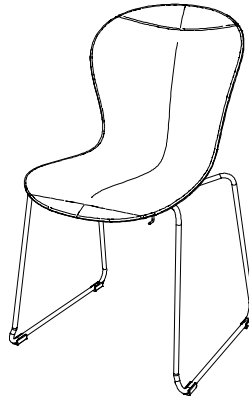


**402-D142**  
1x2360, 1x2110  
46,5/85,8x56,8x57,4 cm

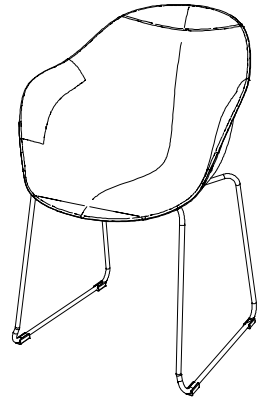

**402-D143**  
1x2360, 1x2100  
46,5/85,8x59,8x57,4 cm

400-2350  
400-2360

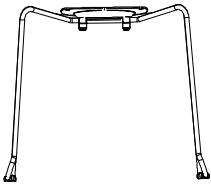


1

402-2110



2

402-2100

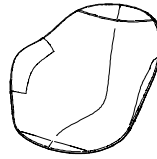


2

Fittingbag nr:  
937000082 Black



**Ax4**  
Screw m6x12 black  
979900213




**Bx1**  
Allen key 4 mm  
970001692

Fittingbag nr:  
937000071 White




**Ax4**  
Screw m6x12 zinc  
970001661




**Bx1**  
Allen key 4 mm  
970001692

FIG.  
1

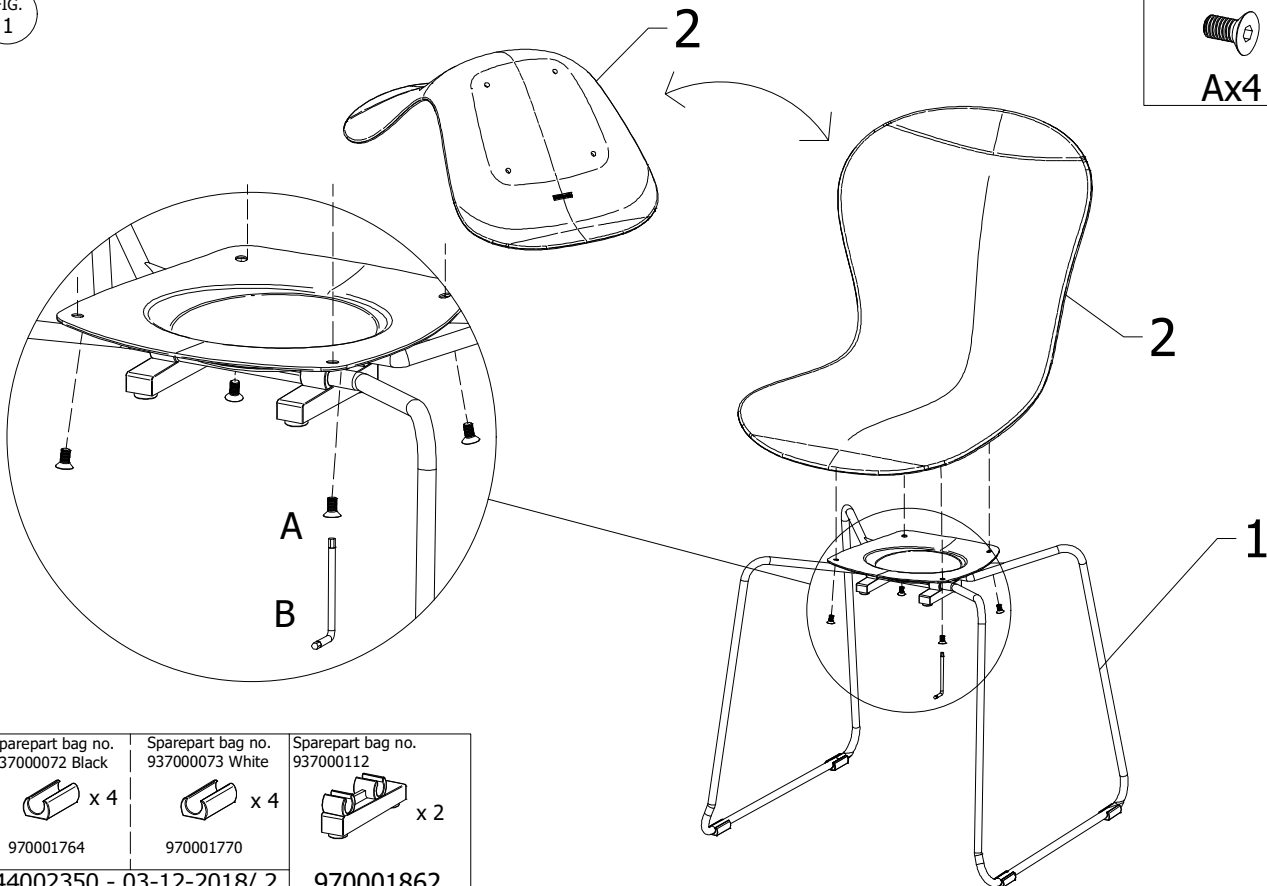

**Ax4**



**Bx1**

Sparepart bag no.  
937000072 Black



x 4

970001764

Sparepart bag no.  
937000073 White



x 4

970001770

Sparepart bag no.  
937000112



x 2

970001862