


# Indivi2

Design by BoConcept

Samvejledning - Assembly Instructions - Montageanleitung - Instructions d'assemblage - Instrucciones de montaje

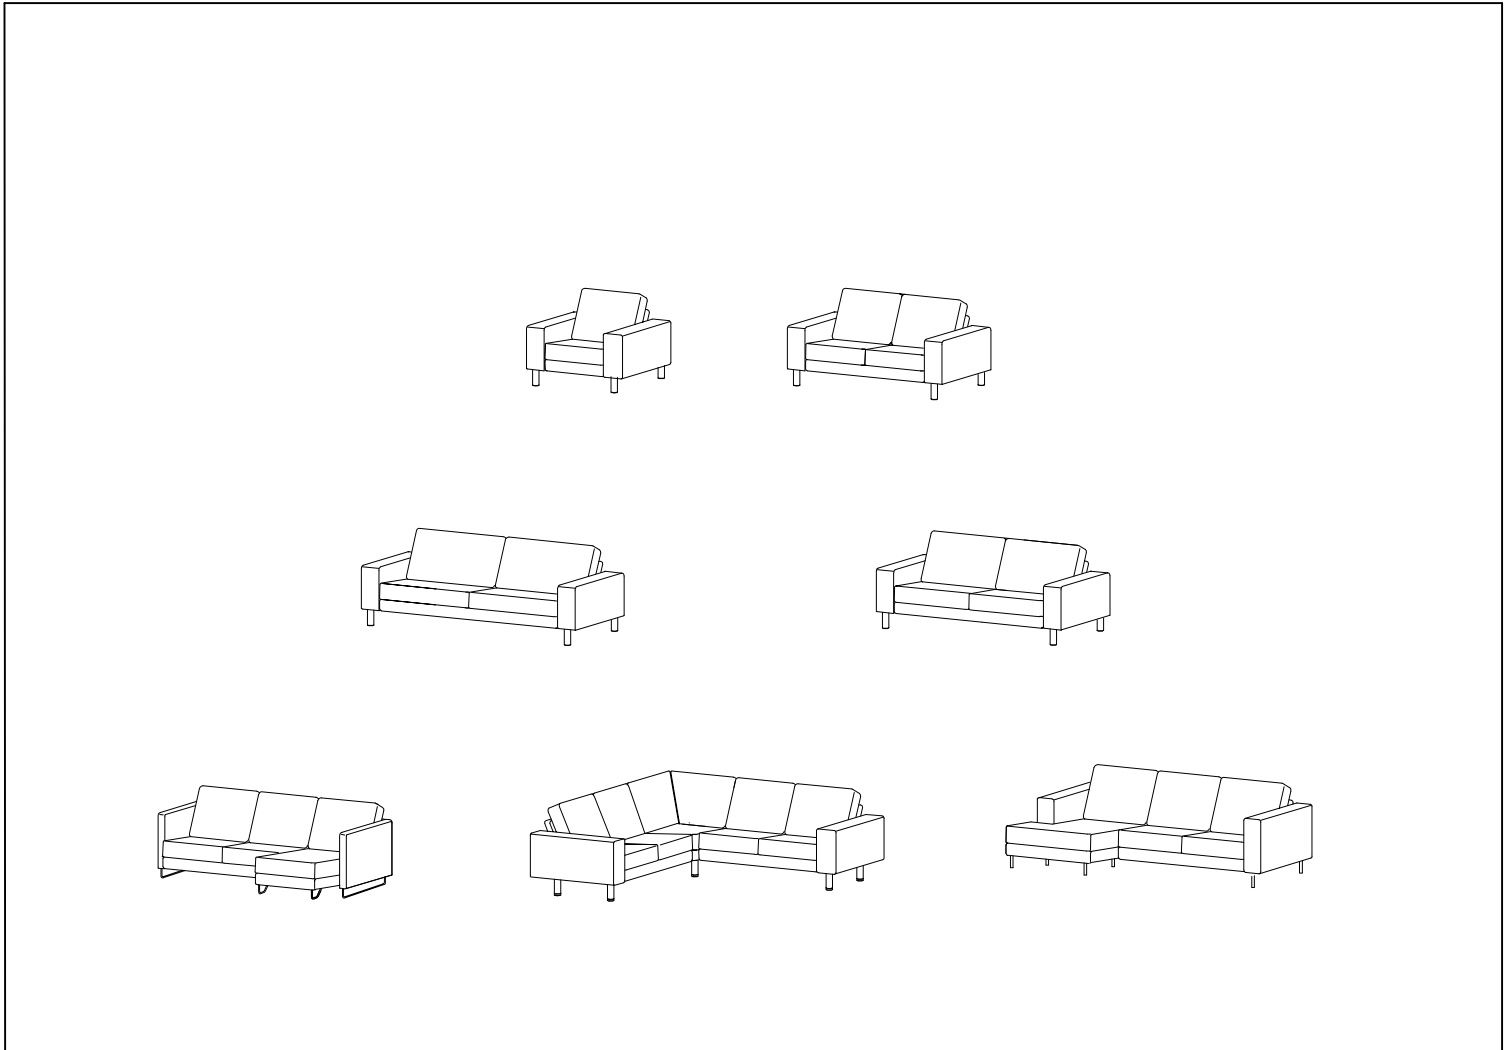

**Attention !**

Armrest 	 <b>A X 4</b> M8x60mm	 <b>B X 4</b> M8x35	 <b>C X 4</b> M8 DIN934	 <b>H X 2</b>
930000309	 <b>B X 8</b> M8x35	 <b>C X 4</b> M8 DIN934	 <b>D X 2</b>	 <b>E X 4</b> M8x60
	 <b>F X 1</b>	 <b>G X 1</b> M8 17x8,5x1	 <b>C X 1</b> M8 DIN934	 <b>D X 1</b>

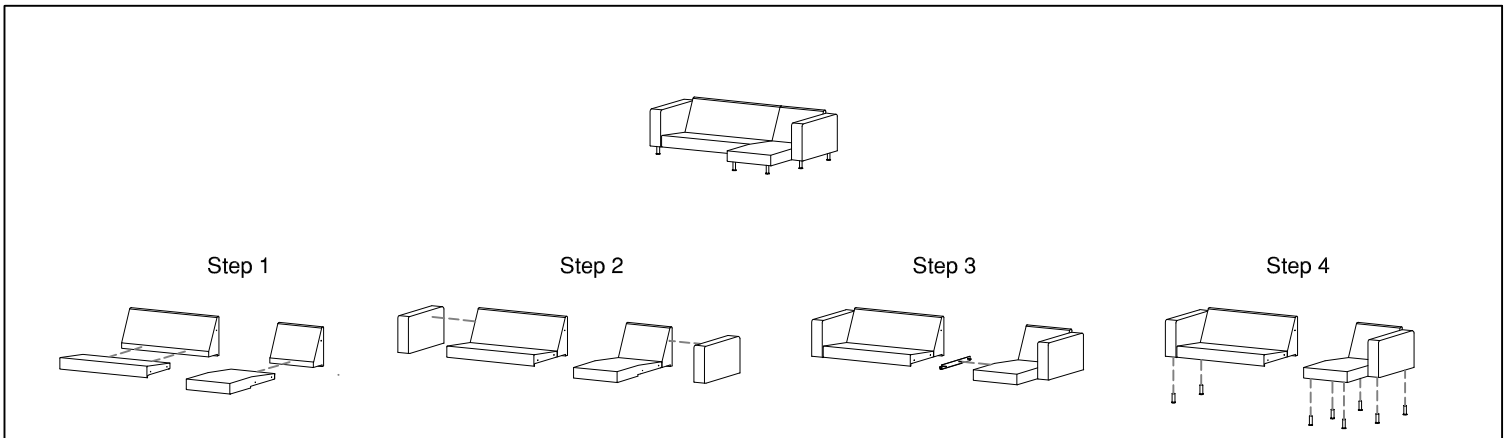


FIG. 1


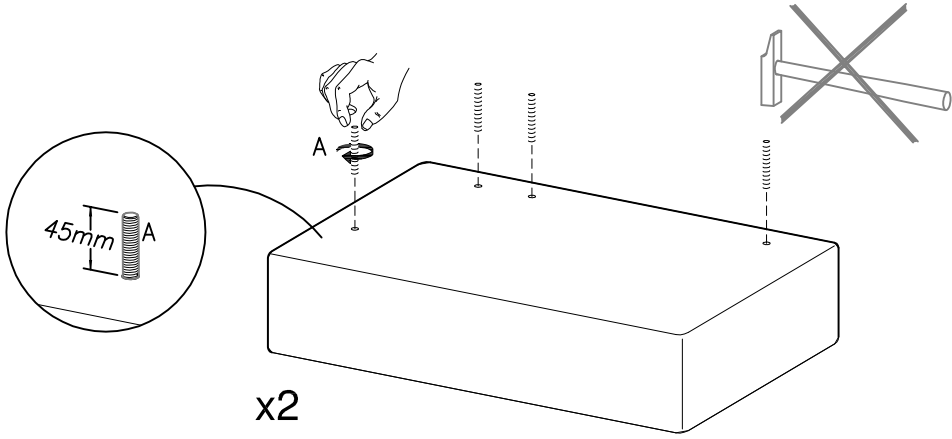



FIG. 2















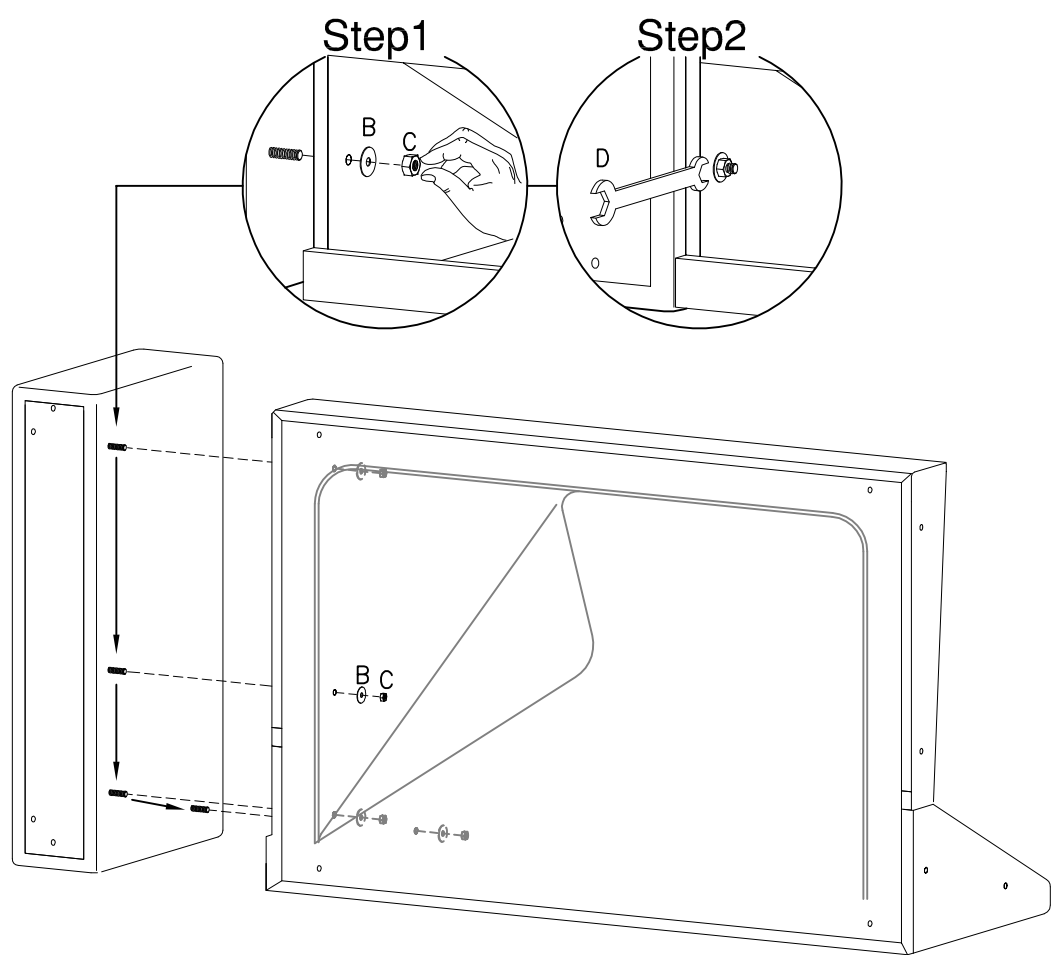


FIG. 3

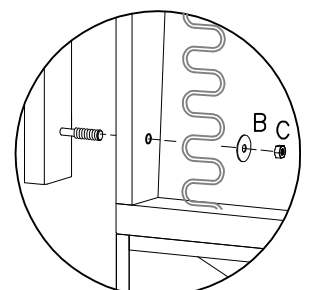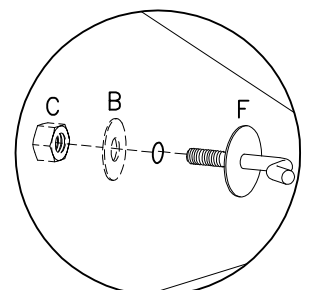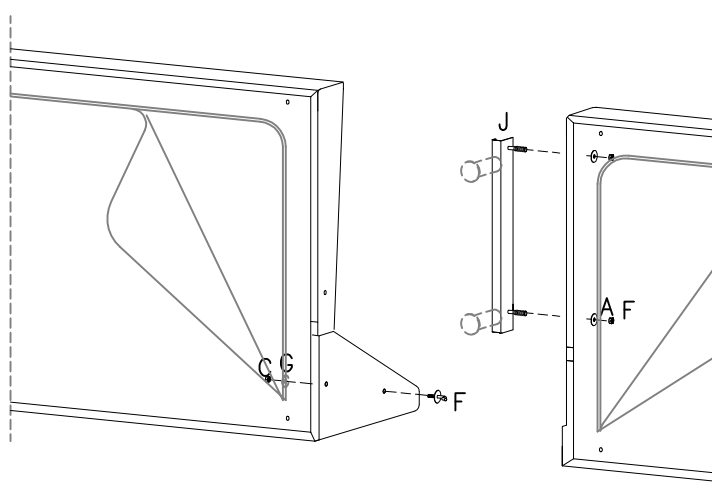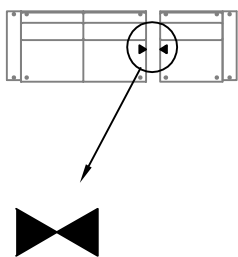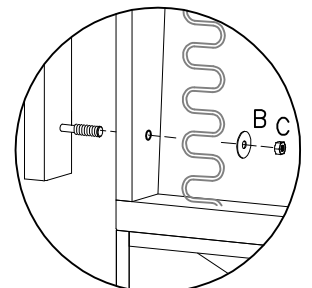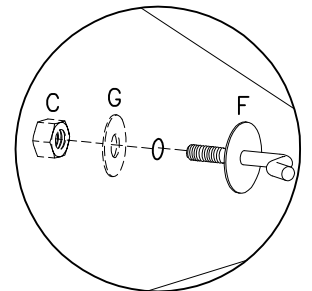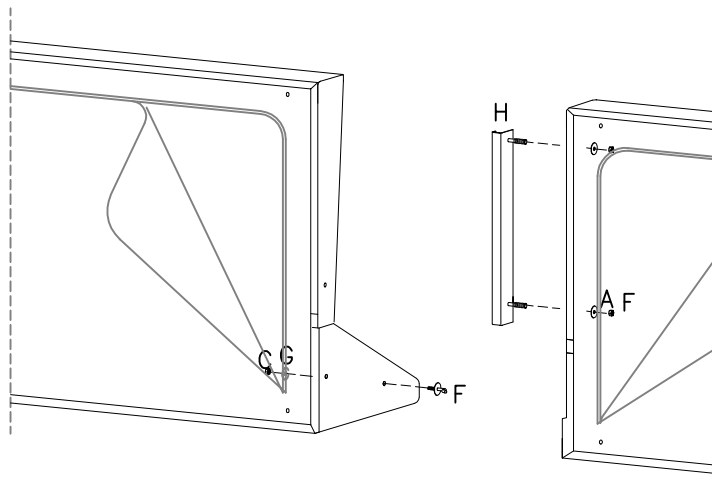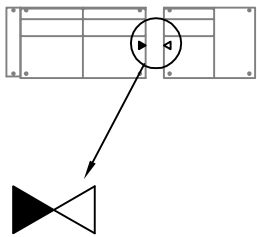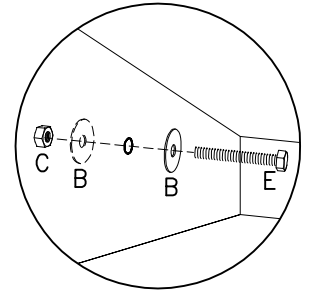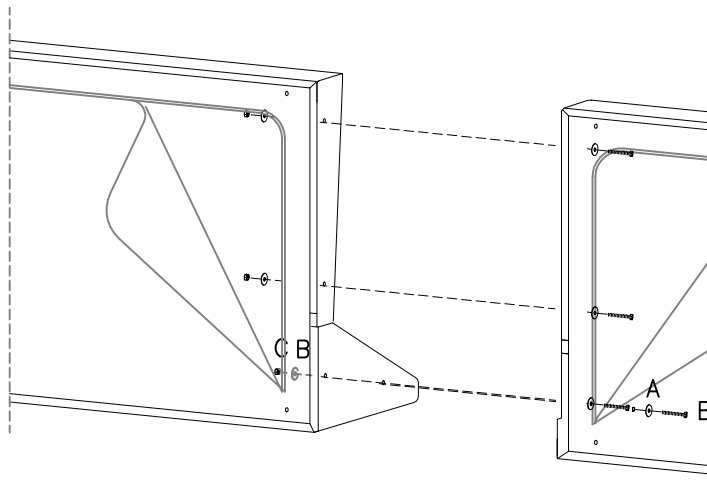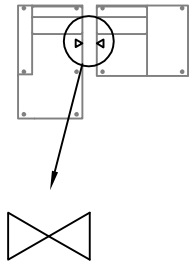

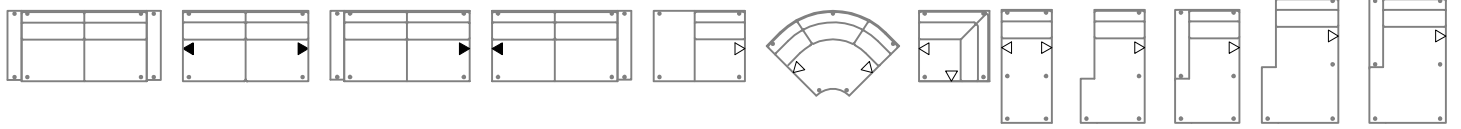

Leg

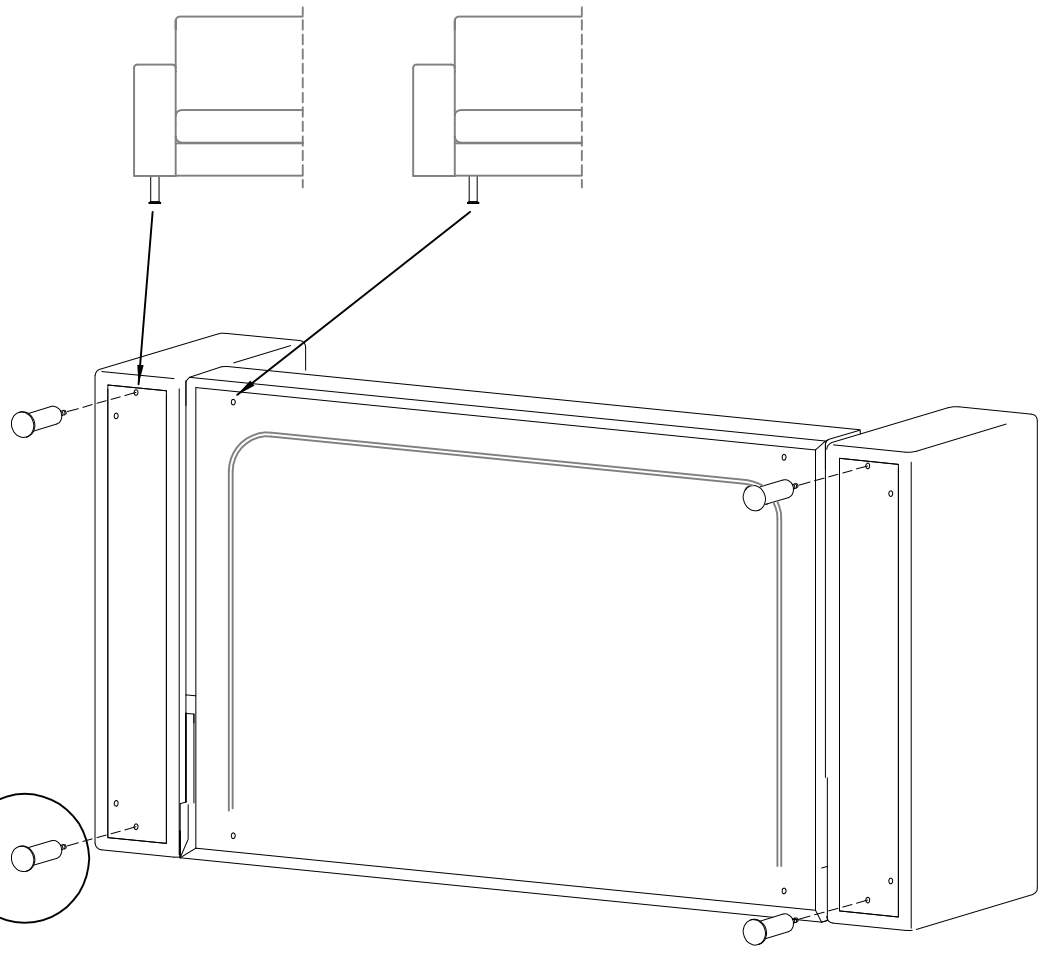

Samvejledning  
Assembly Instructions  
Montageanleitung  
Instructions d'assemblage  
Instrucciones de montaje

