


# Phoenix Modesty Panel

Design by BoConcept

Samlevejledning - Assembly Instructions - Montageanleitung - Instructions d'assemblage - Instrucciones de montaje

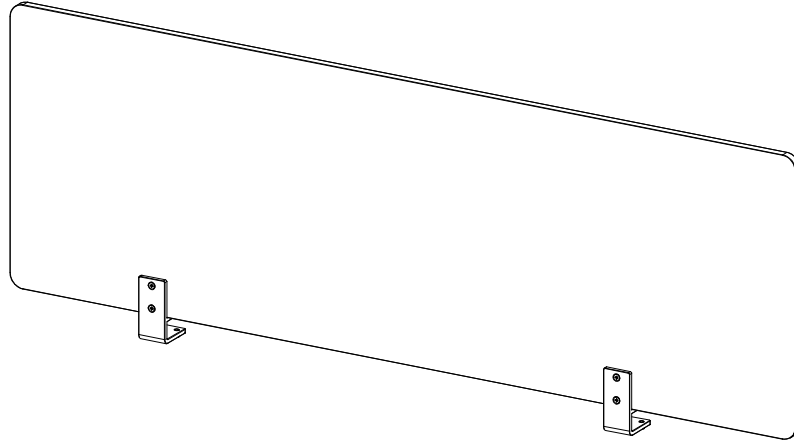

Korpus - Korpus - Carcase - Carcasse



005984  
Modesty Panel



X2

970001860  
Modesty panel fitting


Beslag - Beschlage - Fittings - Set de montage  
937000107



**A x 4**  
970003109  
Screw flh 5,0x16 mm black





**B x 4**  
970000981  
Penol screw M6x8



**D x 1**  
970001691  
Allen key 3 mm

Verketj - Werkzeuge - Tools - Outils



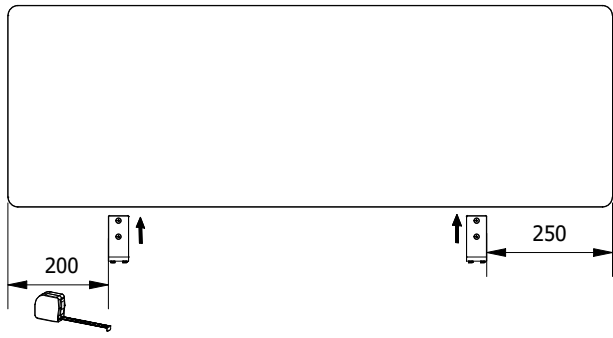


FIG. 1


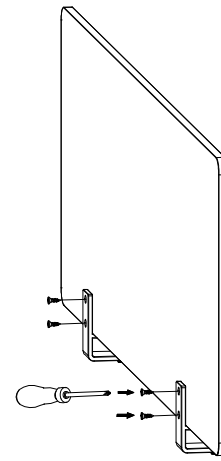


FIG. 2



**A x 4**

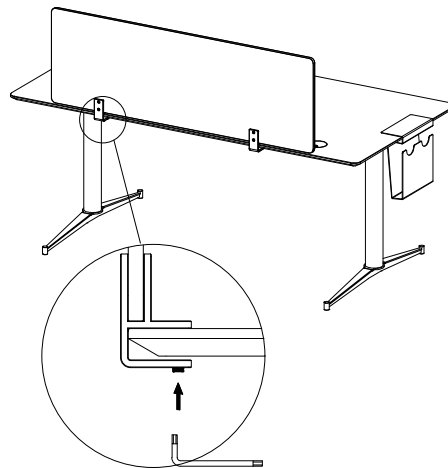


FIG. 3



**B x 4**


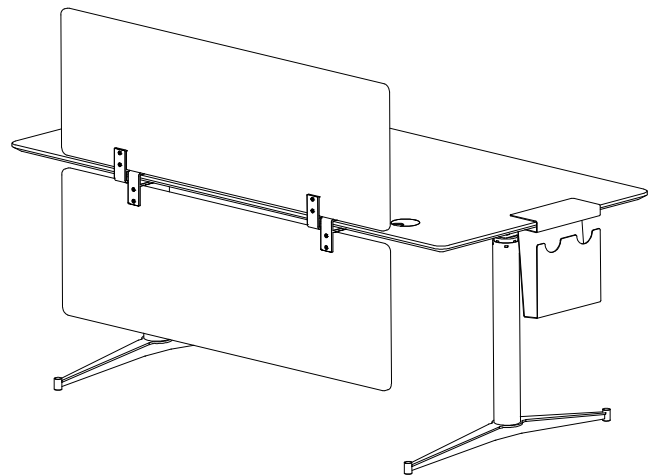


FIG. 4

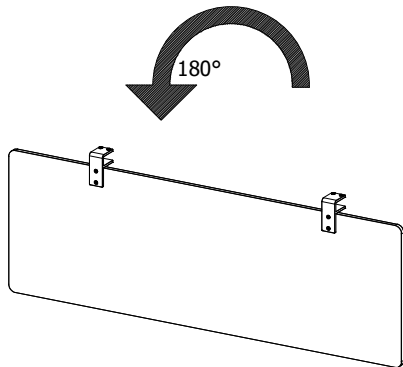

DK Ved reklamation oplyses følgende:

D Im Reklamationsfall, bitte folgendes erläutern:

US In case of claims, please state the following:

F En cas de réclamation, veuillez indiquer:

NL Bij service volgense mededelen


E En caso de reclamación, indicar lo siguiente:

P No caso de reclamação, por favor indique o seguinte:

JP お気づきの点等ございましたら、以下の点をお知らせください。

**Example!**

Korpus - Korpus - Carcase - Carcasse

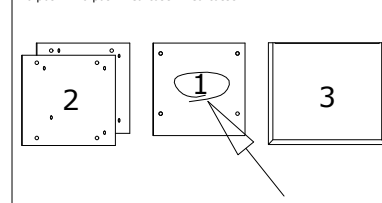

Beslag - Fittings - Beschläge - Set de Montage



**A X 8**  
1972000014



**B X 12**  
1972000004



**C X 4**  
1979110830



**D X 2**  
1970120000



**H X 2**  
1978504022



**J X 8**  
1978204210