
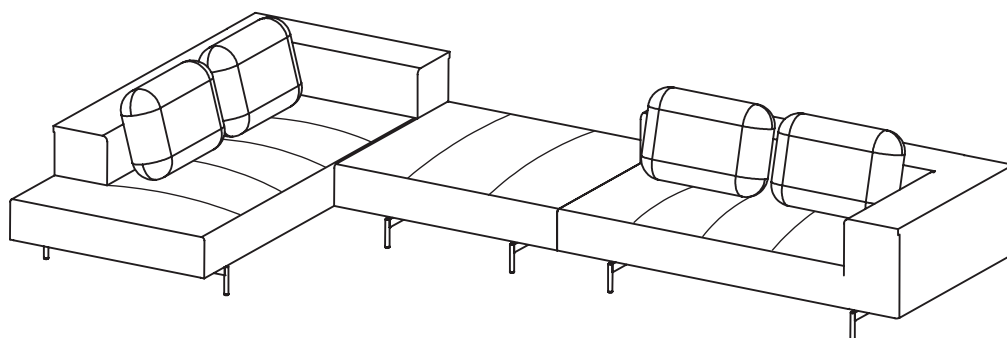
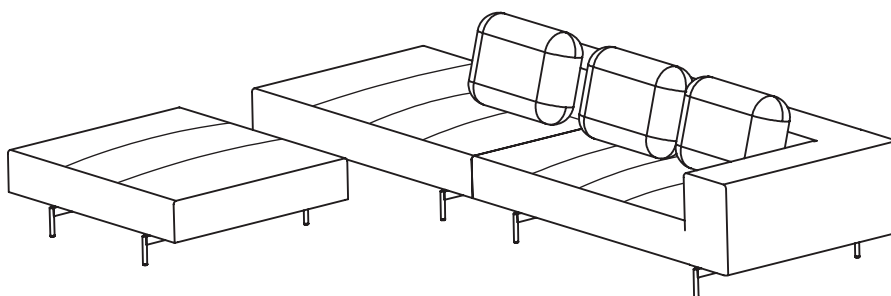


# Amsterdam


Design by BoConcept

Samlevejledning - Assembly Instructions - Montageanleitung - Instructions d'assemblage - Instrucciones de montaje

## Examples

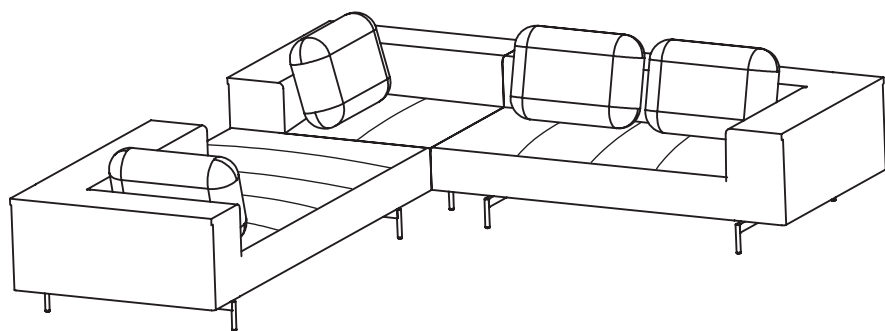

## Fittings

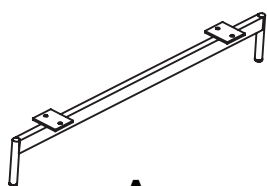


**A:**

Amsterdam leg




**B:**

Screw M8x60 mm



**C:**

Allen key 5 mm

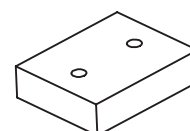

**D:**

Black wooden block


# Amsterdam

Design by BoConcept


Samlevejledning - Assembly Instructions - Montageanleitung - Instructions d'assemblage - Instrucciones de montaje

## SOLO modules


0100

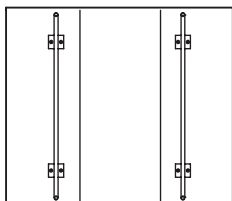


5000

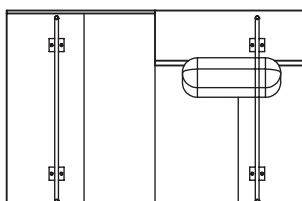


5500

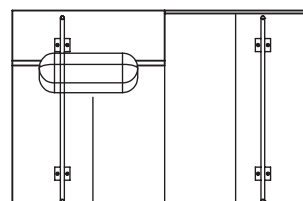


2502

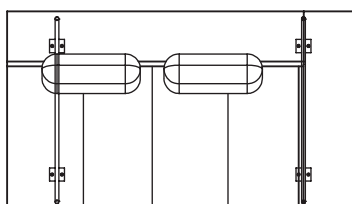


2503

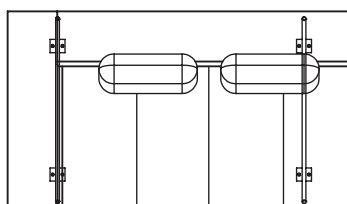


8000

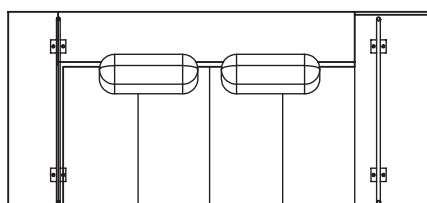


8500

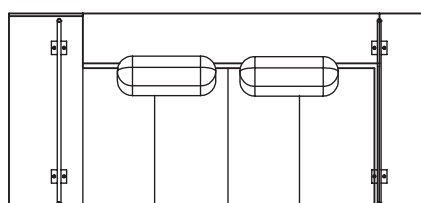


6000

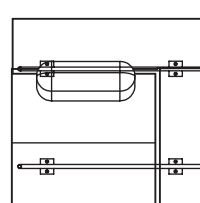


8100

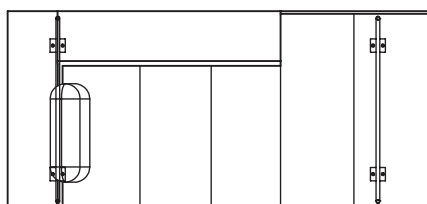

8600

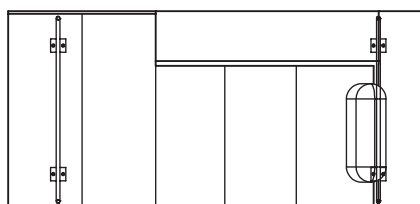

6500

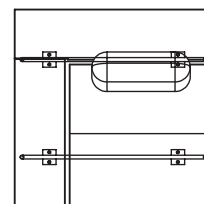


# Amsterdam

Design by BoConcept

Samlevejledning - Assembly Instructions - Montageanleitung - Instructions d'assemblage - Instrucciones de montaje

Step 1:

Top view

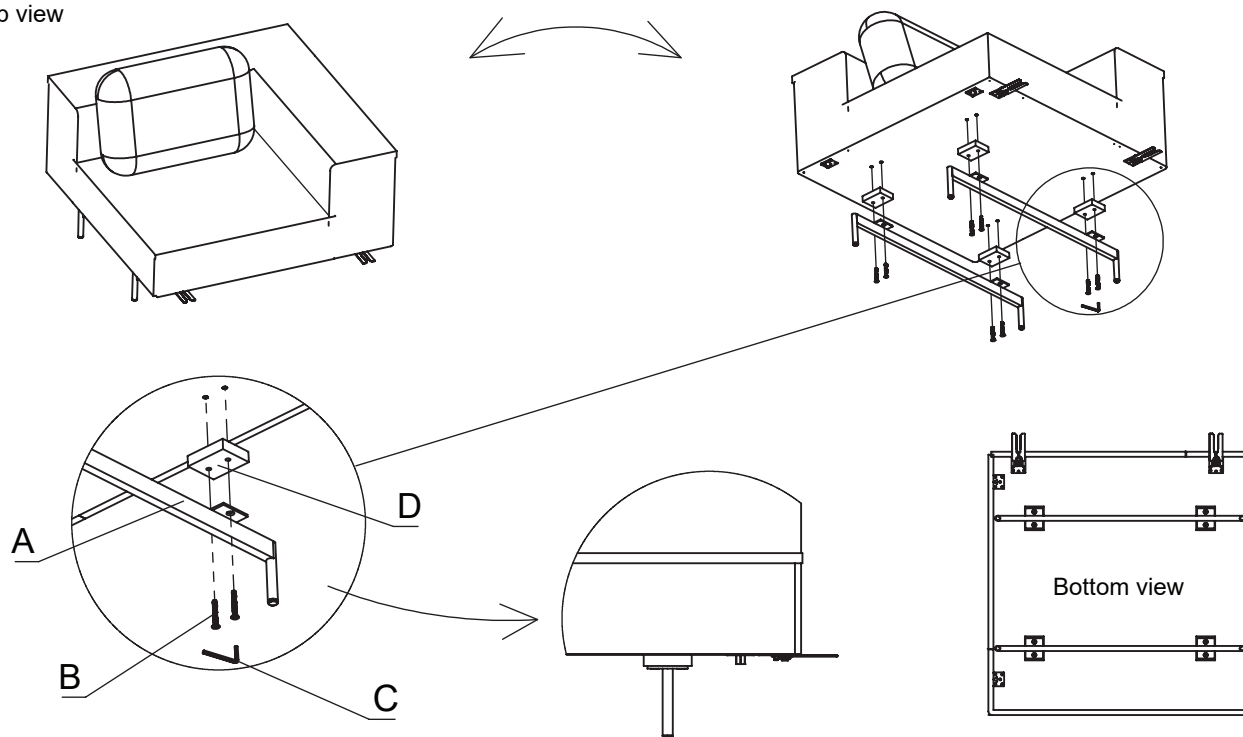

Step 2:

Top view

