



Adelaide

Design by BoConcept


Samvejledning - Assembly Instructions - Montageanleitung - Instructions d'assemblage - Instrucciones de montaje

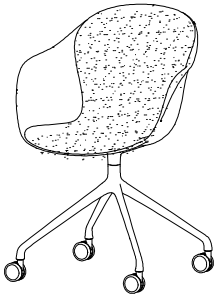


402-D044
2120 + 2280
87x60,0x58,4

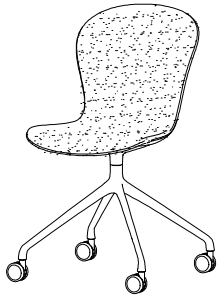


402-D045
2130 + 2280
87,0x45,0x58,4

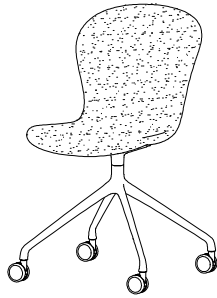


402-D046
2170 + 2280
87,5x45,5x57,5

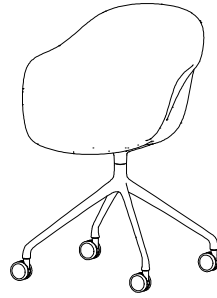

402-D047
2100 + 2280
87,0x60,0x58,4

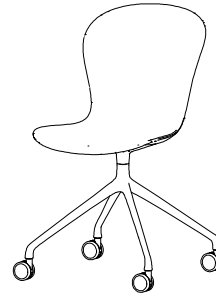


402-D048
2110 + 2280
87,0x45,0x58,4

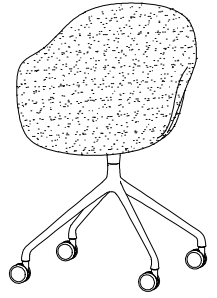

402-D049
2240 + 2280
87,5x61,0x58,4


Legbase 2280

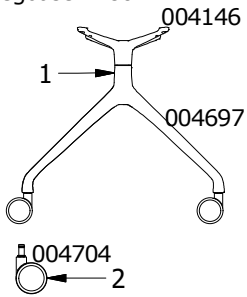


125kg/275lb



402-D046
Exempel

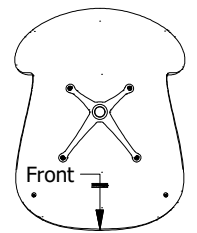

Beslag - Beschläge -
Fittings - Set de montage
Fittingbag no: 937000002




A X 4
979900020
Ø10ø7x1 mm




B X 4
970003125
M6x12 mm



C X 4
1979300004
Allen key 4 mm

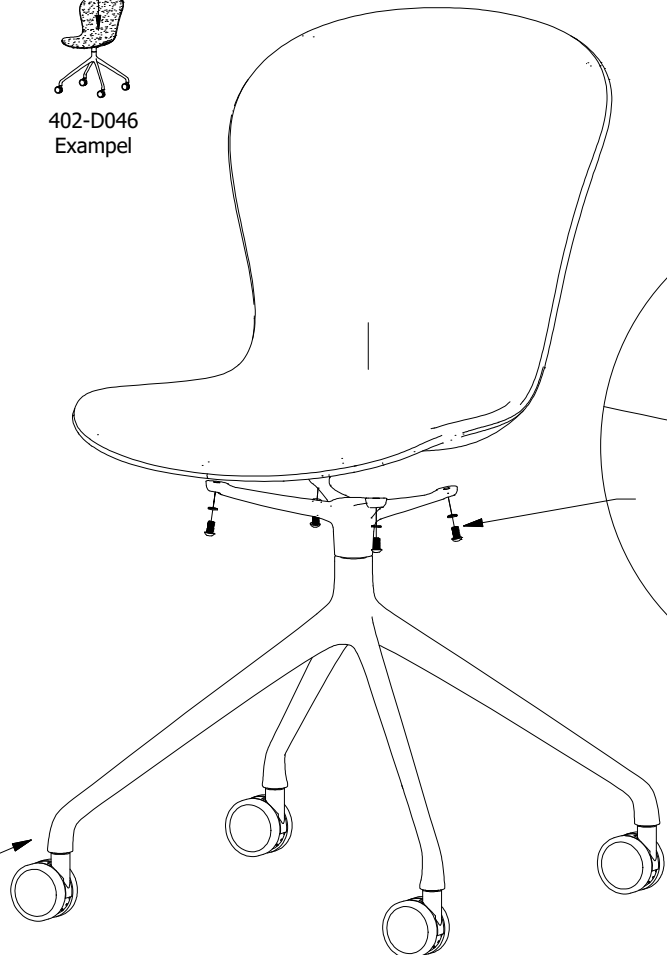

STEP 1: 50%
STEP 2: 100%

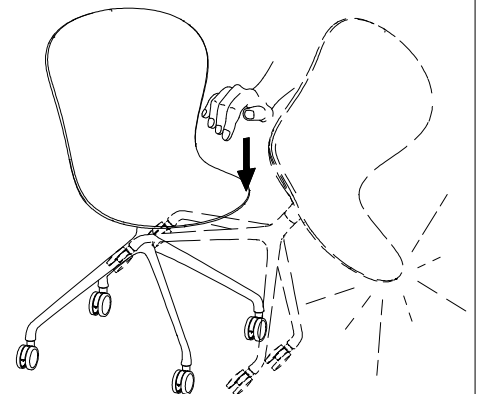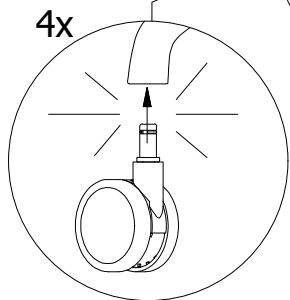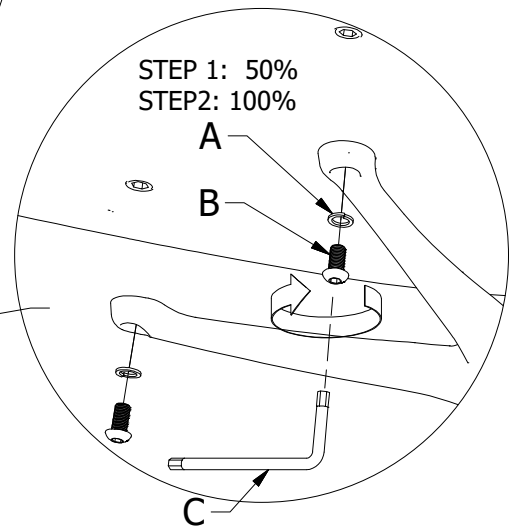

ATTENTION!