


Florence

Design by BoConcept


Samvejledning - Assembly Instructions - Montageanleitung - Instructions d'assemblage - Instrucciones de montaje

402-D088

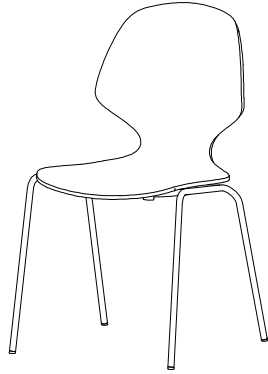


2300 + 2260
88/46x50x51 cm

402-D089

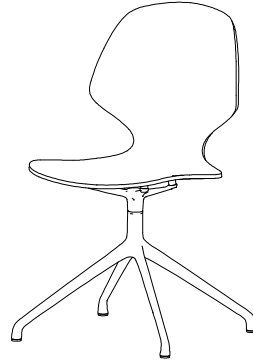


2130 + 2260
87,5/44,5x45x56 cm


402-2260

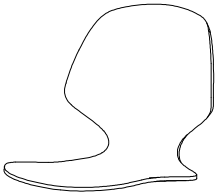

400-2300

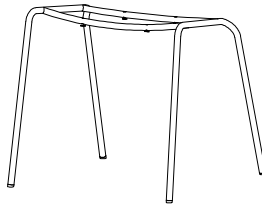

400-2130

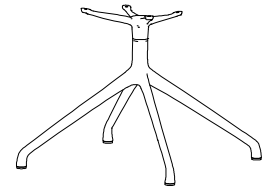

Beslag - Beschlage - Fittings - Set de montage
937000030



Fx4

970000958
M6x20 mm



Gx4

979900013
M6x30 mm



Ax4

970001613



Bx4

970001614



Cx4

979900024
D12,6d6,5x0,8



Dx4

979900013
M6x30



979900020



970003125



1979300004



Hx4

970000732
Lenght 21 mm



Jx4



970000731
Lenght 12 mm





K

1979300014


D088

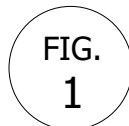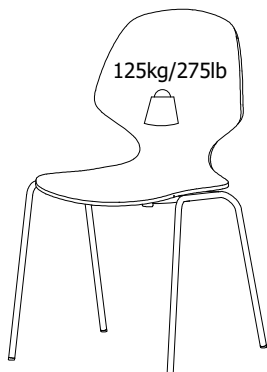


D089

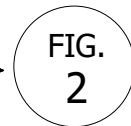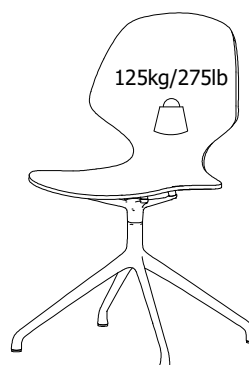


-  Ax4
-  Bx4
-  Cx4
-  Dx4
-  Ex1

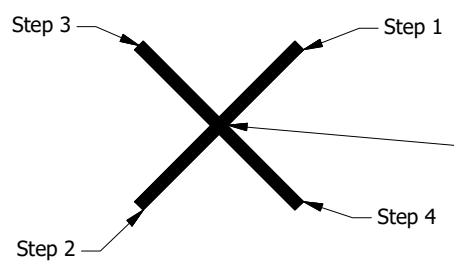

Cross tighten

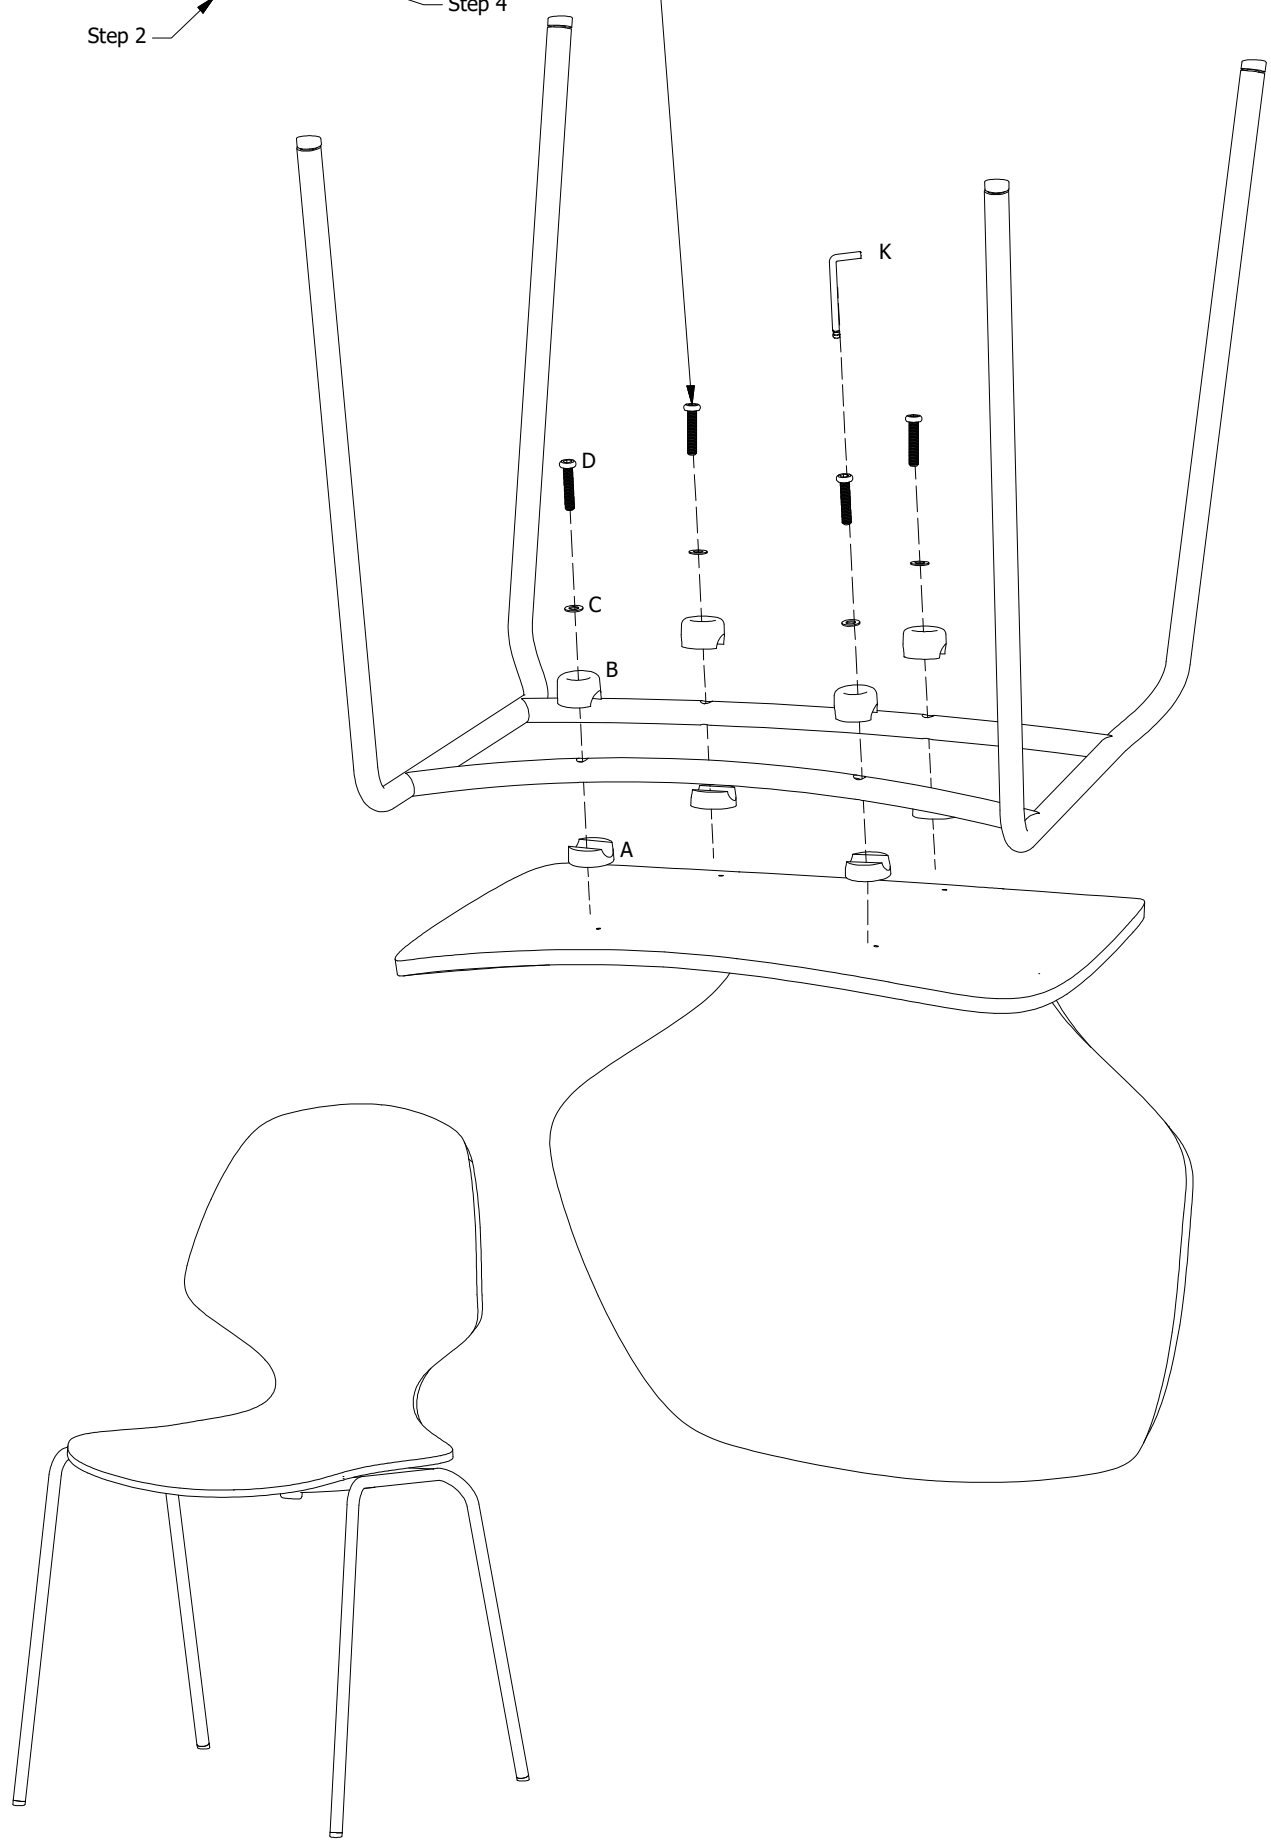


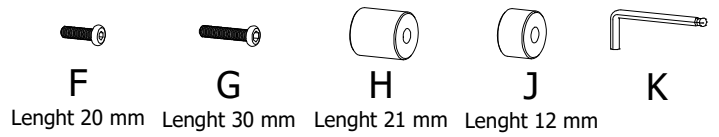



Be aware

G 30 mm and H 21 mm in the back

F 20 mm and J 12 mm in the front

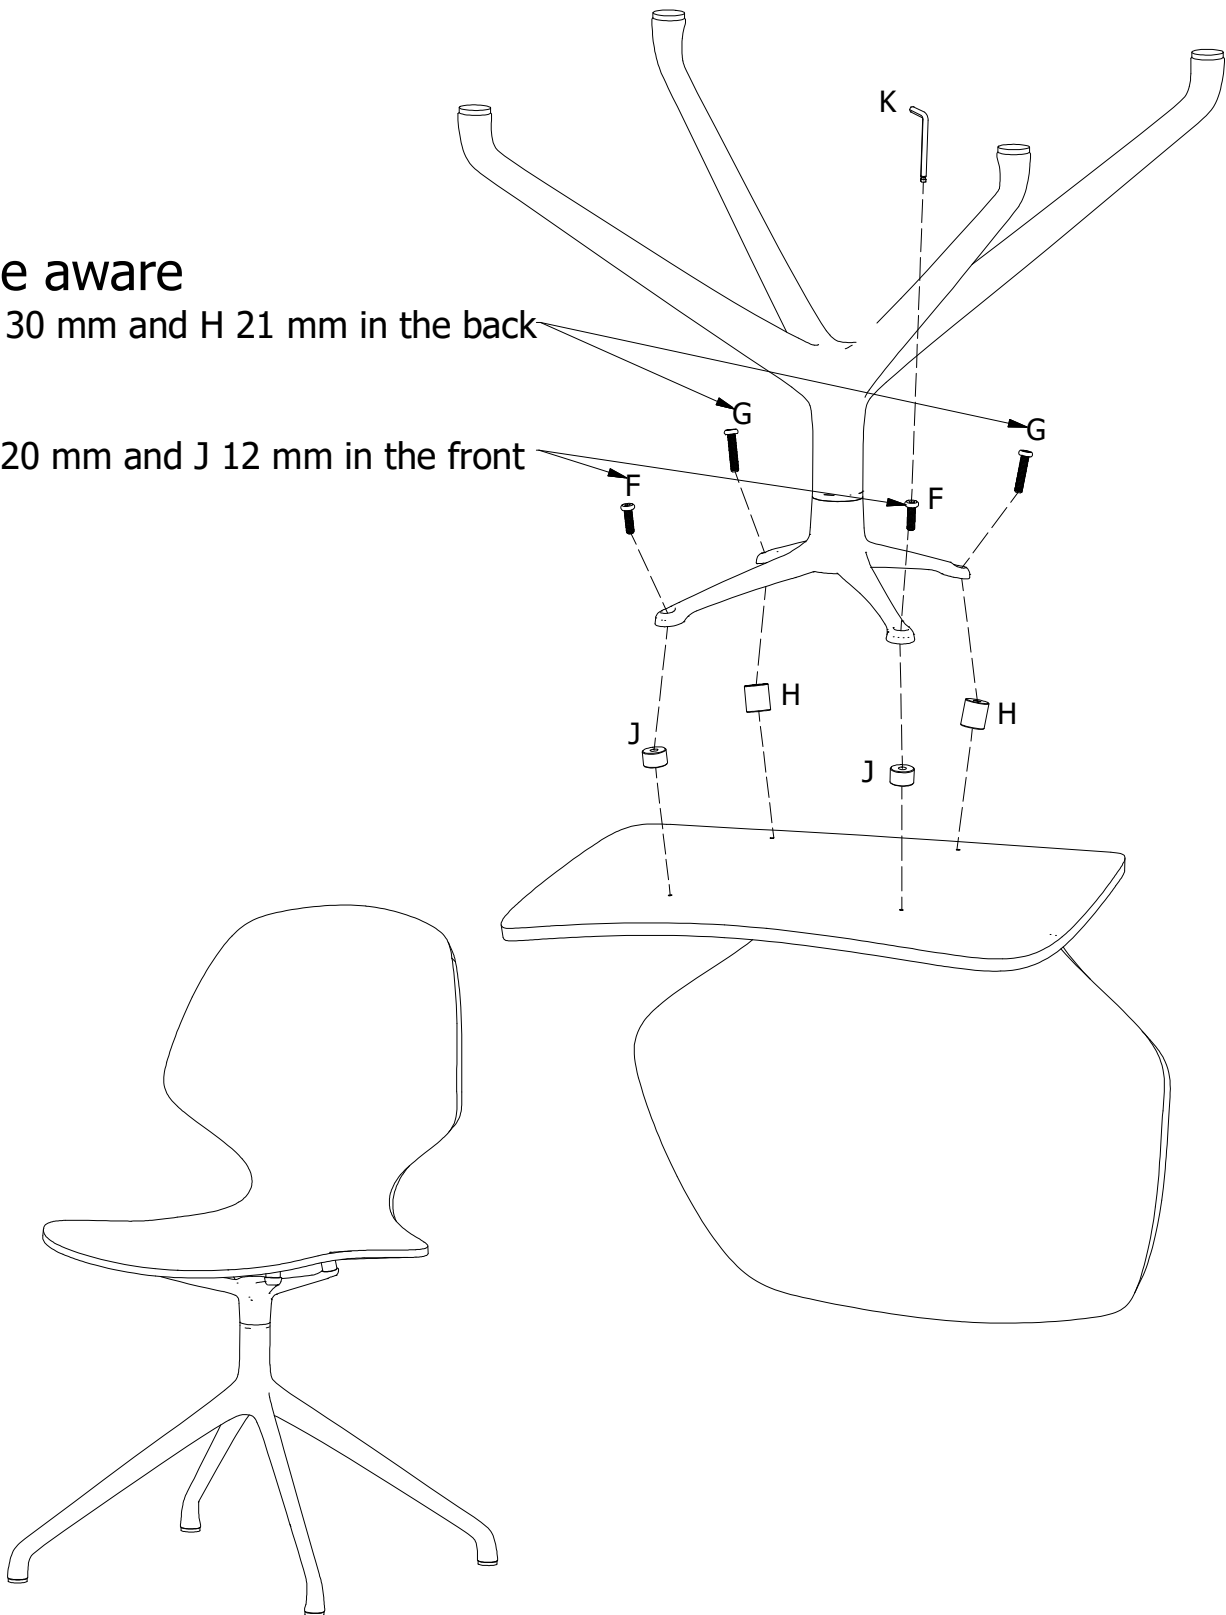

Example!

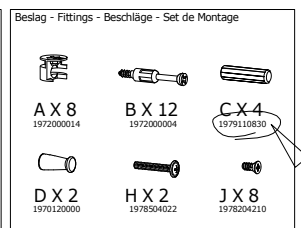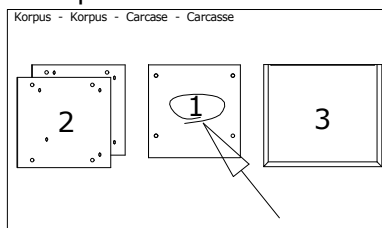

- DK Ved reklamation oplyses følgende:
- D Im Reklamationsfall, bitte folgendes erläutern:
- US In case of claims, please state the following:
- F En cas de reclamation, veuillez indiquer:
- NL Bij service volgene mededelen
- E En caso de reclamacion, indicar lo siguiente:
- P No caso de reclamação, por favor indique o seguinte:
- JP お気づきの点等ございましたら、以下の点をお知らせください。