

Princeton

Design by BoConcept

Samlevejledning - Assembly Instructions - Montageanleitung - Instructions d'assemblage - Instrucciones de montaje

Eksempelkombinationer - Example combinations - Beispielskombinationen - Exemples d' combinaisons - Ejemplos de combinaciones



402-D170
402-D171


76,5x47x55,5 Max 125kg.

400-2420



1

402-2530
402-2540



2

sparepart bag 937000166 grey
937000167 black



x 4

Beslag - Beschllge - Fittings - Set de montag
Fitting bag 937000164



A x 4
M6x18mm



B x 4
D14 d6,5x1,5mm



C x 1
4mm

FIG.
1

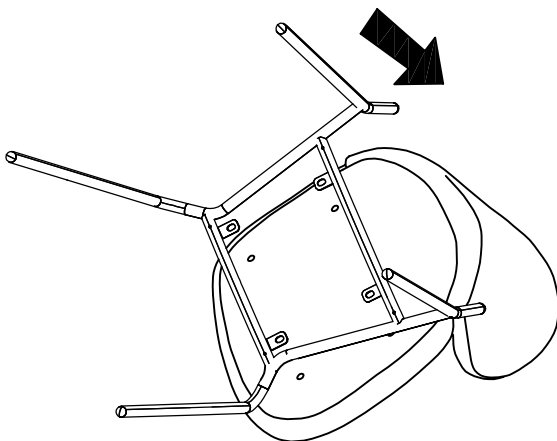


FIG.
2

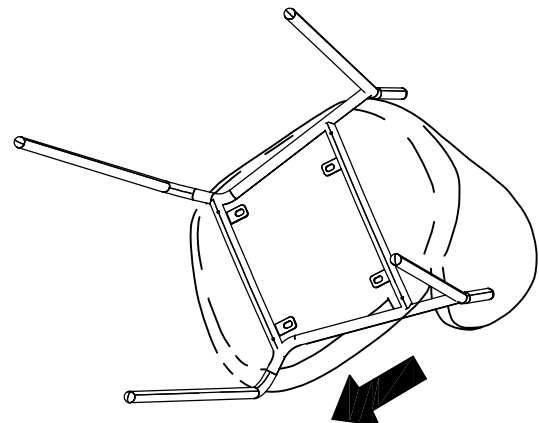





FIG.
3

-  A x 2
-  B x 2
-  C x 1

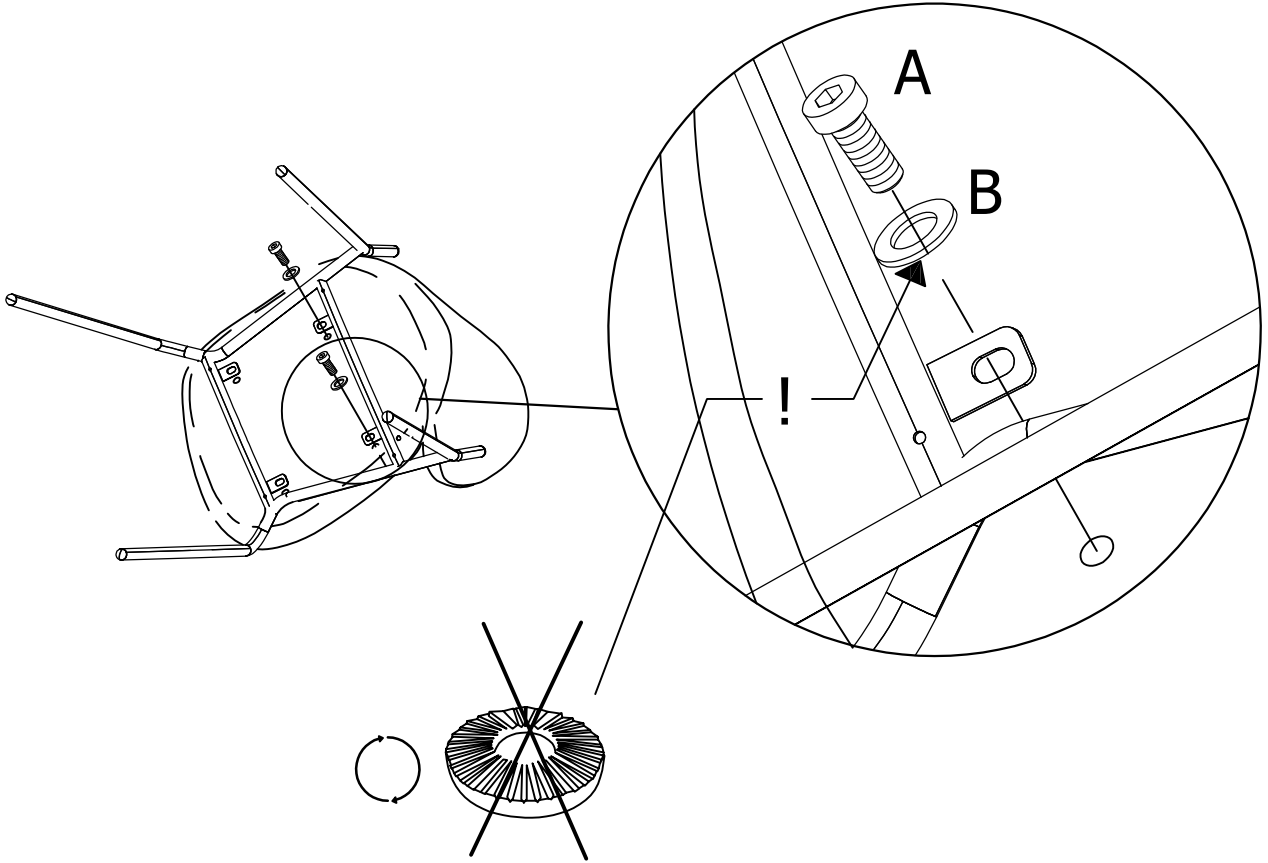





FIG.
4

-  A x 2
-  B x 2
-  C x 1

step 1

step 2

