


# Mezzo - Cenova

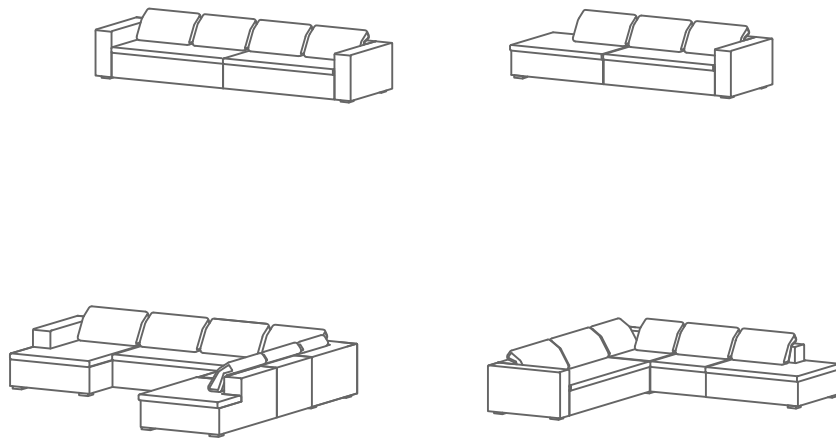

Design by Bo Concept


Samvejledning - Assembly Instructions - Montageanleitung - Instructions d'assemblage - Instrucciones de montaje



Example

## Beslag - Beschläge - Fittings - Set de montage

932000232 (2 leg)  
930000314 (3 leg)



F



B  
M8x35



G  
M8x85mm



H  
M8




E



J

930000234 (1 leg) oversize model



F



B  
M8x35



K  
M8x60mm



E



J

930000315 (2pcs.)



K



M  
M8x50mm



B  
M8x35



H  
M8



P  
3,5x20mm



N  
5mm

2152



A

612215200xx (2 leg)



C  
M8x50mm



B  
M8x35



D



E

FIG. 1





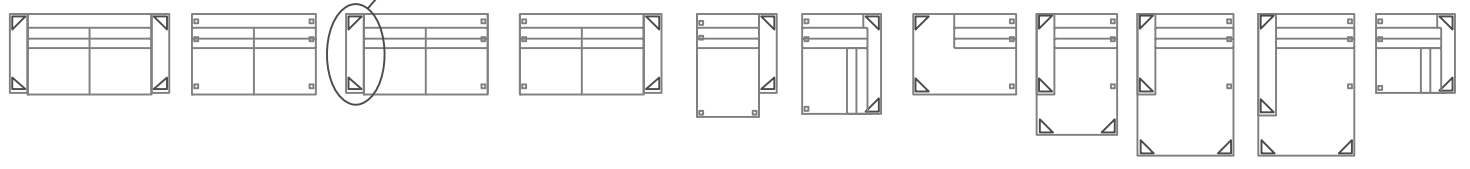


FIG. 2

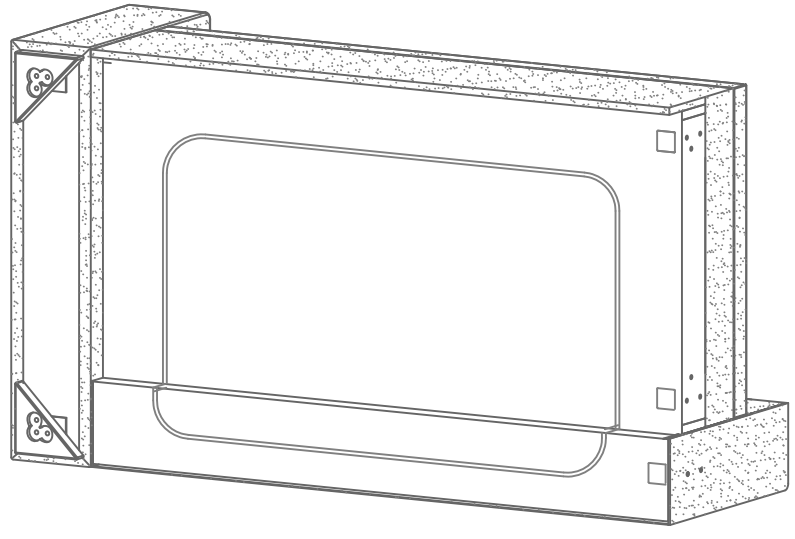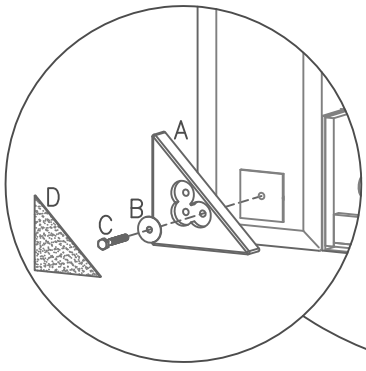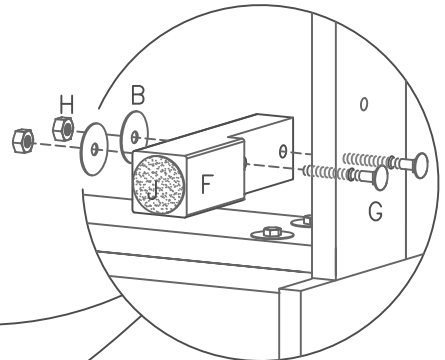

Attention!



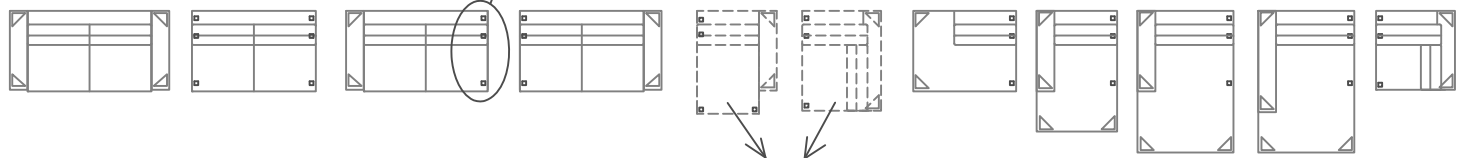


FIG. 3

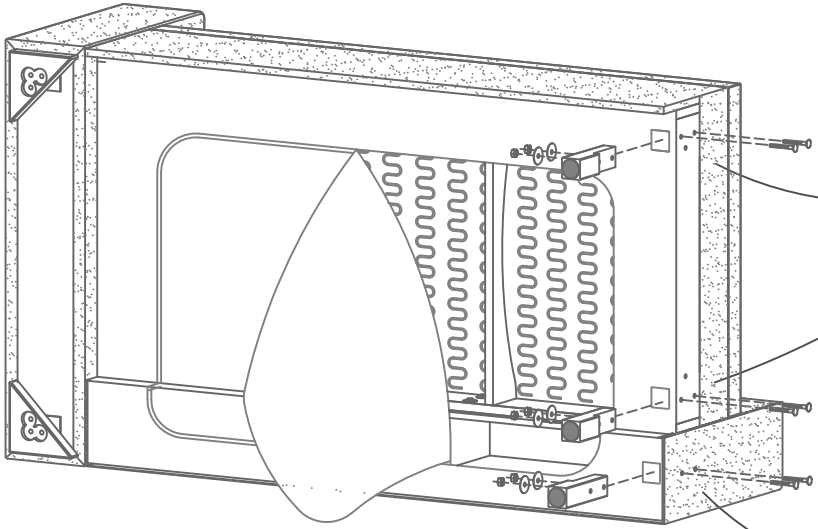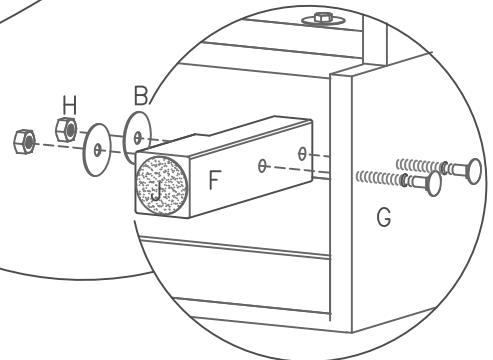