



Adelaide

Design by BoConcept


Samvejledning - Assembly Instructions - Montageanleitung - Instructions d'assemblage - Instrucciones de montaje

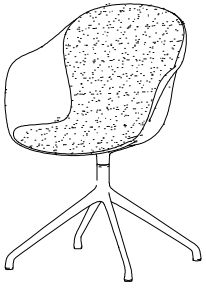


402-D021
2120 + 2130
83,3x60,0x58,4

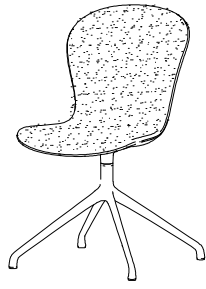


402-D022
2130 + 2130
83,3x45,0x58,4

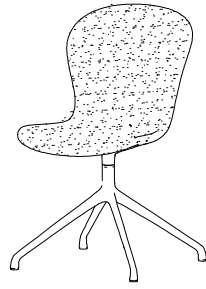


402-D023
2170 + 2130
83,5x45,5x57,5

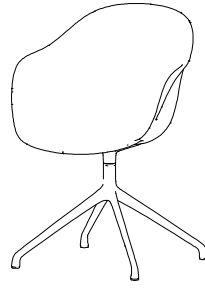

402-D024
2100 + 2130
83,3x60,0x58,4

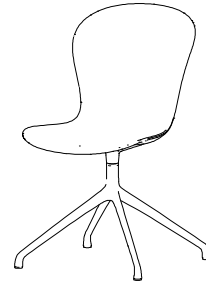


402-D025
2110 + 2130
83,3x45,0x58,4

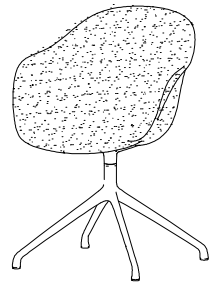


402-D041
2130 + 2240
83,3/46x60x58,4


Legbase 2130

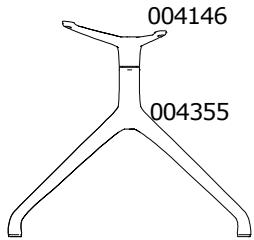


125kg/275lb

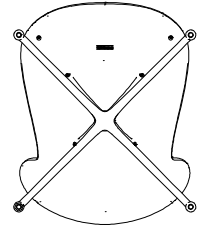


Beslag - Beschläge -
Fittings - Set de montage
Fitting bag no: 937000002

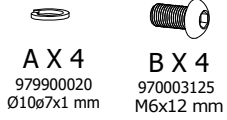

C X 4
1979300004
Allen key 4 mm

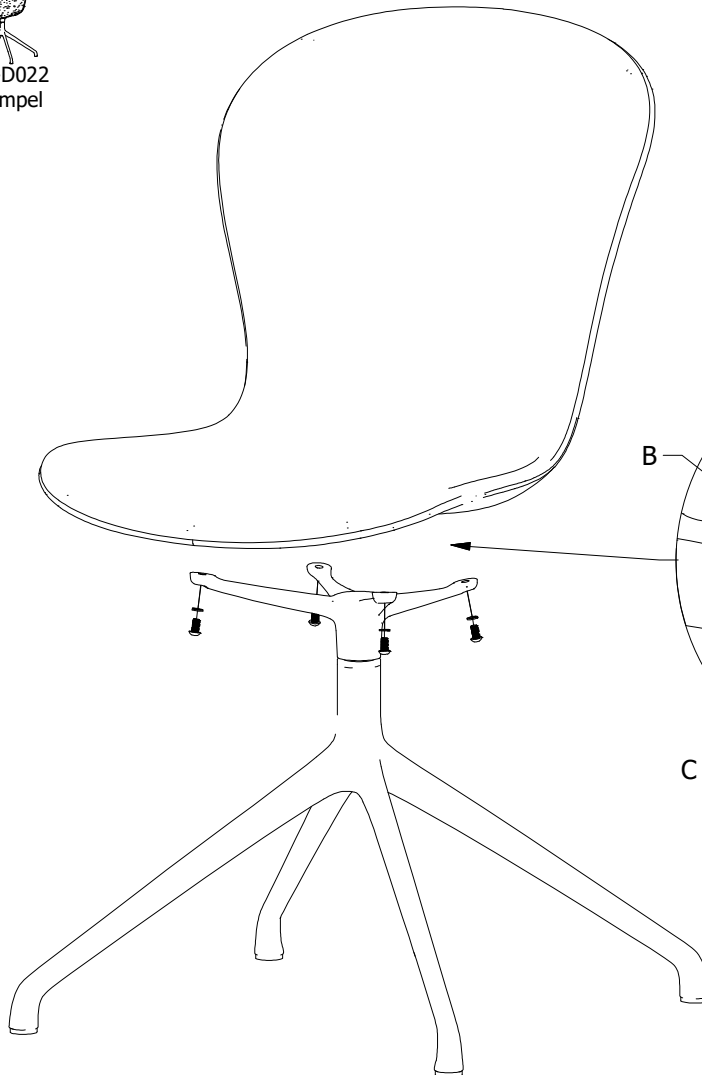

STEP 1: 50%
STEP 2: 100%

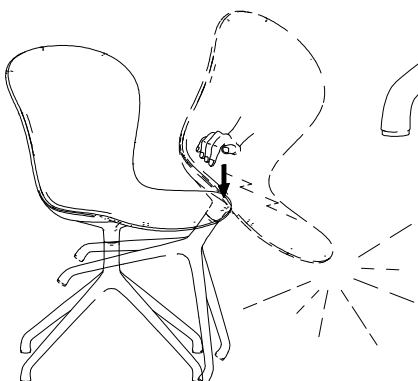

ATTENTION!