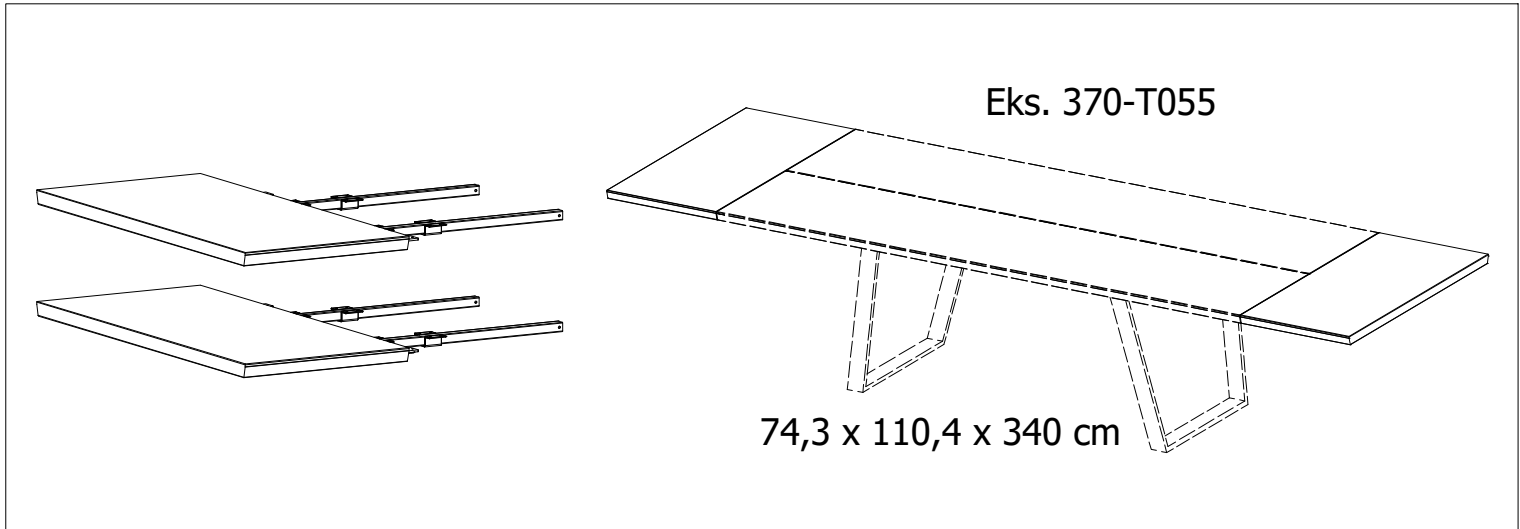


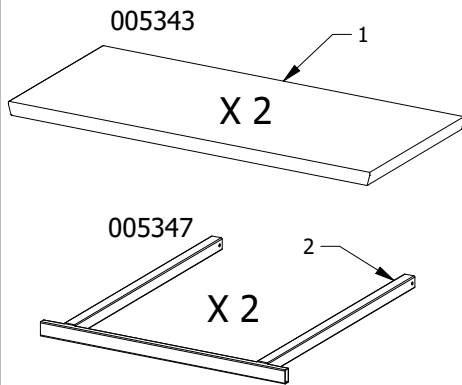
Vancouver

Design by BoConcept

Samvejledning - Assembly Instructions - Montageanleitung - Instructions d'assemblage - Instrucciones de montaje



Korpus - Korpus - Carcase - Carcasse
Model 5880



Beslag - Beschläge - Fittings - Set de montage 937000042
Model 5880

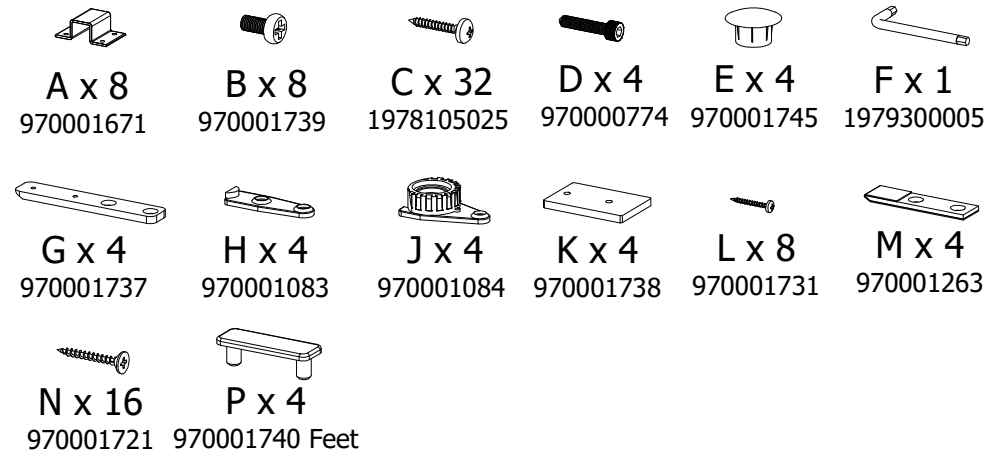


FIG. 1

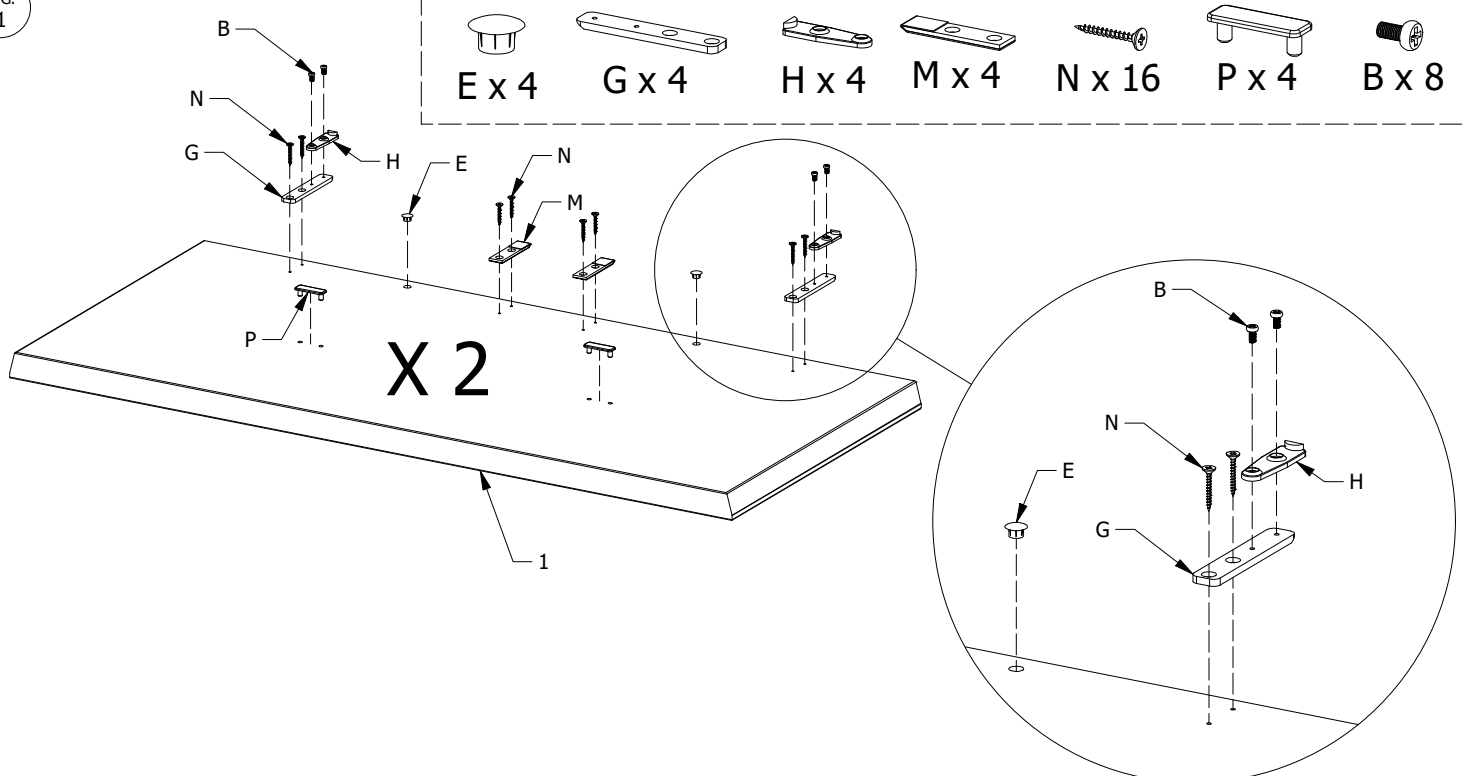







FIG. 2

- 
A x 8
- 
C x 32
- 
J x 4
- 
K x 4
- 
L x 8

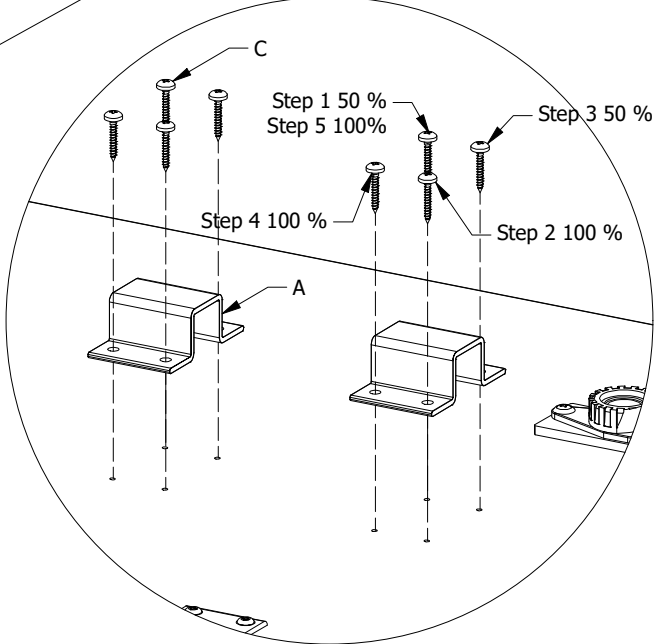
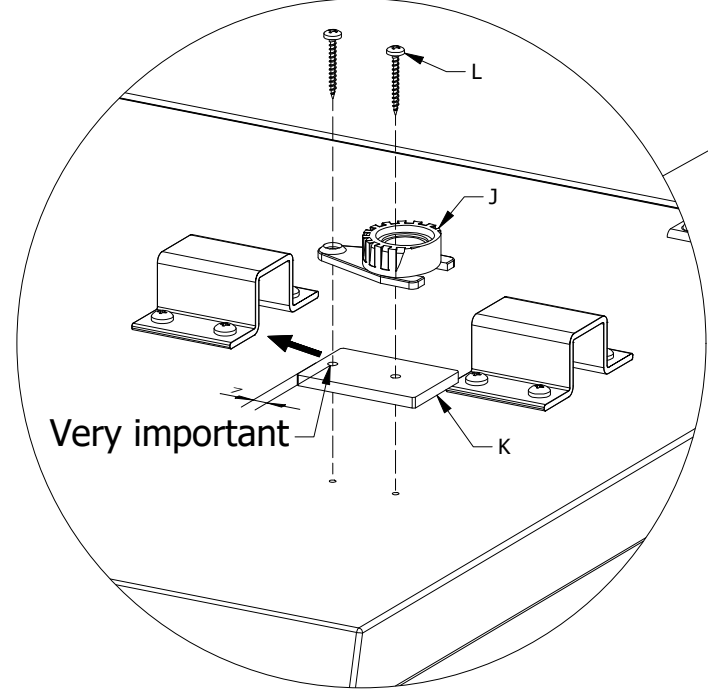
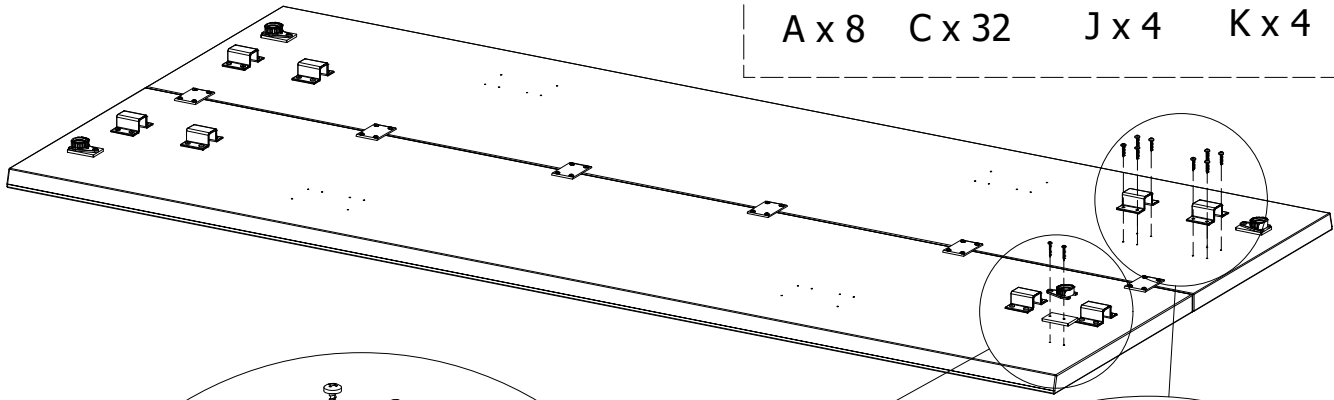





FIG. 3

- 
B x 2
- 
D x 4
- 
F x 1

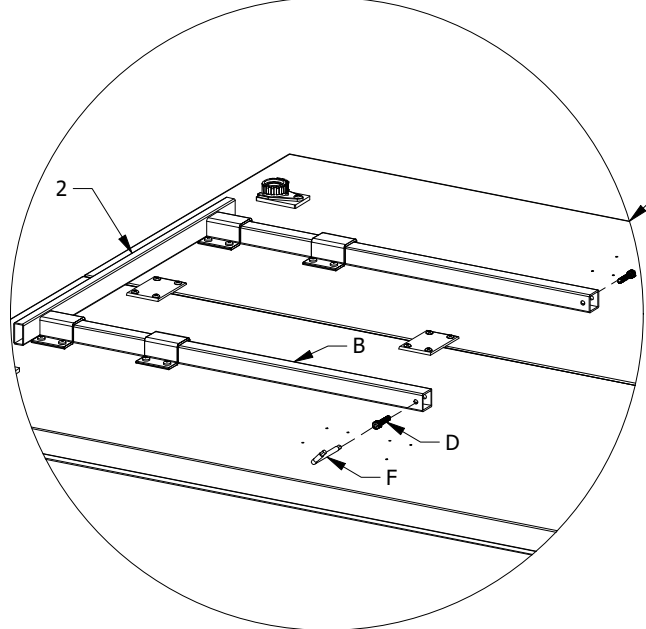
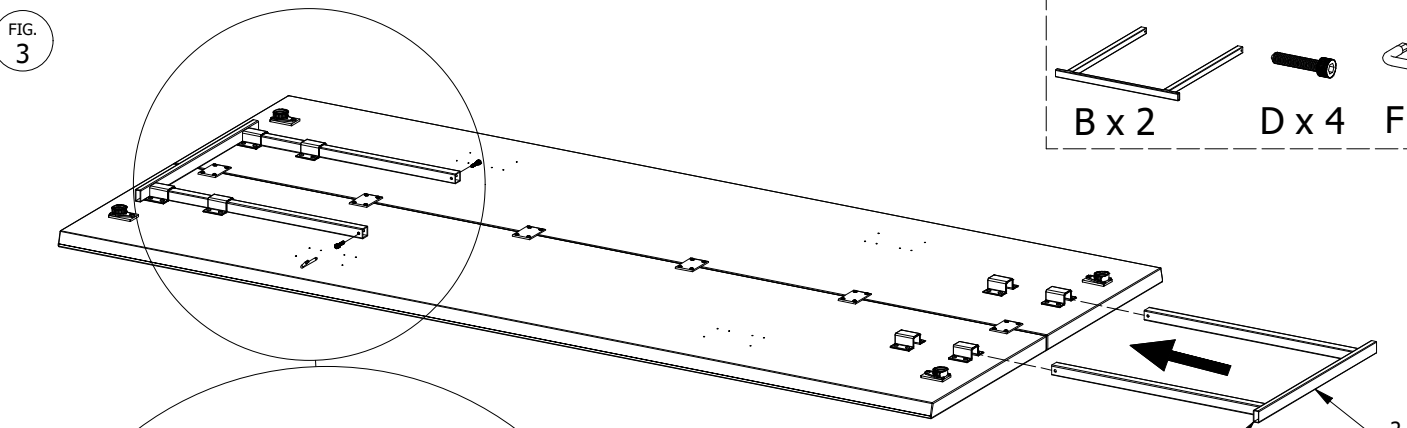


FIG. 4

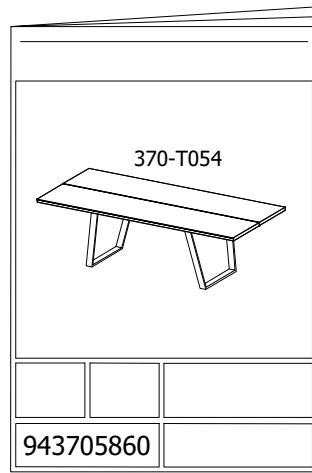
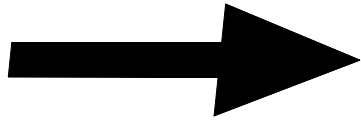
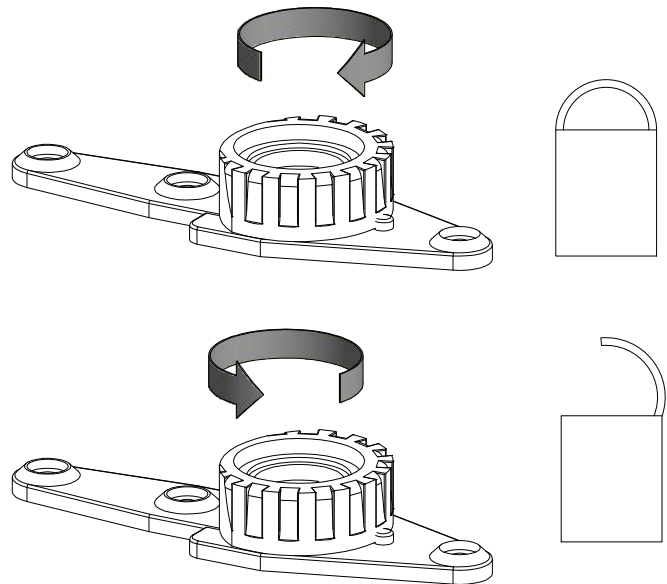
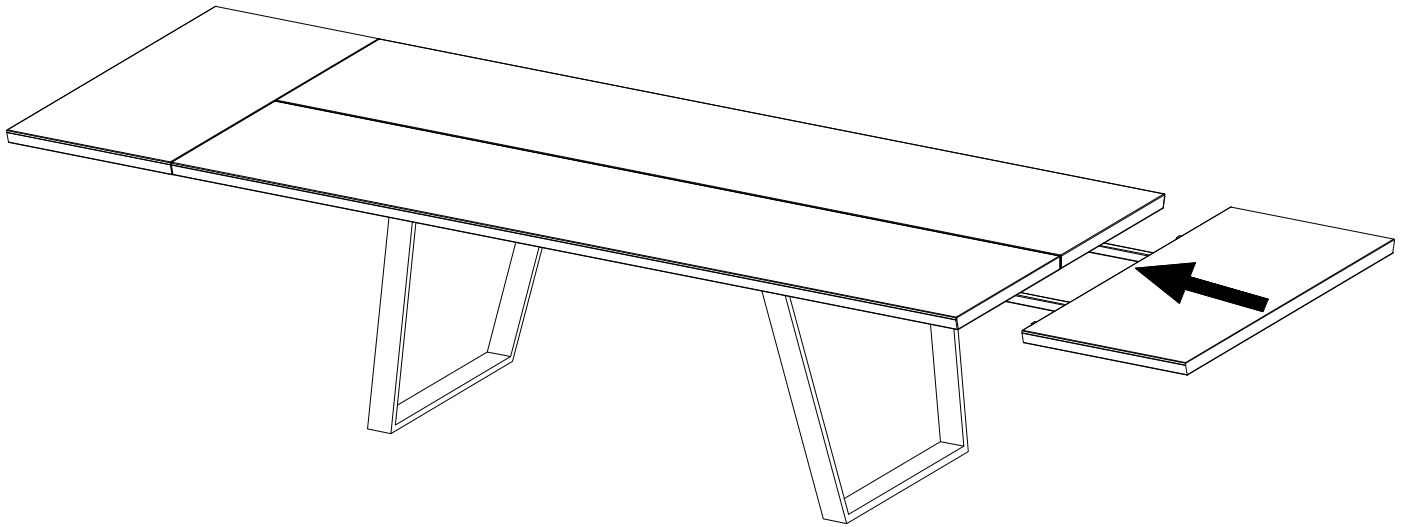


FIG. 5



DK Ved reklamation oplyses følgende:

D Im Reklamationsfall, bitte folgendes erläutern:

US In case of claims, please state the following:

F En cas de réclamation, veuillez indiquer:

NL Bij service volgene mededelen

E En caso de reclamación, indicar lo siguiente:

P No caso de reclamação, por favor indique o seguinte:

JP お気づきの点等ございましたら、以下の点をお知らせください。

Example!

