
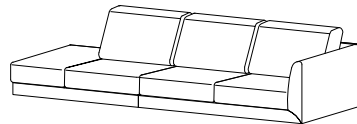
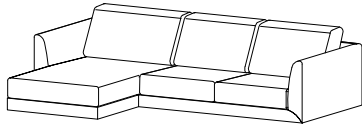
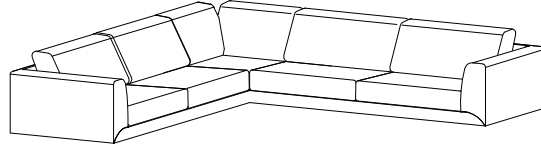



Fargo


Design by BoConcept


Samvejledning - Assembly Instructions - Montageanleitung - Instructions d'assemblage - Instrucciones de montaje

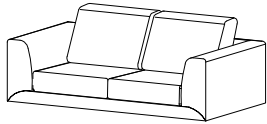



Examples


Leg no. 4040
2x

A X 2
970001457
Ø50x3,6

Leg no. 4070
2x

A X 2
970001457
Ø50x3,6

Leg no. 4080
2x

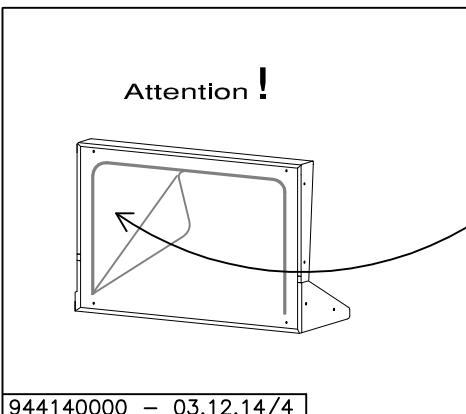A X 2
970001457
Ø50x3,6

Leg no. 4170
2x

A x 4
970001349
M8x35mm
B X 1
1979300005
Allen 5 mm

Leg no. 4230
2x

A X 2
004217
105x105x3
B x 8
970001349
M8x35mm
C X 1
1979300005
Allen 5 mm



Beslag – Beschläge – Fittings – Set de montage



A
932000159
KON001



B
932000197
M8x60mm



C
932000157
M8 25x8,5x2



D
932000162
M8



E
1979300005
5mm



F
932000188
3,5x20mm



G
932000158




H
932000198
M8 17x8,5x1



D
932000162
M8

FIG. 1



Example

ex. leg 4230

ex. leg 4130

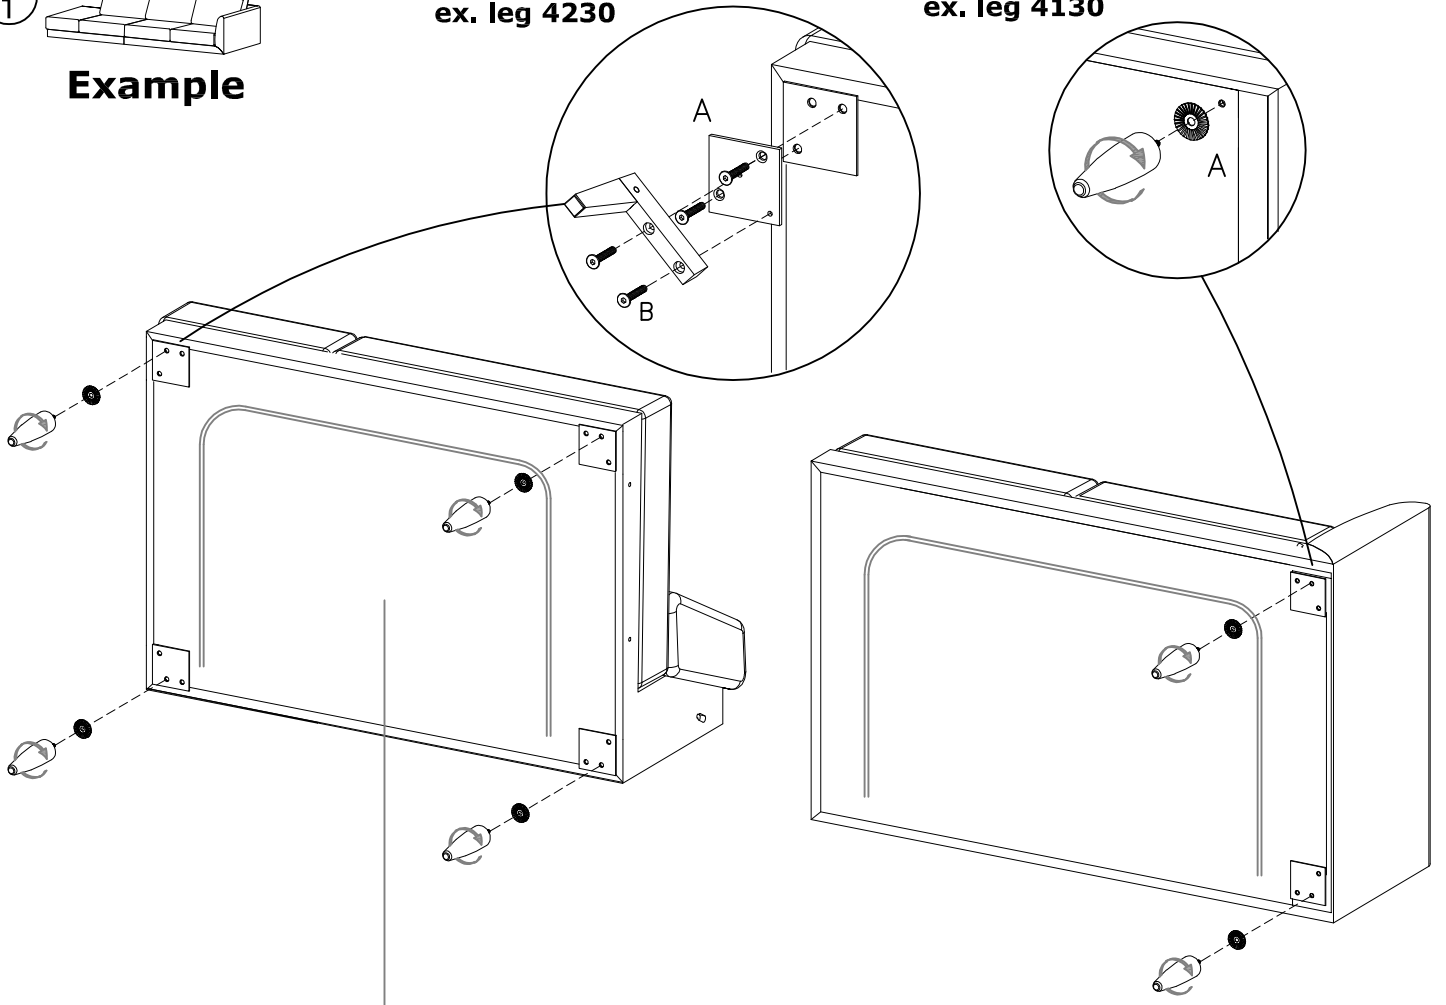


FIG. 2

- A**
- B**
 M8x60mm
- C**
 M8 25x8,5x2
- D**
 M8
- E**
 5mm
- F**
 3,5x20mm


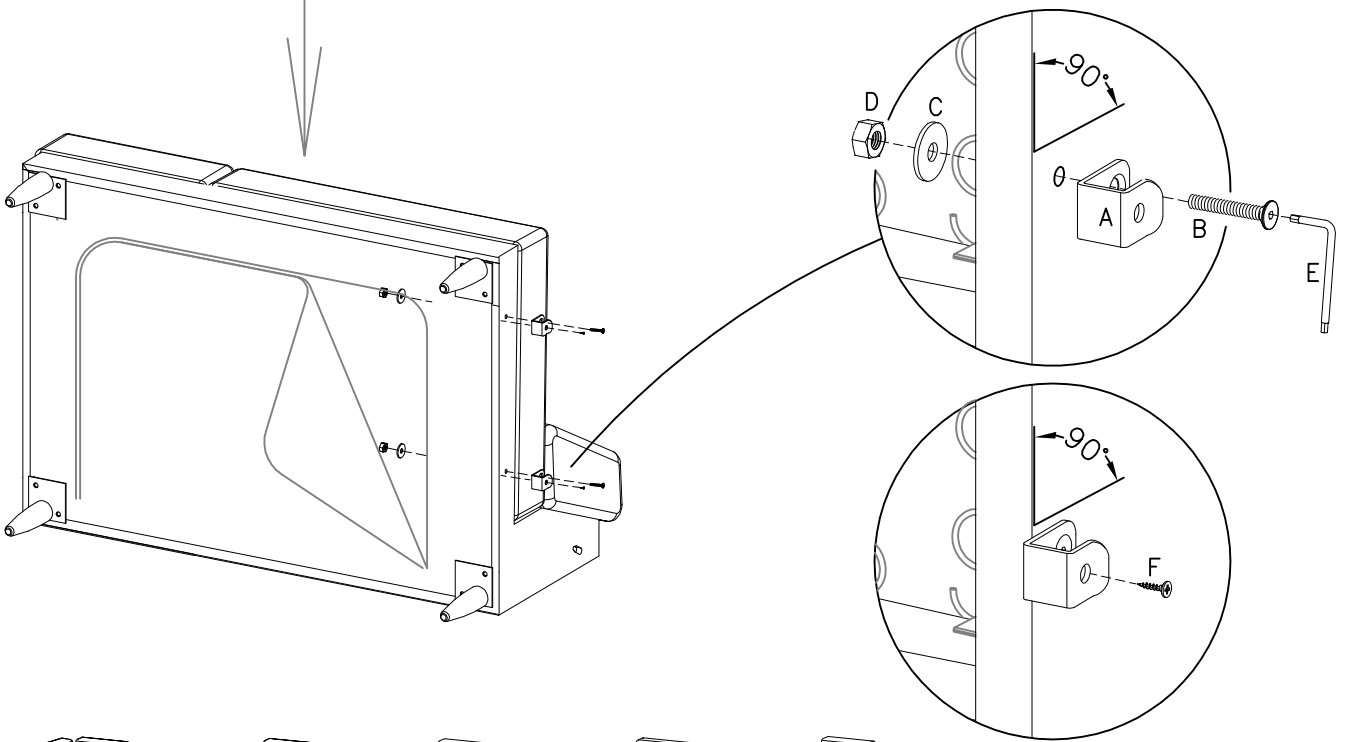


FIG. 3


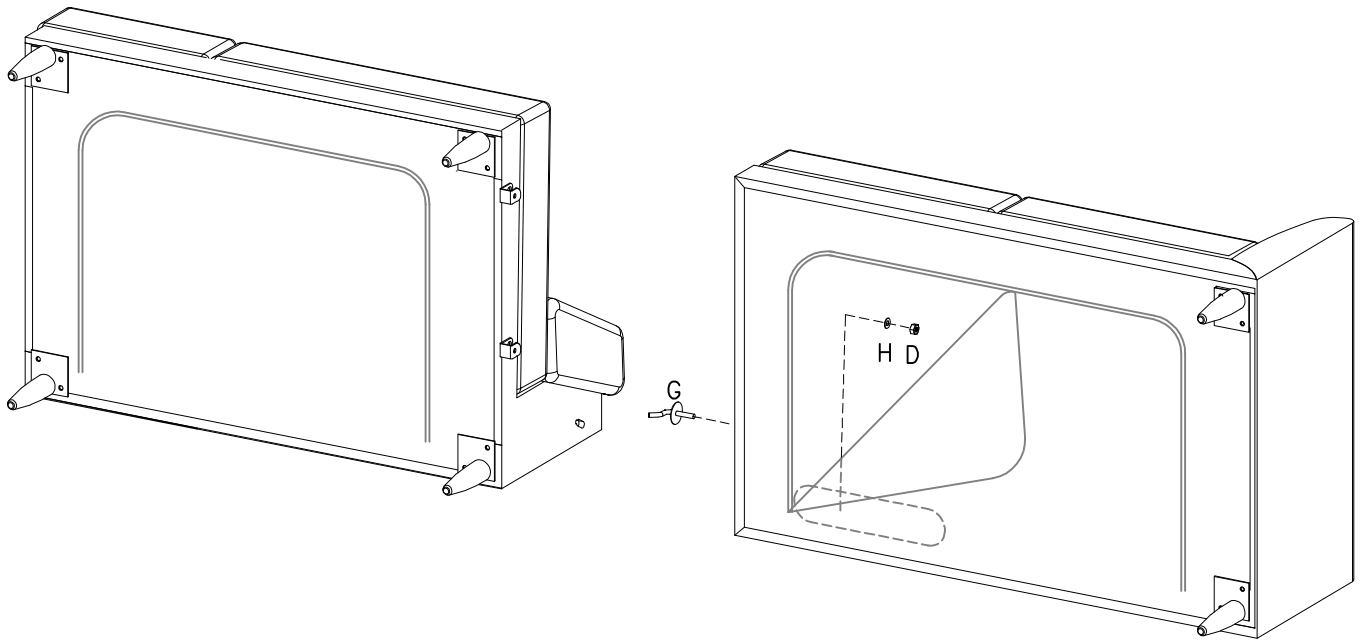


FIG. 4

