
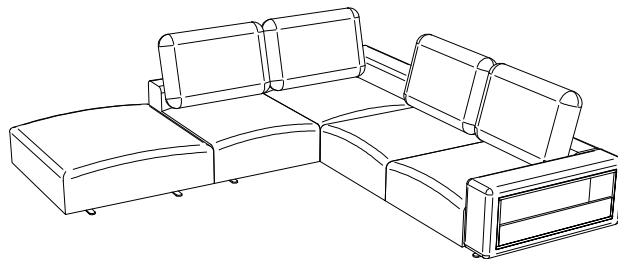
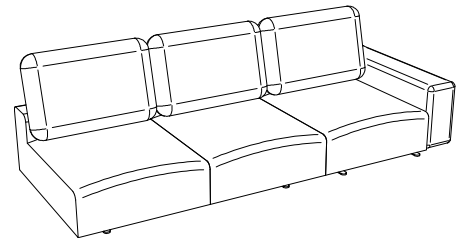
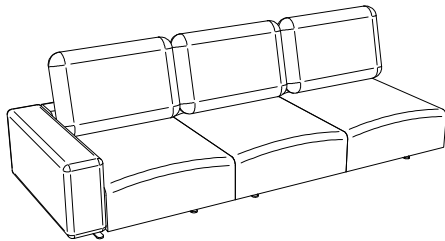
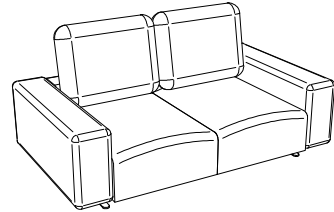


# Hampton


Design by BoConcept

Samvejledning - Assembly Instructions - Montageanleitung - Instructions d'assemblage - Instrucciones de montaje

## Examples

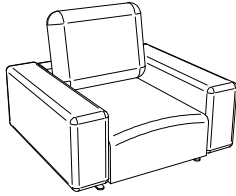


### Fittings

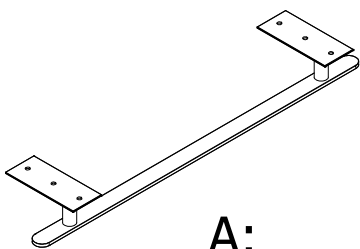


**A:**  
Hampton leg



**B:**  
Wheel




**C:**  
Screw M8x40

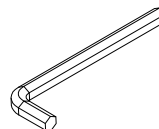

**D:**  
Allen key 6mm



**E:**  
Allen key 6mm

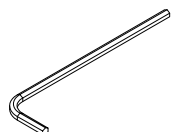



















**F:**  
Allen key 4mm

# Hampton

Design by BoConcept

Samvejledning - Assembly Instructions - Montageanleitung - Instructions d'assemblage - Instrucciones de montaje

## SOLO Modules

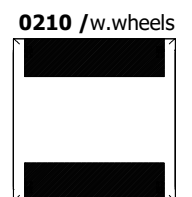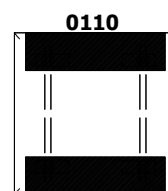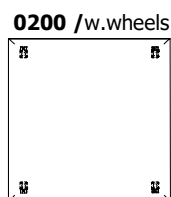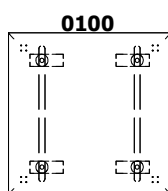

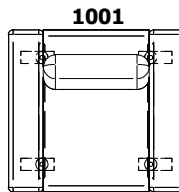
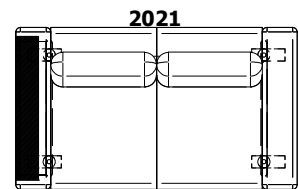
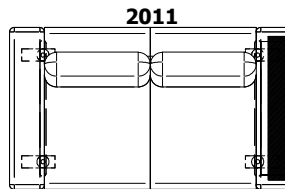
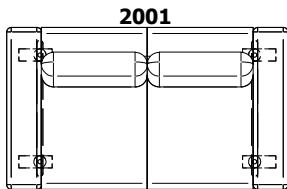
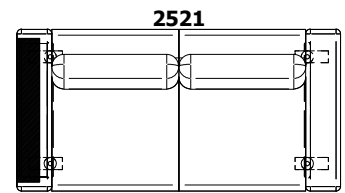
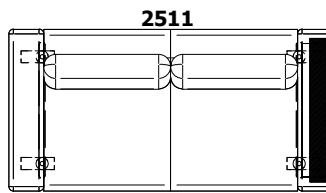
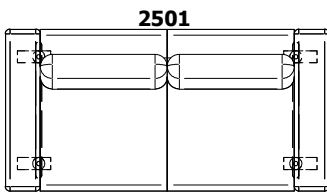
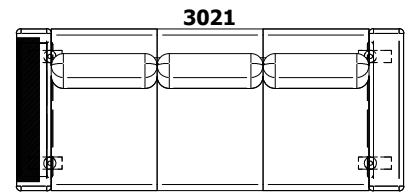
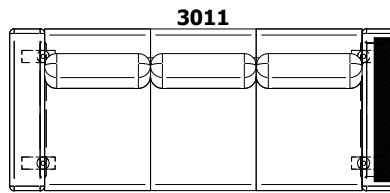
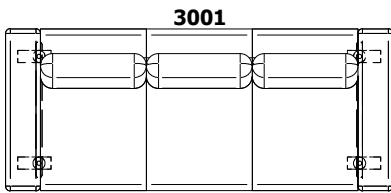


# Hampton

Design by BoConcept

Samlevejledning - Assembly Instructions - Montageanleitung - Instructions d'assemblage - Instrucciones de montaje

## BUILDING Modules

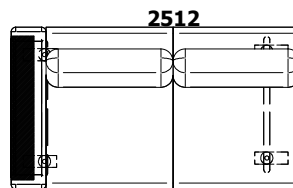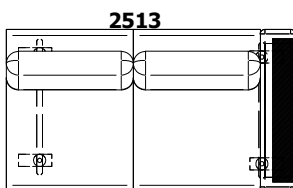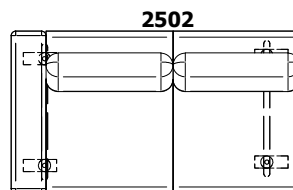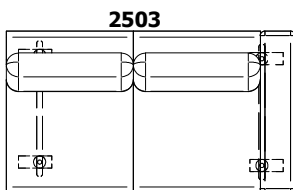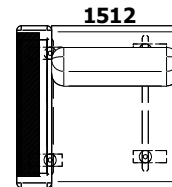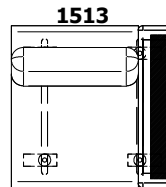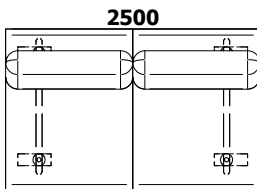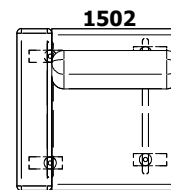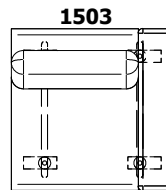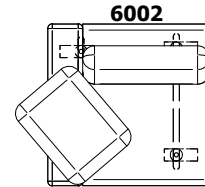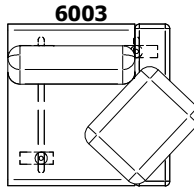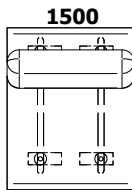


# Hampton

Design by BoConcept

Samvejledning - Assembly Instructions - Montageanleitung - Instructions d'assemblage - Instrucciones de montaje


Step 1:

Top view

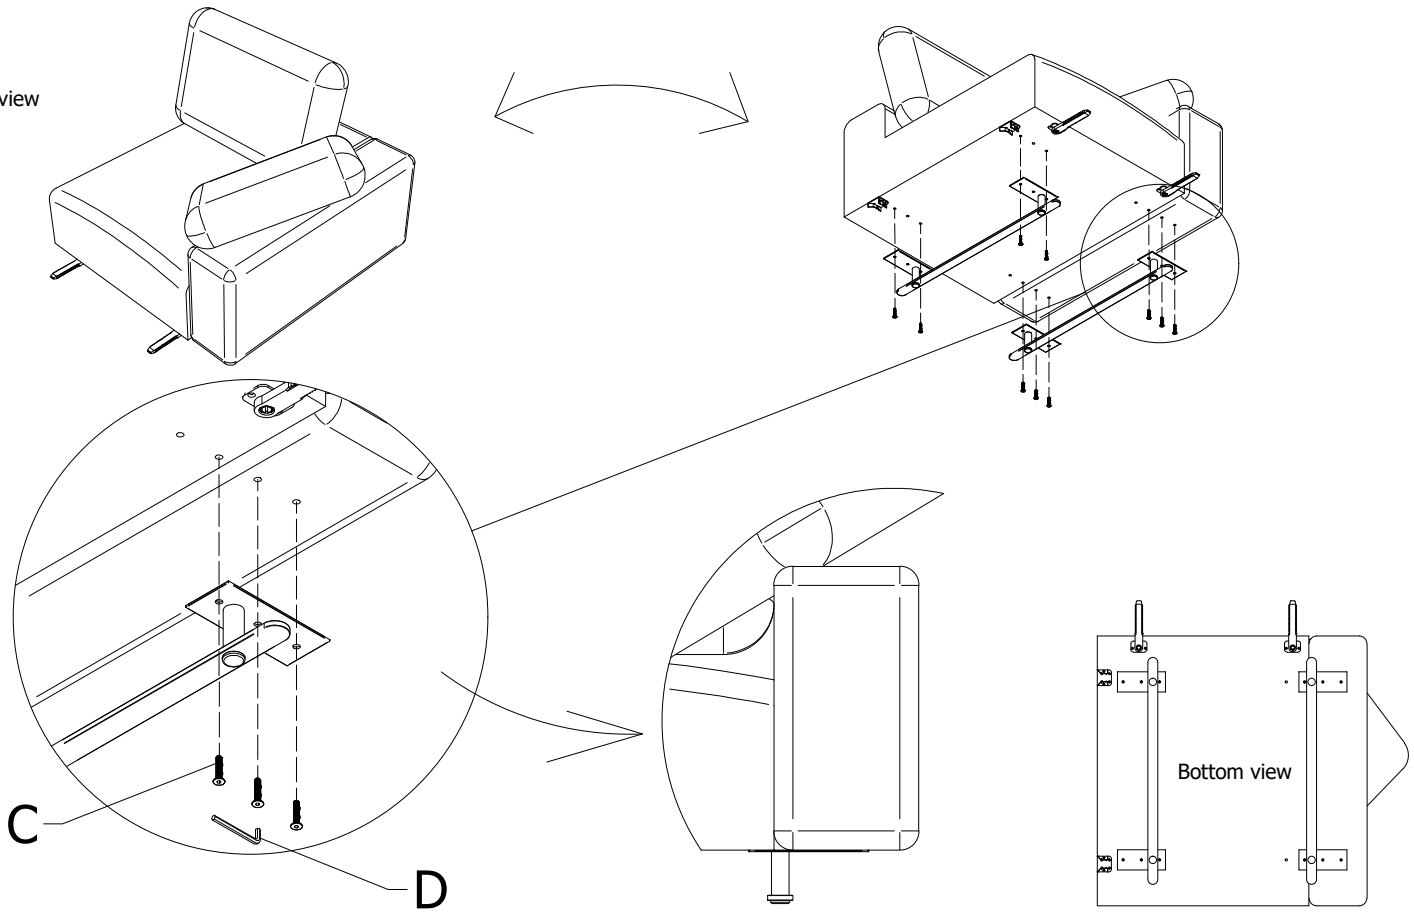

Step 2:

Top view

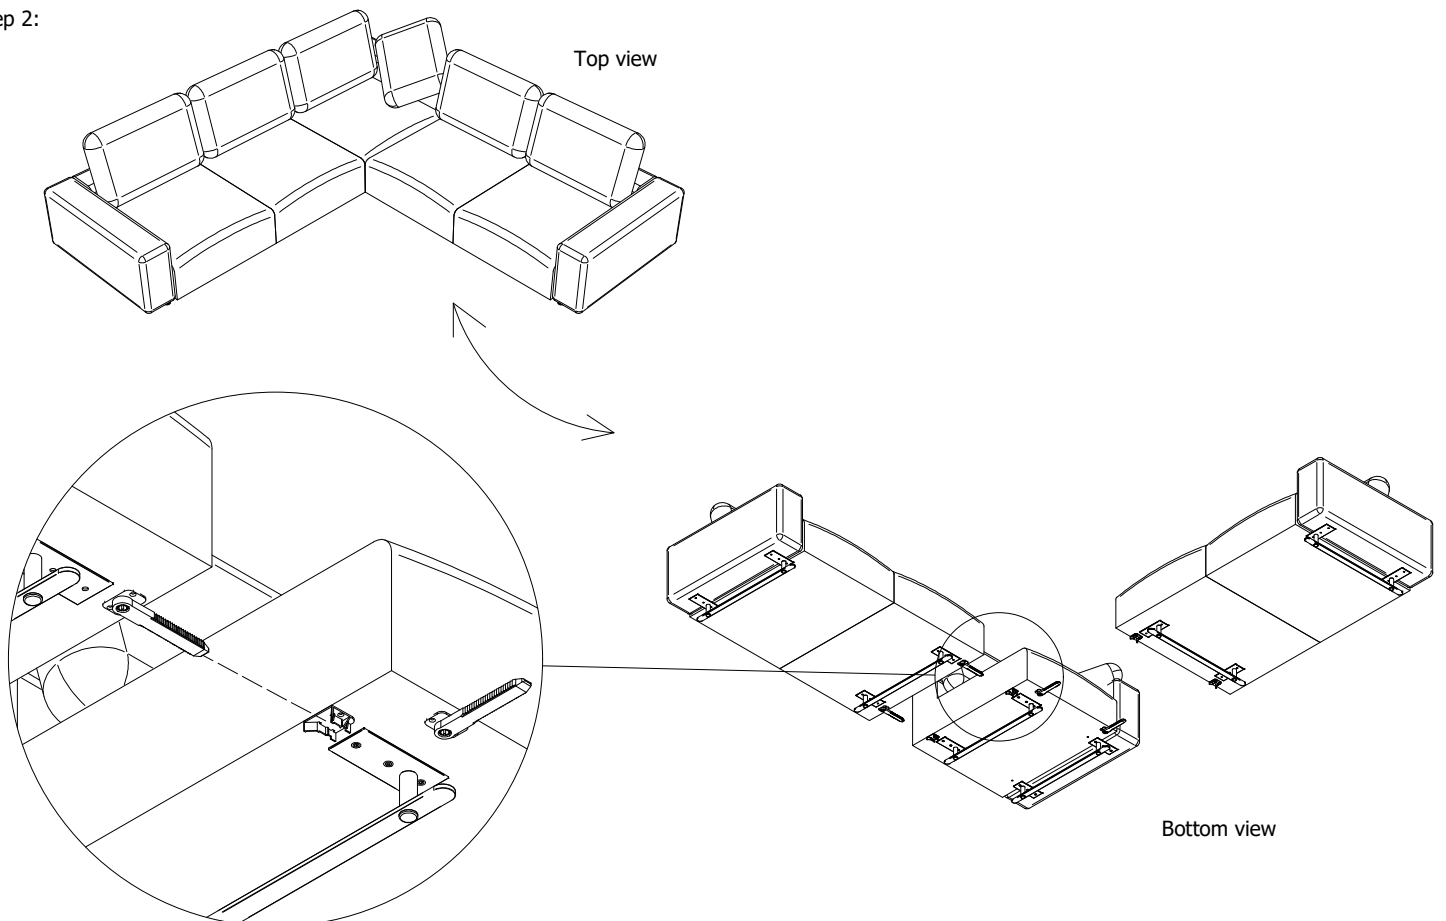

# Hampton

Design by BoConcept

Samvejledning - Assembly Instructions - Montageanleitung - Instructions d'assemblage - Instrucciones de montaje

## Cushion adjustment

