

# Adelaide

Design by BoConcept

Samvejledning - Assembly Instructions - Montageanleitung - Instructions d'assemblage - Instrucciones de montaje




**402-D108**  
2320 + 2120  
84,4/47x60x58,4 cm



**402-D109**  
2320 + 2130  
84,4/47x45x58,4



**402-D110**  
2320 + 2170  
84,4/47x45x58,4

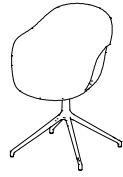

**402-D111**  
2320 + 2100  
84,4/47x60x58,4 cm



**402-D112**  
2320 + 2110  
84,4/47x45x58,4 cm



**402-D113**  
2320 + 2240  
84,4/47x60x58,4 cm




**402-D102**  
2320 + 2340  
83/47x57x59 cm




**402-D103**  
3220 + 2350  
83/47x57x59

leg base 2320

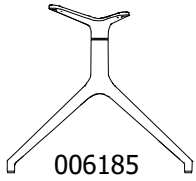

006185

125kg/275lb

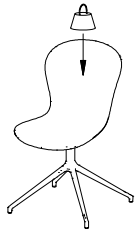

Beslag - Beschläge -  
Fittings - Set de montage  
937000117 x 2




**A X 4**  
979900020  
Ø10ø7x1 mm



**B X 4**  
970003125  
M6x12 mm



**C x 1**  
1979300004  
4 mm



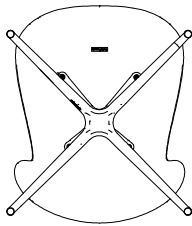


Sparepart bag:  
937000122



005969

Step 1: 50%  
Step 2: 100 %

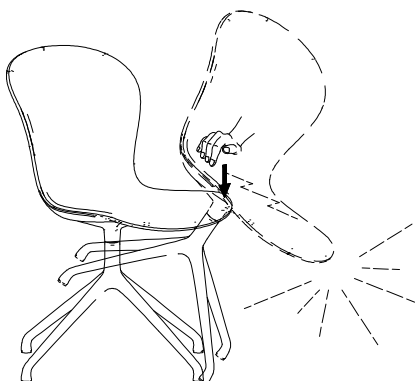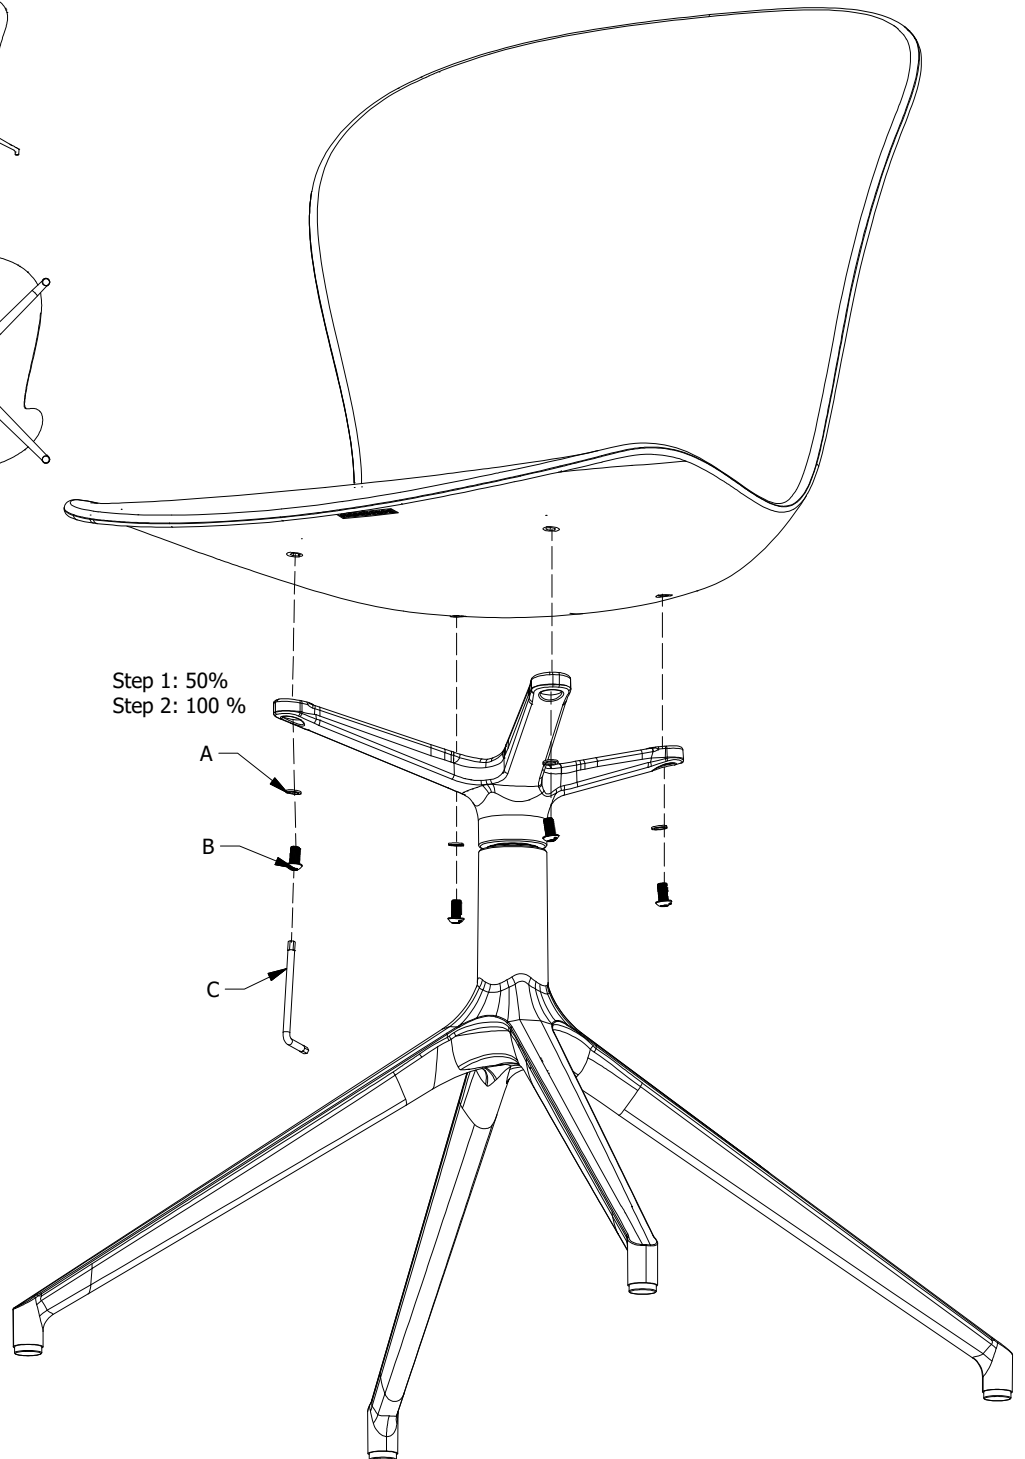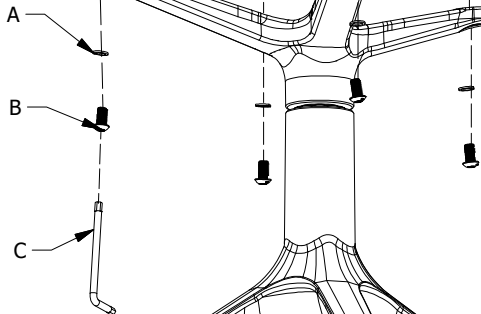

**ATTENTION!**