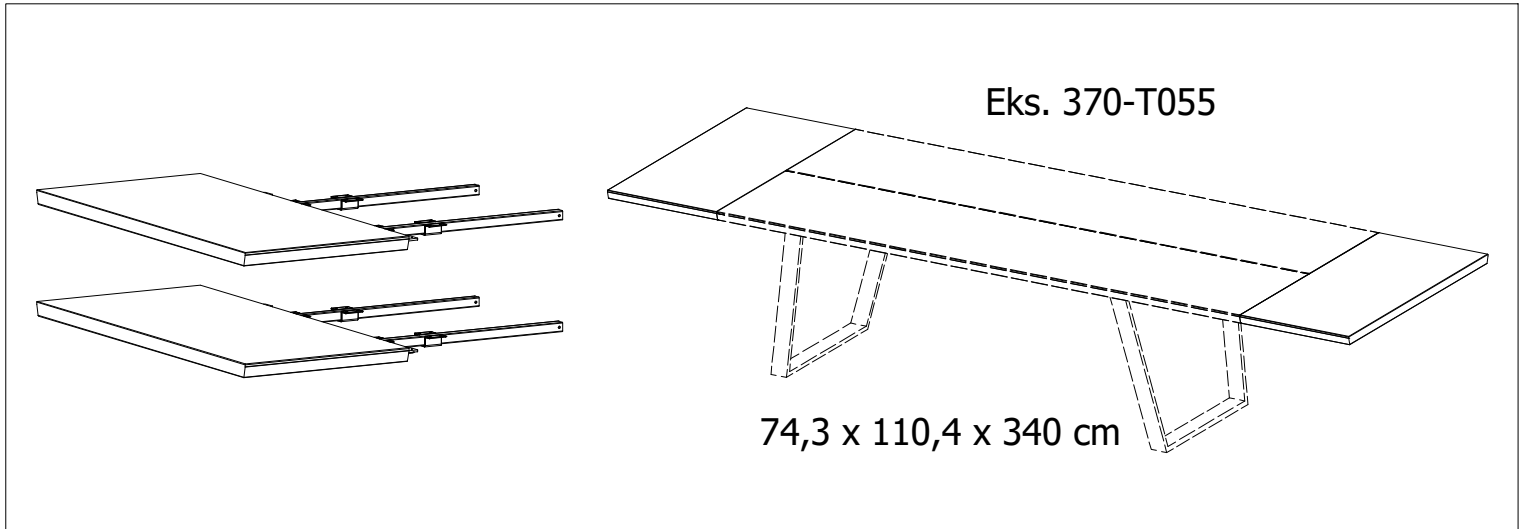


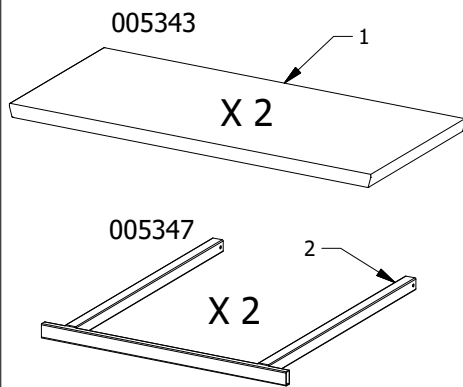
Vancouver

Design by BoConcept

Samvejledning - Assembly Instructions - Montageanleitung - Instructions d'assemblage - Instrucciones de montaje



Korpus - Korpus - Carcase - Carcasse
Model 5880



Beslag - Beschlage - Fittings - Set de montage 937000042
Model 5880

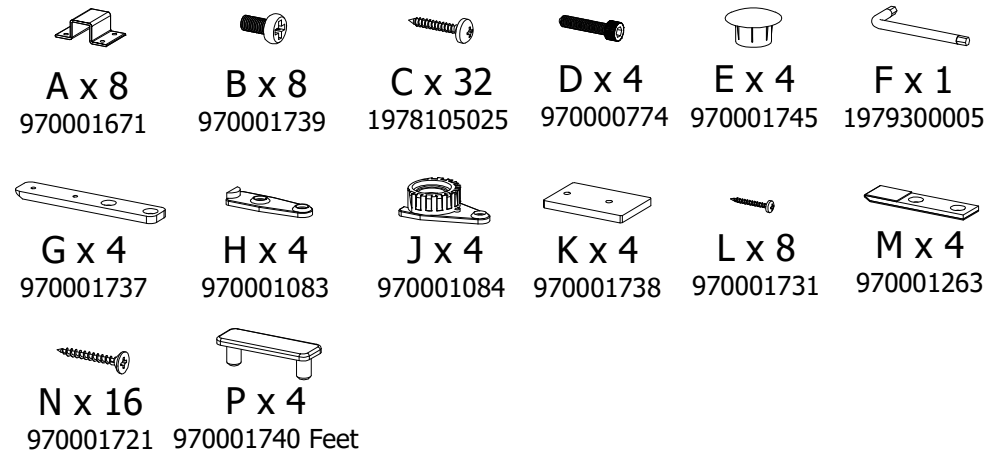


FIG. 1

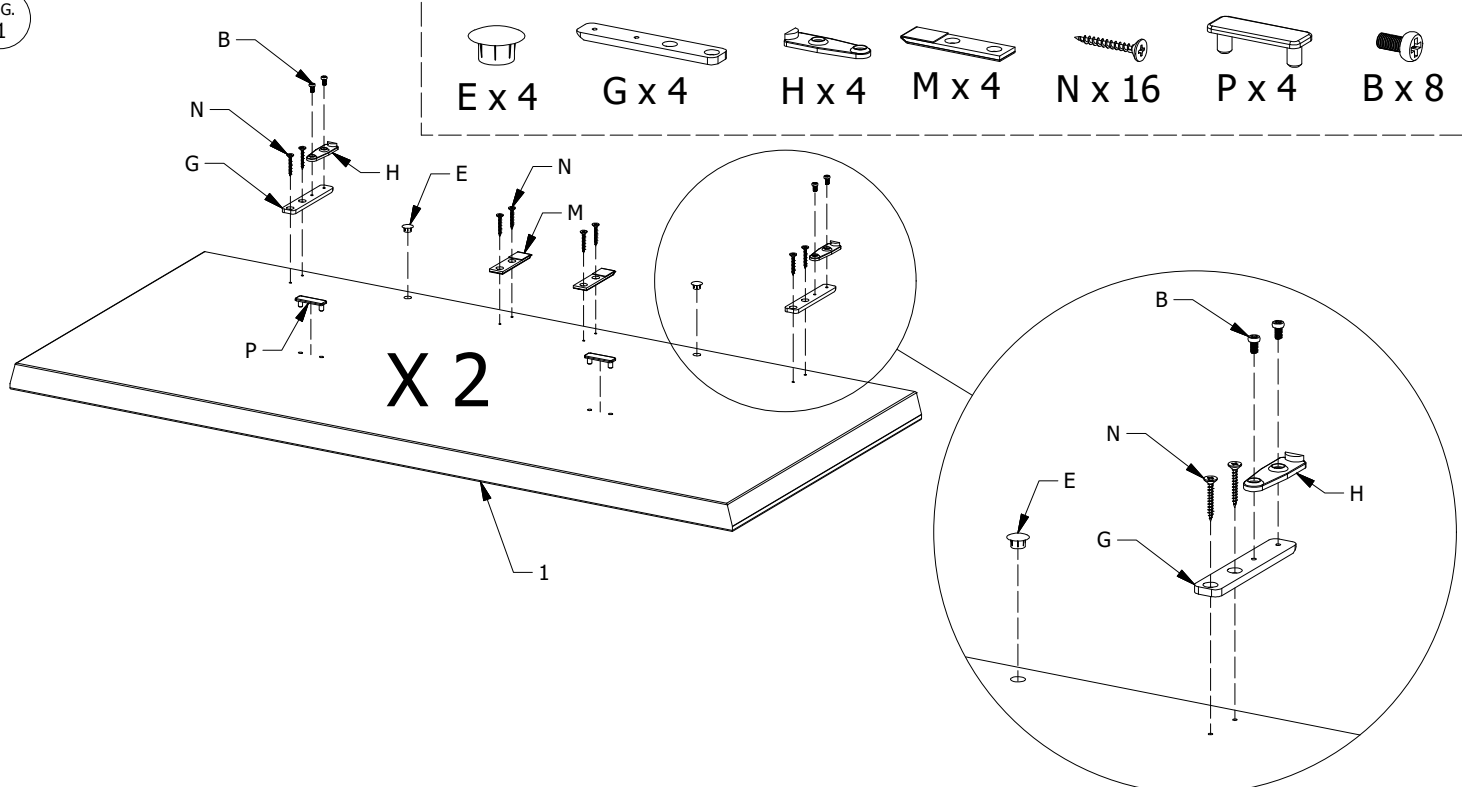







FIG. 2

- 
A x 8
- 
C x 32
- 
J x 4
- 
K x 4
- 
L x 8

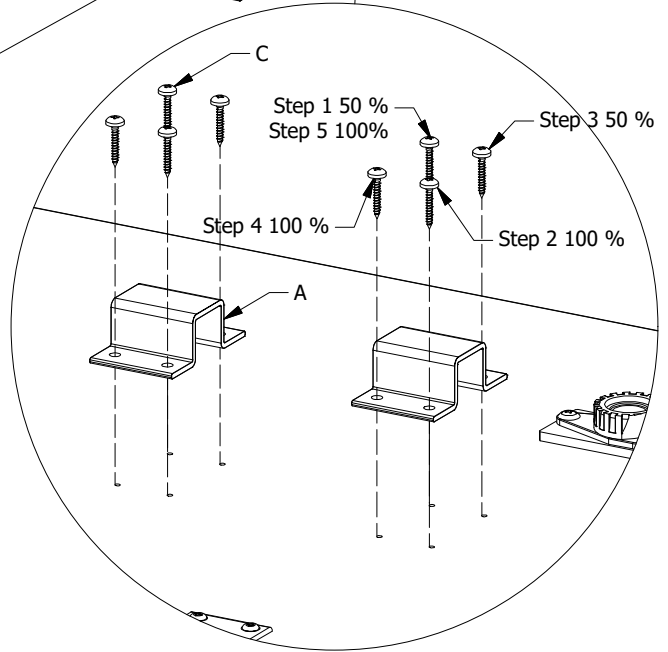
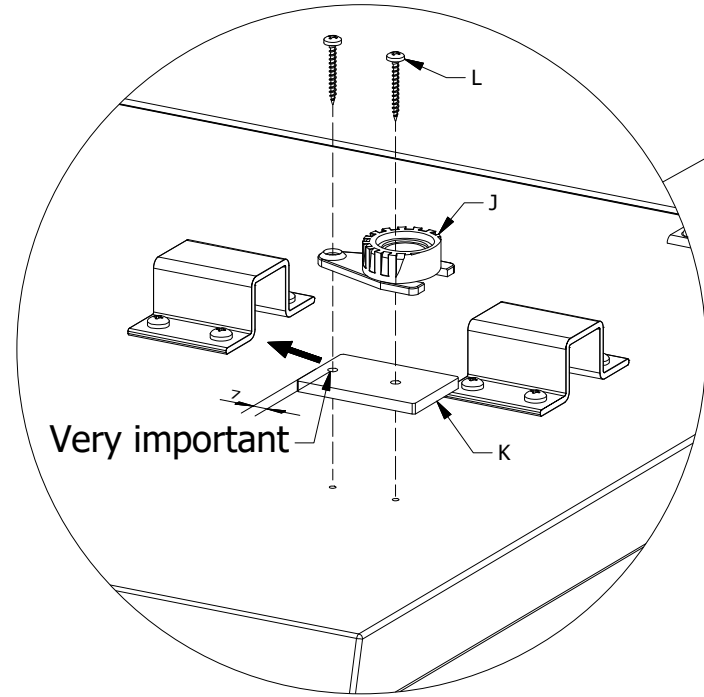
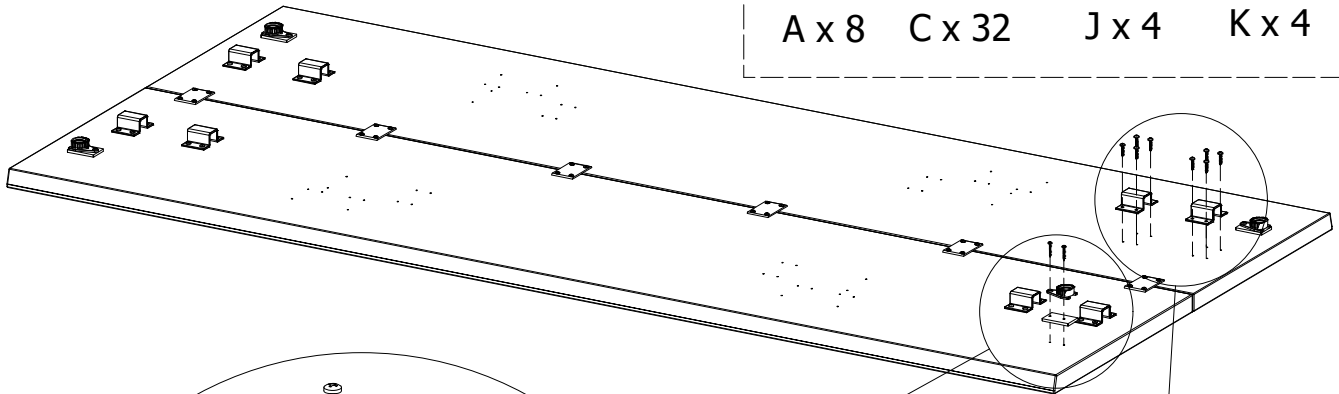





FIG. 3

- 
B x 2
- 
D x 4
- 
F x 1

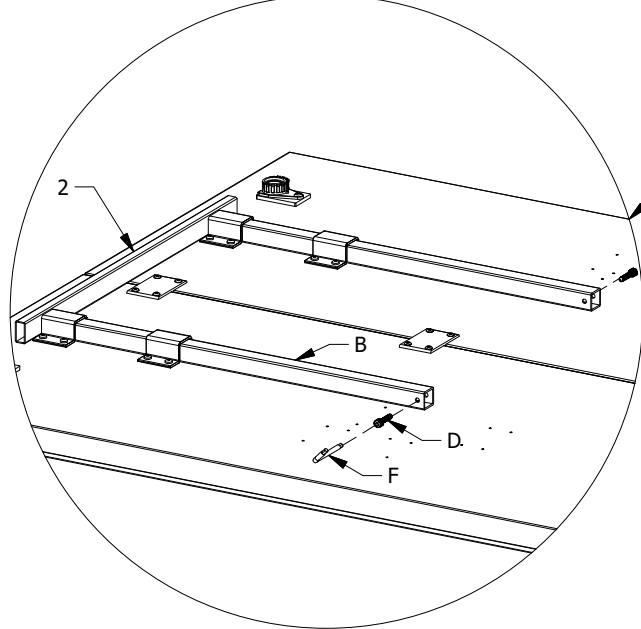
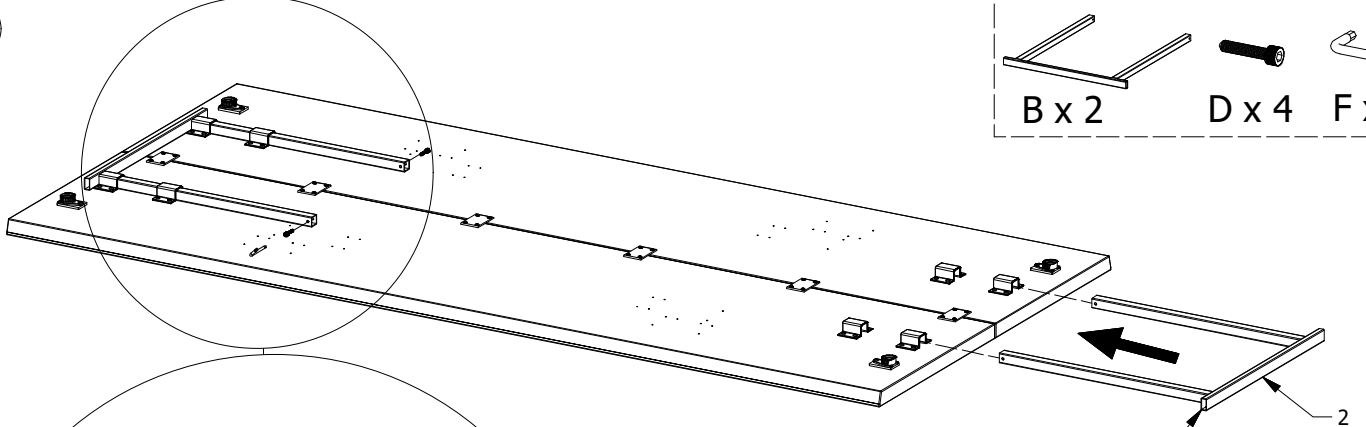


FIG. 4

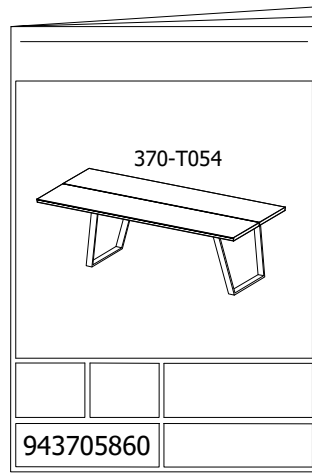
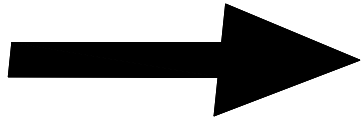
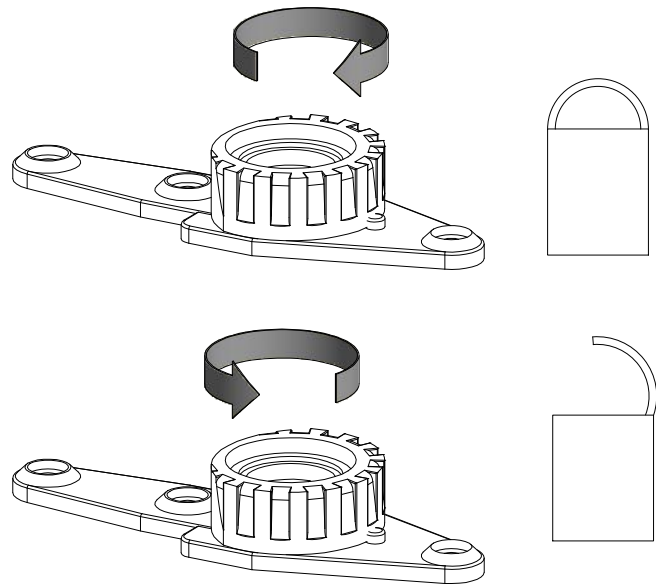
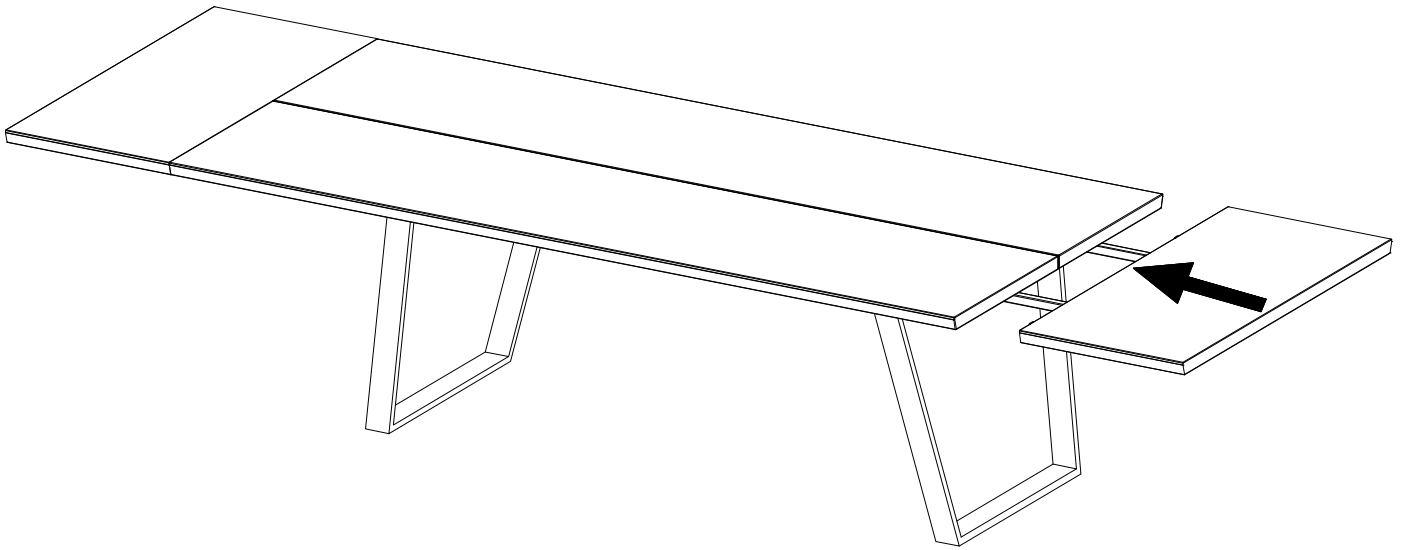


FIG. 5



- DK Ved reklamation oplyses følgende:
- D Im Reklamationsfall, bitte folgendes erläutern:
- US In case of claims, please state the following:
- F En cas de réclamation, veuillez indiquer:
- NL Bij service volgene mededelen
- E En caso de reclamación, indicar lo siguiente:
- P No caso de reclamação, por favor indique o seguinte:
- JP お気づきの点等ございましたら、以下の点をお知らせください。

Example!

