


# Arlington

Design by BoConcept



Samvejledning - Assembly Instructions - Montageanleitung - Instructions d'assemblage - Instrucciones de montaje

390-8050  
390-8060  
390-8080  
390-8090

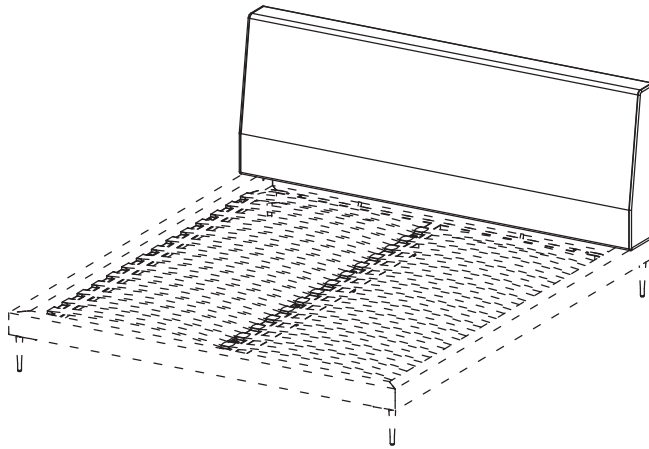

Coll. 1: 8050, 8060, 8080, 8090

Beslag - Beschläge - Fittings - Set de montage  
No. 937000158

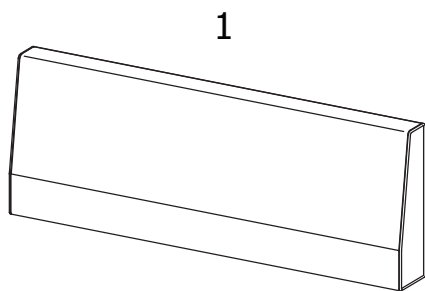

**A x 4**  
M8x63mm



**B x 4**  
M8



**C x 4**  
D25 d8,5x1,5mm




**D x 1**  
10mm/13mm

FIG.  
1



A x 4

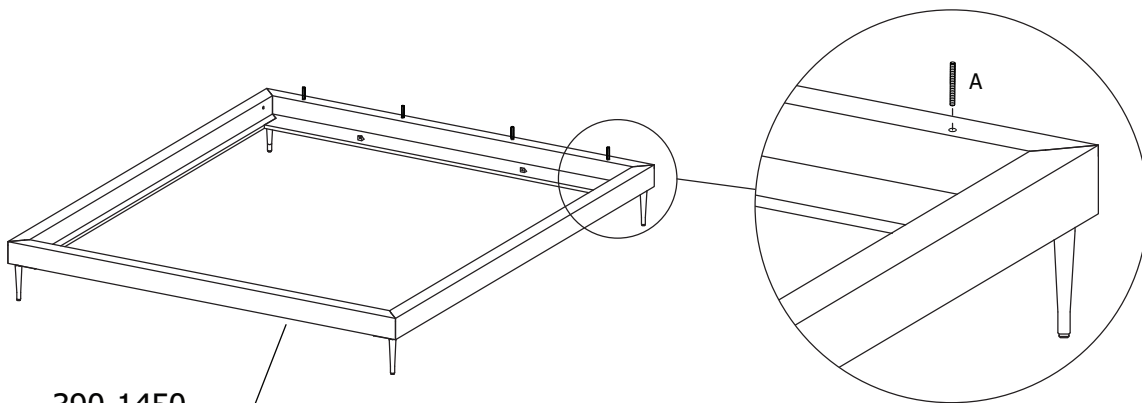

390-1450  
390-1460  
390-1480  
390-1490

FIG.  
2



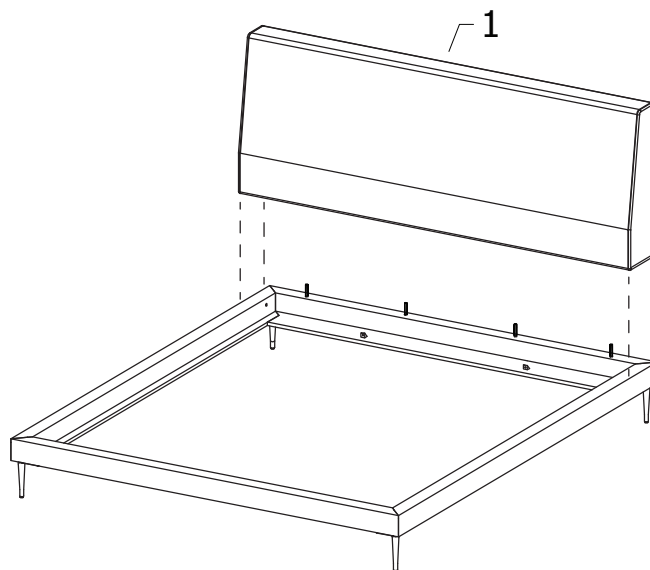


FIG.  
3

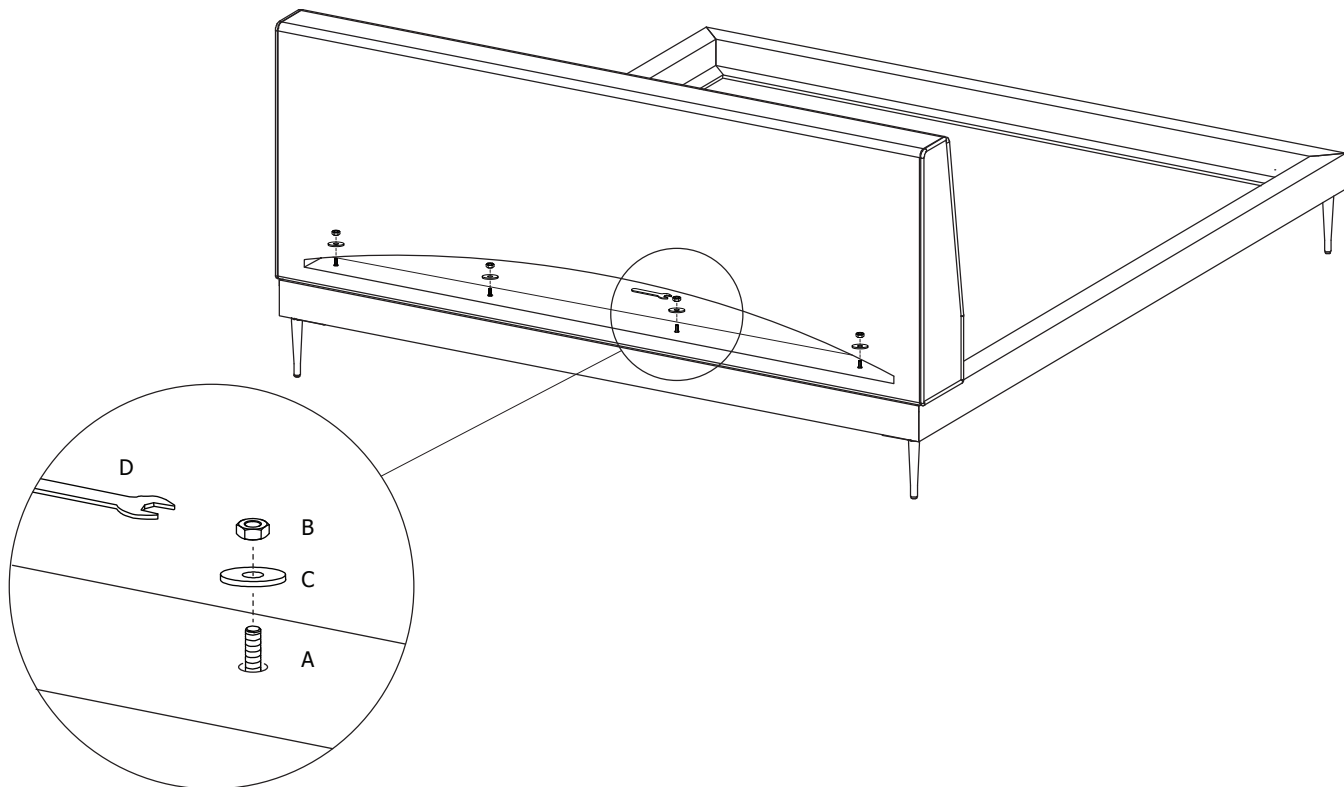

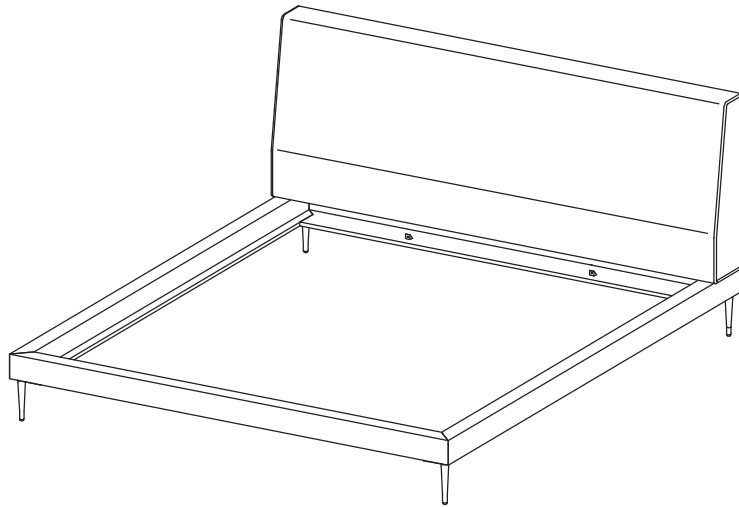

- DK Ved reklamation oplyses følgende:  
 D Im Reklamationsfall, bitte folgendes erläutern:  
 US In case of claims, please state the following:  
 F En cas de réclamation, veuillez indiquer:  
 NL Bij service volgene mededelen  
 E En caso de reclamación, indicar lo siguiente:  
 P No caso de reclamação, por favor indique o seguinte:  
 JP お気づきの点等ございましたら、以下の点をお知らせください。

Example!

