


Vancouver


Design by BoConcept

Samvejledning - Assembly Instructions - Montageanleitung - Instructions d'assemblage - Instrucciones de montaje

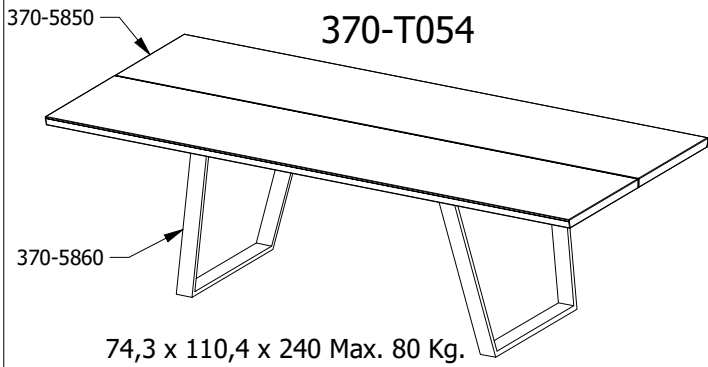


Korpus - Korpus - Carcase - Carcasse
Col. 5851 x 2

005341 Veneer
005501 Solid Wood

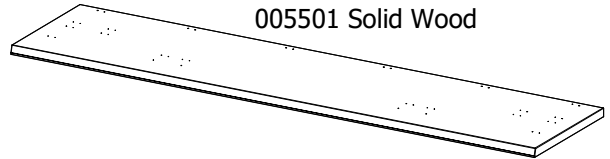

Beslag - Beschläge - Fittings - Set de montage Model 5850
937000039




A x 6
970001669




B x 24
970001419
6,2x13

Korpus - Korpus - Carcase - Carcasse
Model 5860

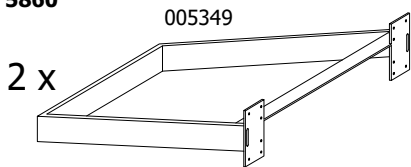

Fittingbag:
937000109




005398

Beslag - Beschläge - Fittings - Set de montage Model 5860
937000038





C x 24
970001749
5,0x30

FIG.
1




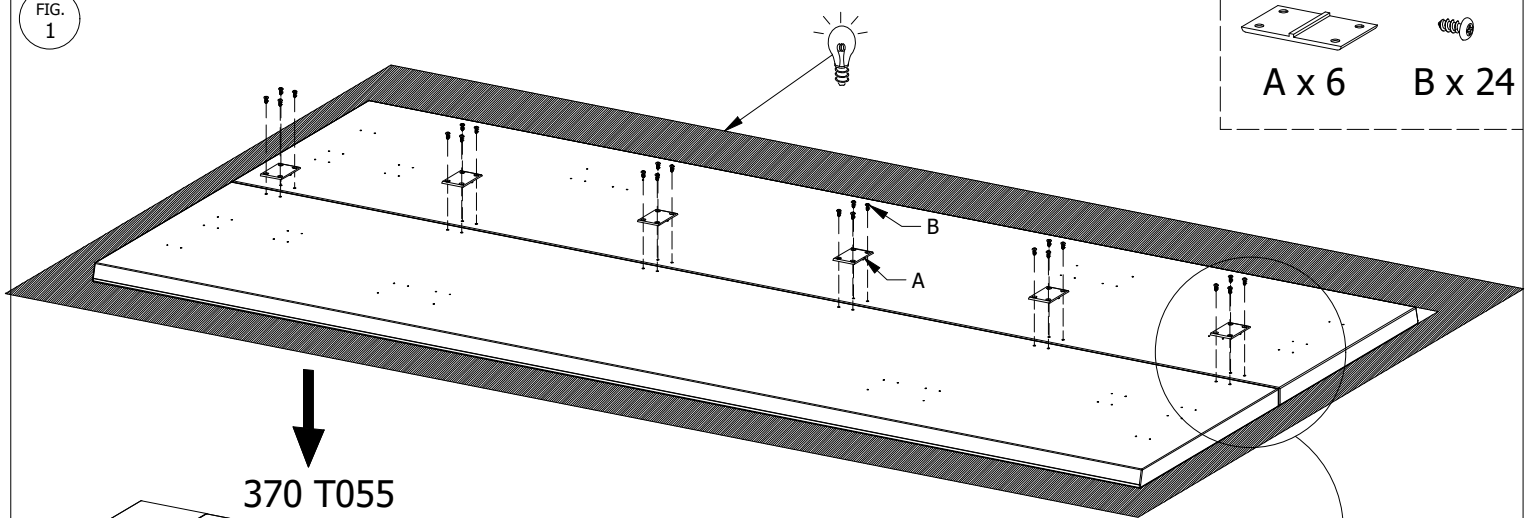


370 T055

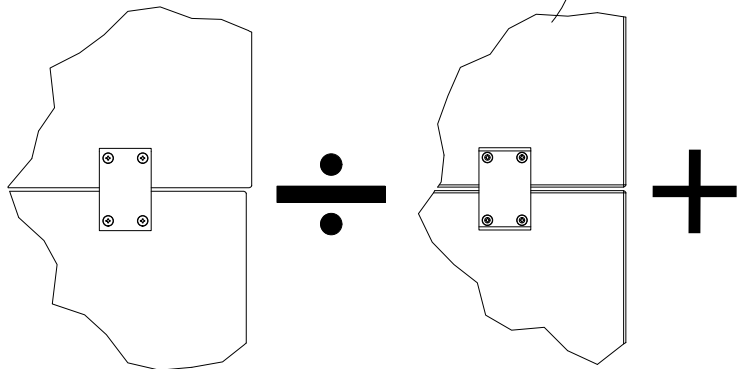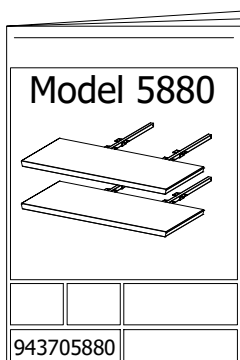



C x 24

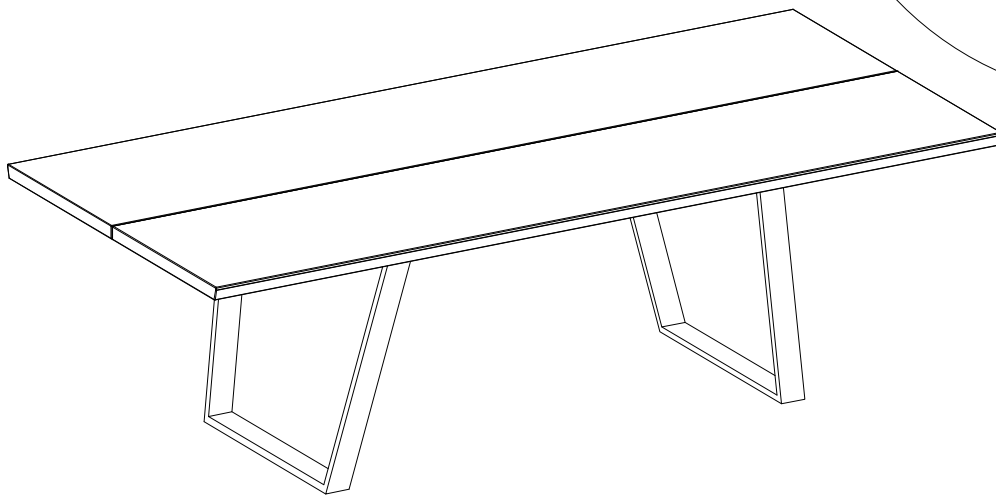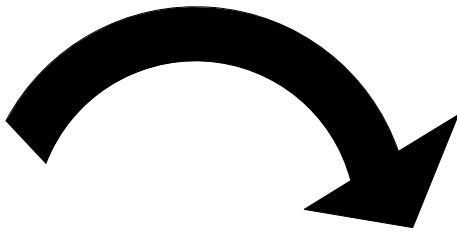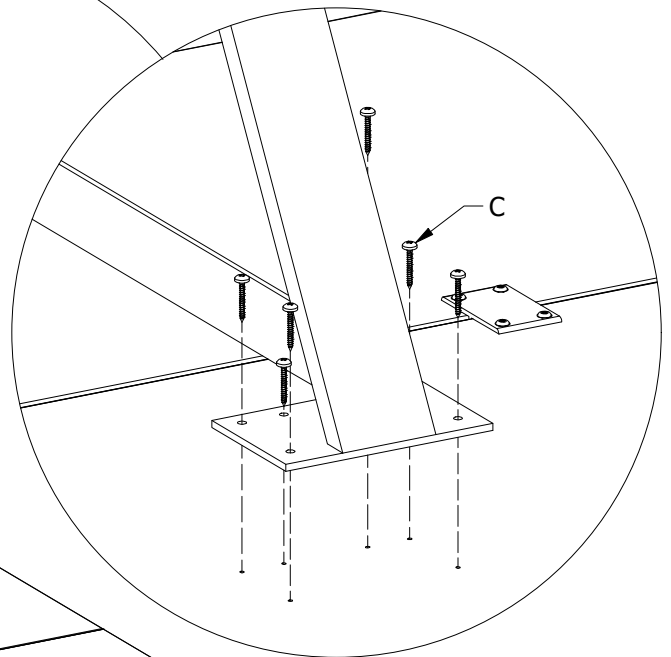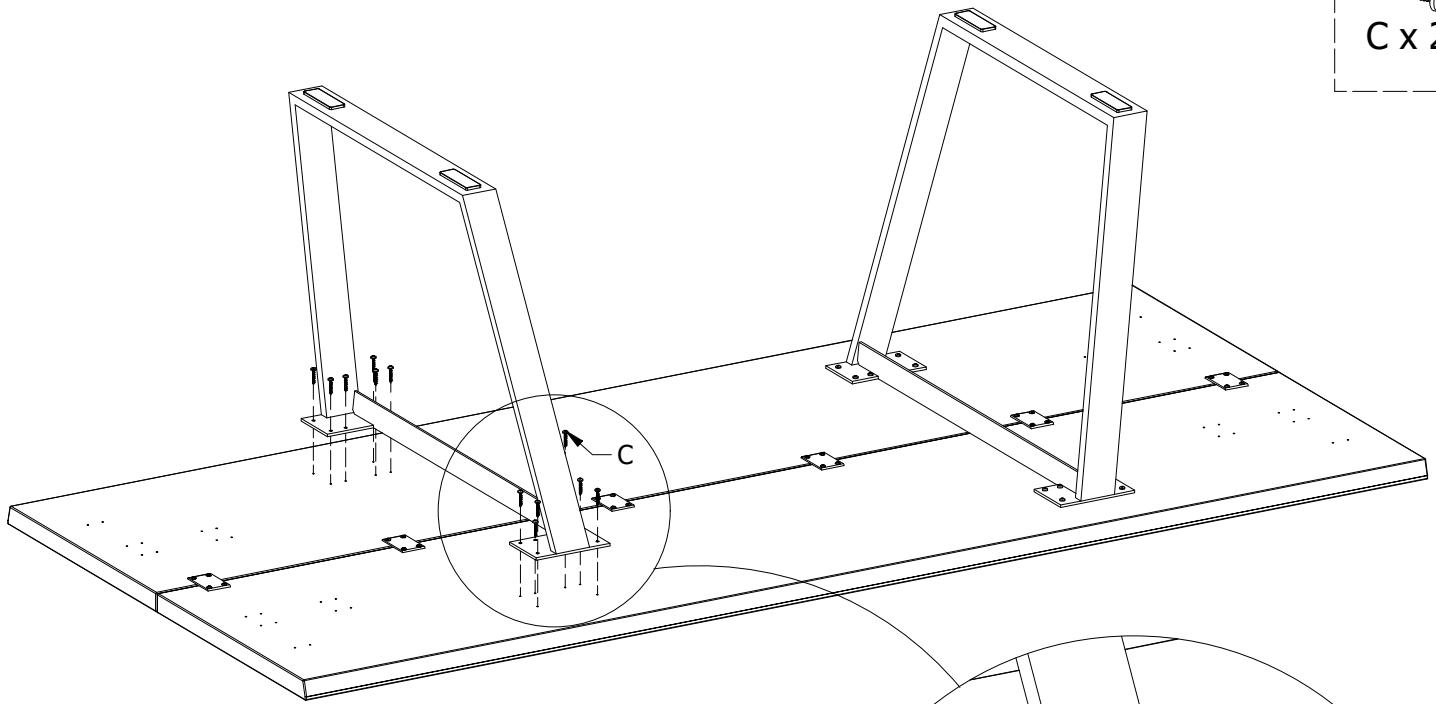

DK Ved reklamation oplyses følgende:

D Im Reklamationsfall, bitte folgendes erläutern:

US In case of claims, please state the following:

F En cas de réclamation, veuillez indiquer:

NL Bij service volgene mededelen


E En caso de reclamación, indicar lo siguiente:

P No caso de reclamação, por favor indique o seguinte:

JP お気づきの点等ございましたら、以下の点をお知らせください。

Example!

Korpus - Korpus - Carcase - Carcasse



Beslag - Fittings - Beschläge - Set de Montage

