


# Lausanne

Design by BoConcept

Samvejledning - Assembly Instructions - Montageanleitung - Instructions d'assemblage - Instrucciones de montaje

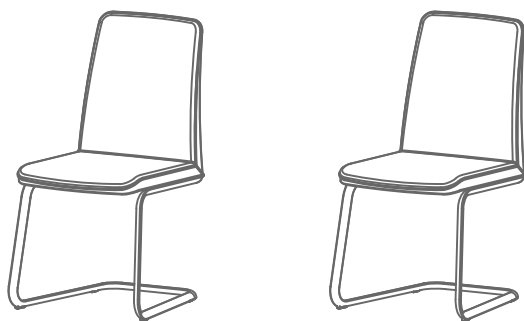

125kg/275lb




**D053** (2210+2210)

hxbxd: 90,5/47x48,5x57 cm

Korpus - Korpus - Carcase - Carcasse  
Lausanne 400-2210

No. 937000012

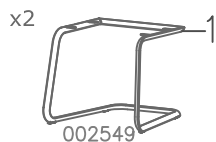

Seat 402-2210



No. 937000086






-  x2  
970000945
-  x1  
970001251
-  x1  
970001252

FIG. 1



Step 1

75%

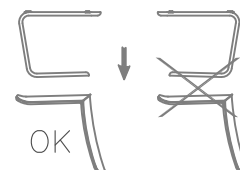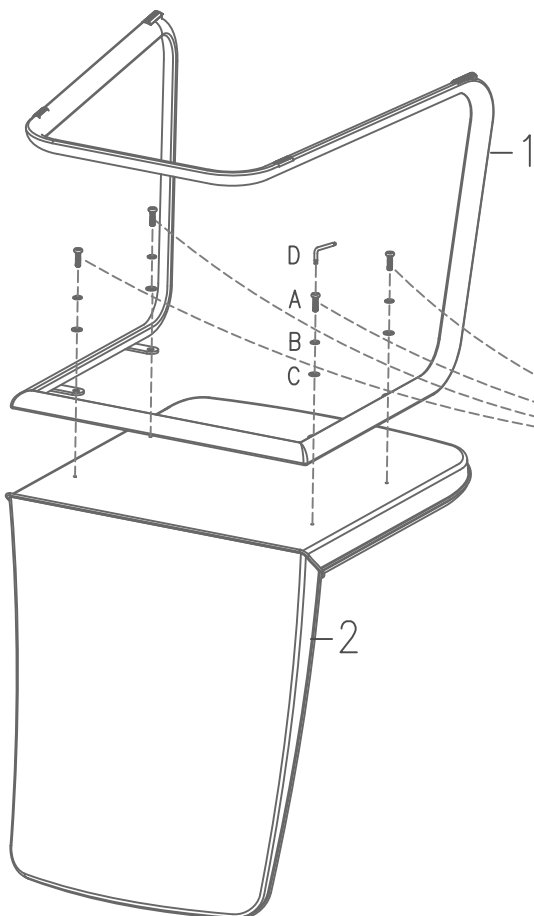

Step 2

100%

