

Adelaide

Design by BoConcept


Samvejledning - Assembly Instructions - Montageanleitung - Instructions d'assemblage - Instrucciones de montaje



402-D114
2330 + 2120
88/50x60x58,4 cm




402-D115
2330 + 2130
88/50x45x58,4 cm

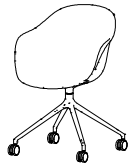

402-D117
2330 + 2100
88/50x60x58,4 cm



402-D118
2330 + 2110
88/50x45x58,4 cm

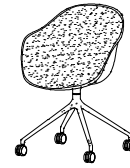


402-D119
2330 + 2240
88/50x60x58,4 cm





402-D136
2330 + 2190
84,4/47x45x58,4 cm

Leg base 2330

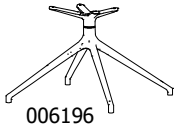

006196

125kg/275lb

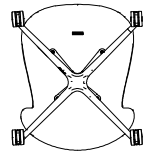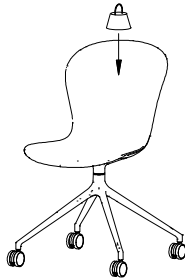


Beslag - Beschläge -
Fittings - Set de montage
937000117 x 2



A X 4
979900020
Ø10ø7x1 mm




B X 4
970003125
M6x12 mm



C x 1
1979300004
4 mm

Sparepart box. 937000124

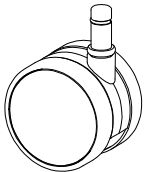

D x 4
970001830

Step 1: 50%
Step 2: 100 %

