
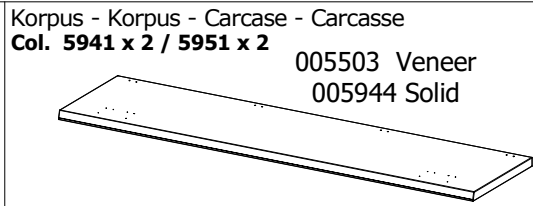





# Vancouver

Design by BoConcept

Samvejledning - Assembly Instructions - Montageanleitung - Instructions d'assemblage - Instrucciones de montaje

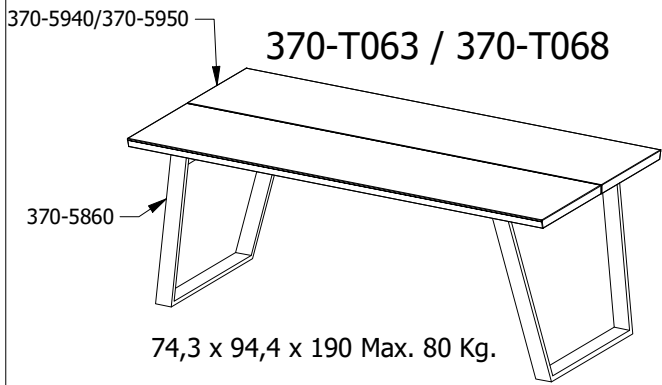



Beslag - Beschläge - Fittings - Set de montage Model 5940  
937000094

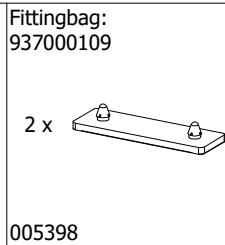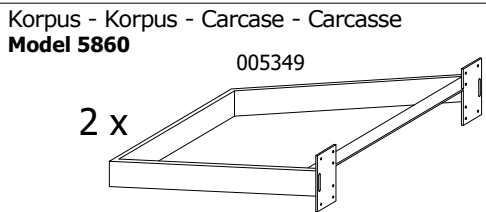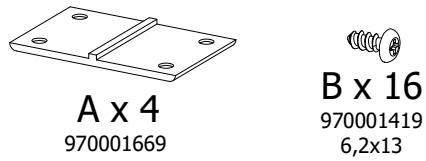

Beslag - Beschläge - Fittings - Set de montage Model 5860  
937000038





Værktøj - Werkzeuge - Tools - Outils

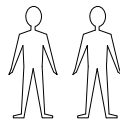


**A x 4**

**B x 16**

FIG.  
1

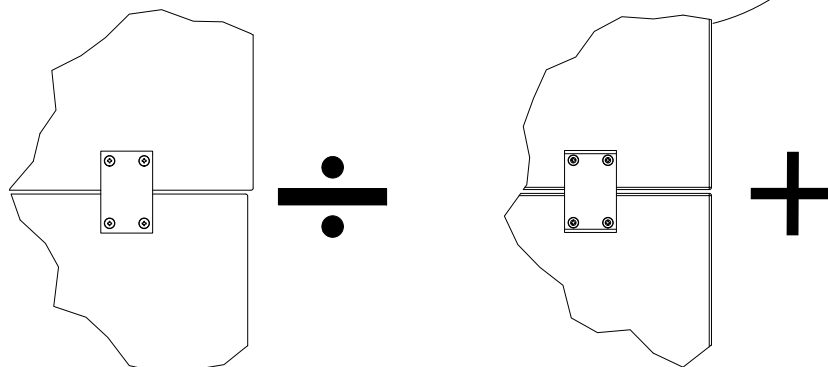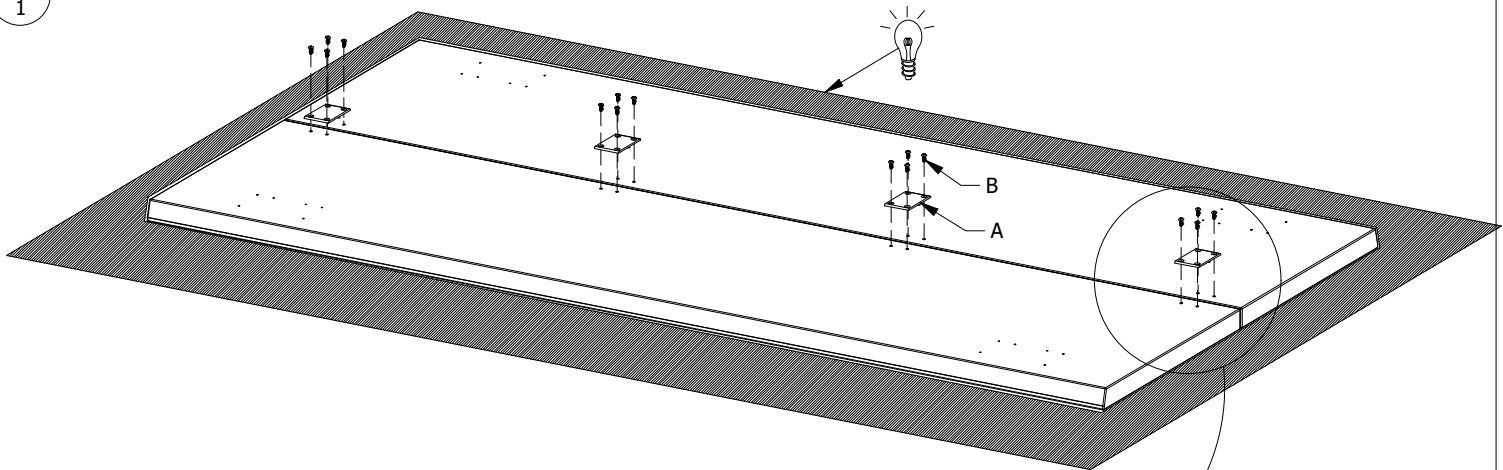


C x 24

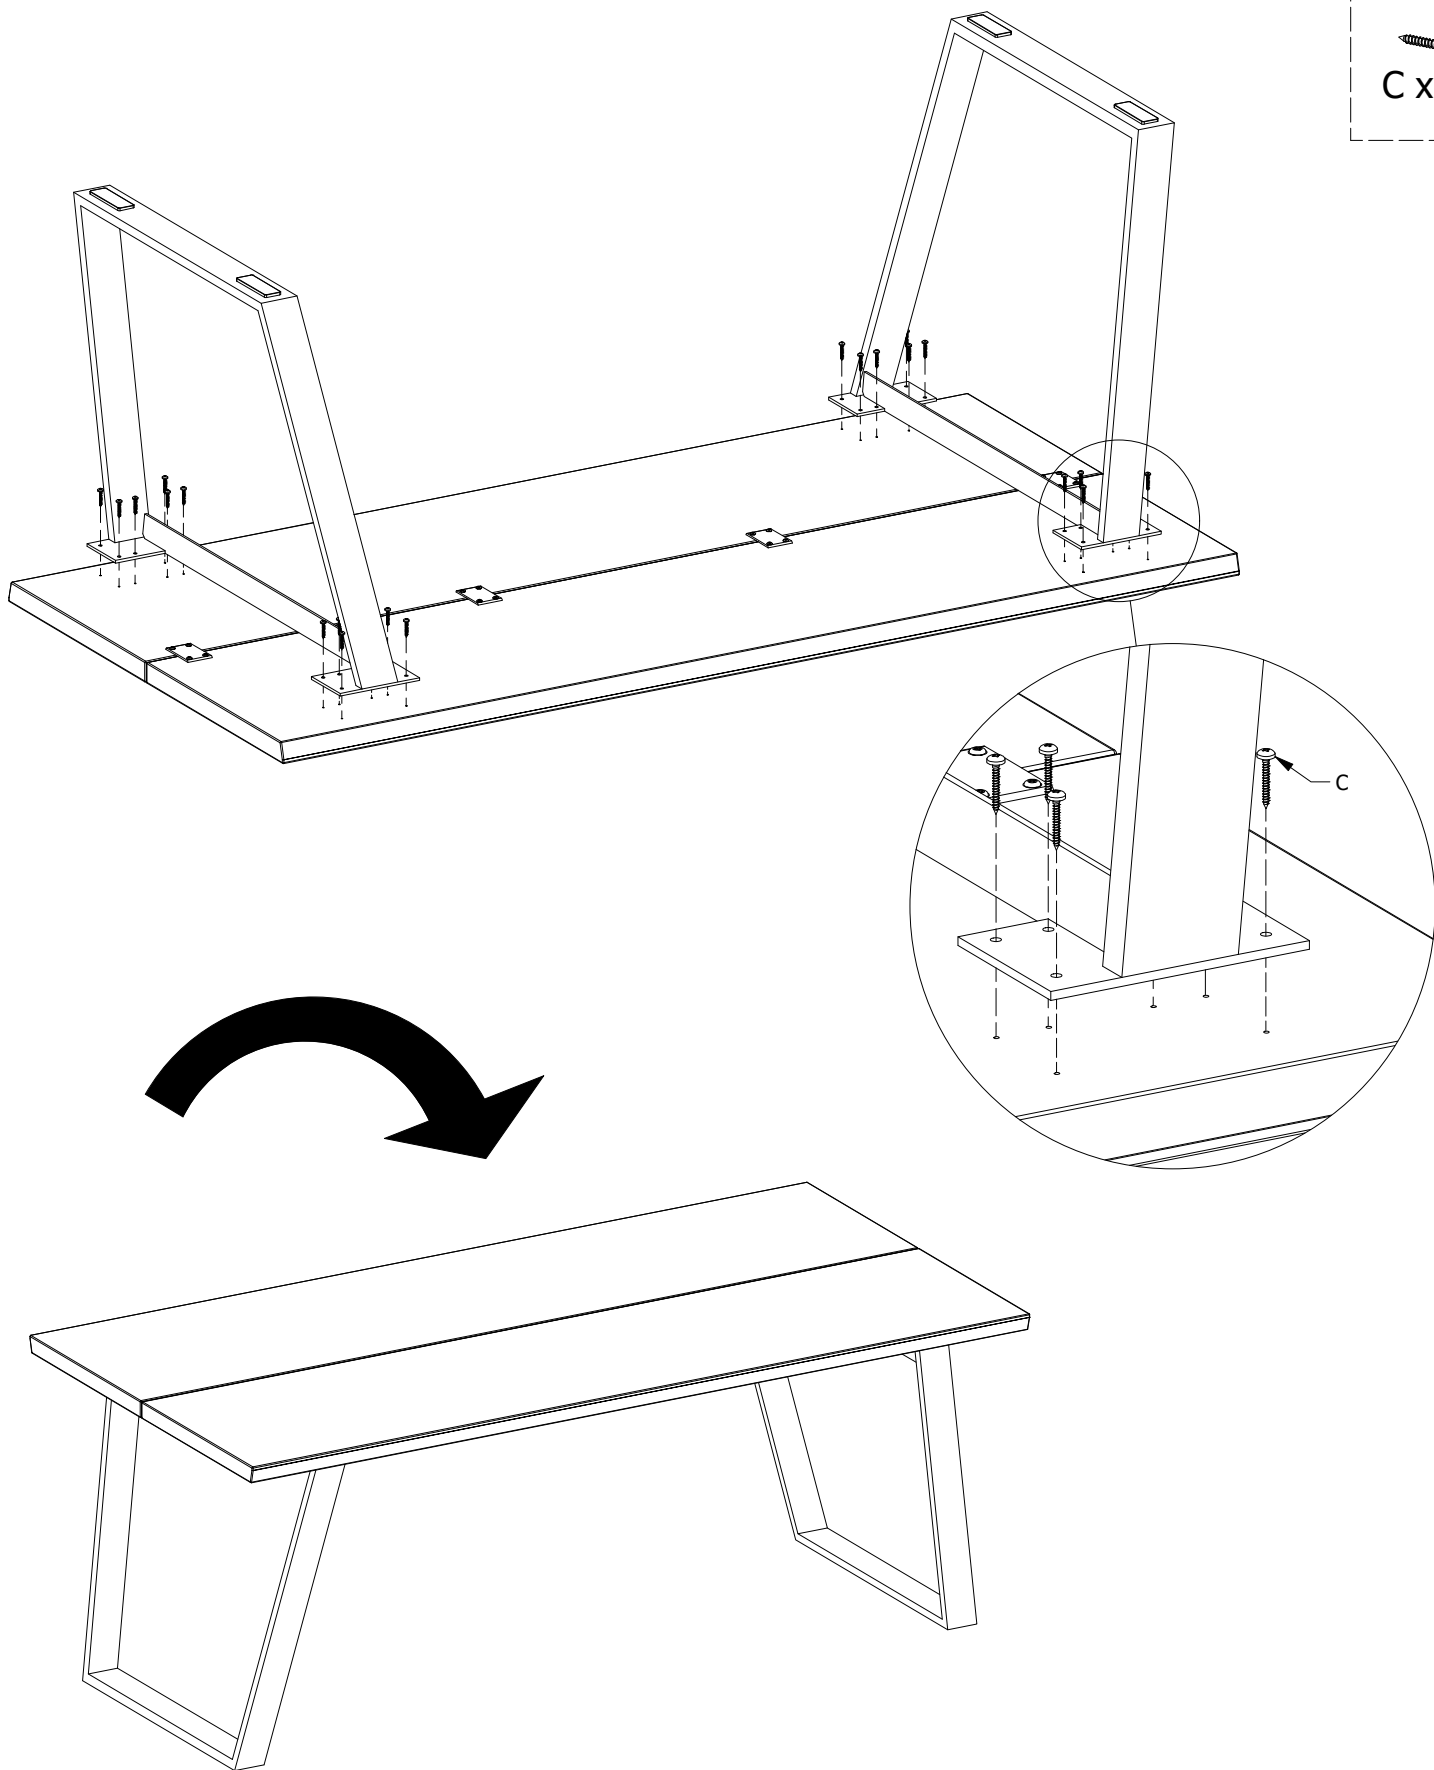

- DK Ved reklamation oplyses følgende:
- D Im Reklamationsfall, bitte folgendes erläutern:
- US In case of claims, please state the following:
- F En cas de reclamation, veuillez indiquer:
- NL Bij service volgene mededelen
- E En caso de reclamacion, indicar lo siguiente:
- P No caso de reclamação, por favor indique o seguinte:
- JP お気づきの点等ございましたら、以下の点をお知らせください。

**Example!**

Korpus - Korpus - Carcase - Carcasse

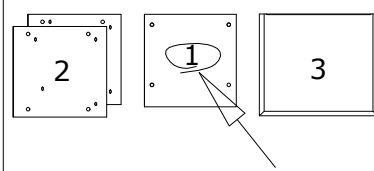

Beslag - Fittings - Beschläge - Set de Montage

