



# Adelaide

Design by BoConcept

Samlevejledning - Assembly Instructions - Montageanleitung - Instructions d'assemblage - Instrucciones de montaje

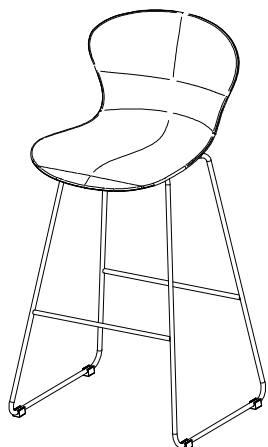


**402-B012**  
1x0170, 1x0090  
104,5/75x53x53 cm

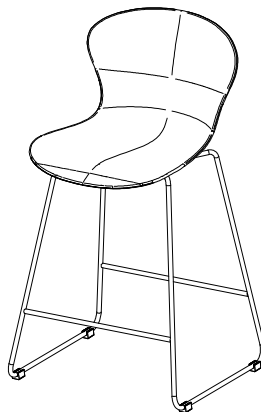


**402-B013**  
1x0180, 1x0090  
94,5/65x53x53 cm


Collie:  
400-0170

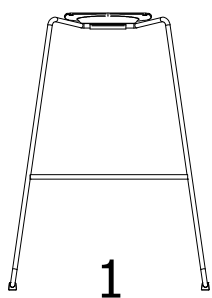

400-0180

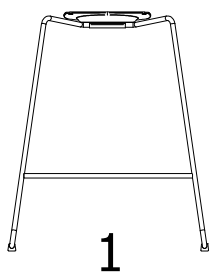

Collie:  
402-0090

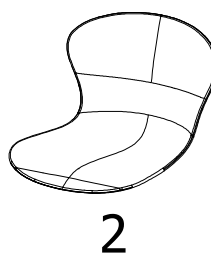

Fiitignbag nr:  
937000071



**Ax4**



Screw ma M6x12 zinc



**Bx1**

Allen key 4 mm

FIG.  
1

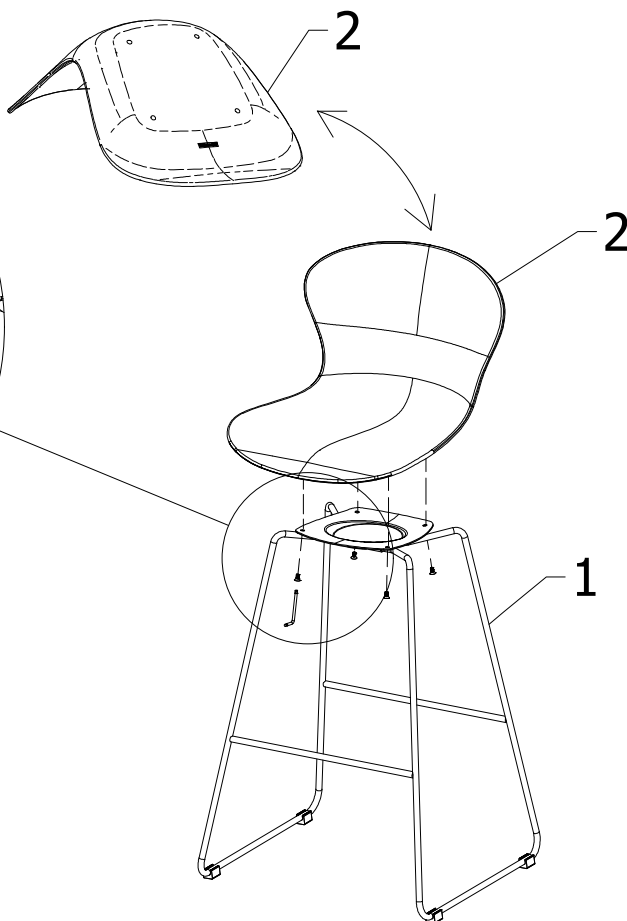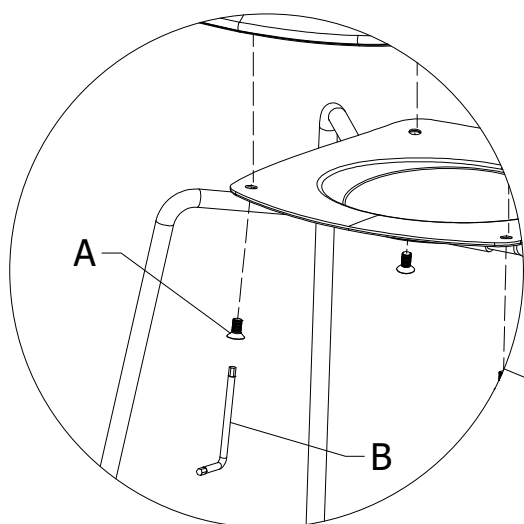


**Ax4**

**Bx1**



Spareparts bag:  
 Black: 937000072  
 White: 937000073

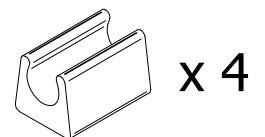

- DK Ved reklamation oplyses følgende:  
 D Im Reklamationsfall, bitte folgendes erläutern:  
 US In case of claims, please state the following:  
 F En cas de réclamation, veuillez indiquer:  
 NL Bij service volgene mededelen  
 E En caso de reclamación, indicar lo siguiente:  
 P No caso de reclamação, por favor indique o seguinte:  
 JP お気づきの点等ございましたら、以下の点をお知らせください。

**Example!**

