


# Zurich

Design by BoConcept

Samvejledning - Assembly Instructions - Montageanleitung - Instructions d'assemblage - Instrucciones de montaje

Eksempelkombinationer - Example combinations - Beispielkombinationen - Exemples d' combinaisons - Ejemplos de combinaciones

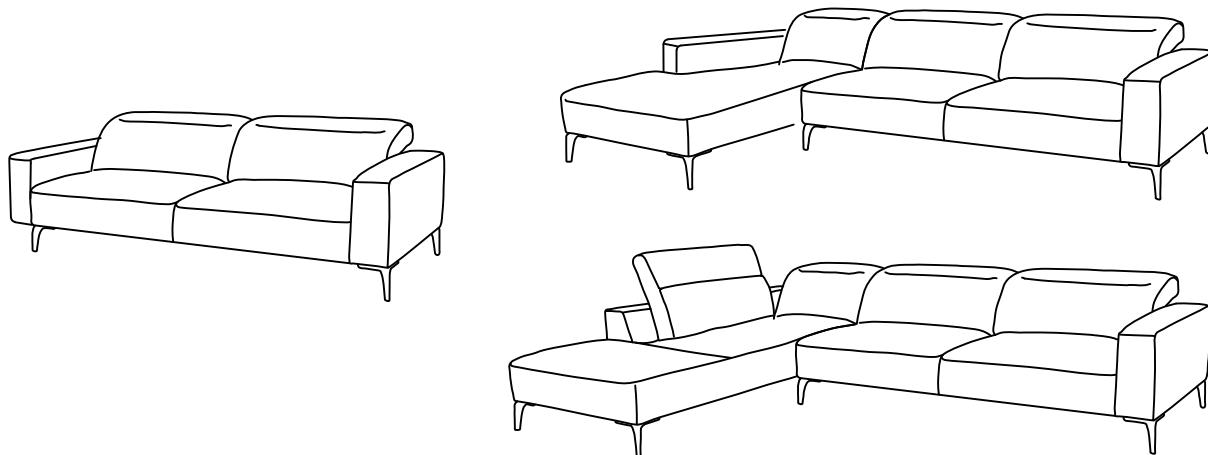

Monteringsstilbehør - Fittings - Montagezubehör - Raccords d'assemblage - Accesorios de montaje



A



B



C




D

(8000,8500)



E

(8000,8500)



F



5mm

FIG.  
1


## instructions

### Attention:


The legs of sofa is placed at the bottom of the sofa. Please open the zipper. You will find a set of sofa legs

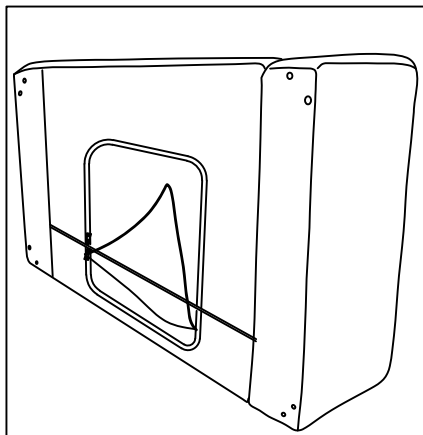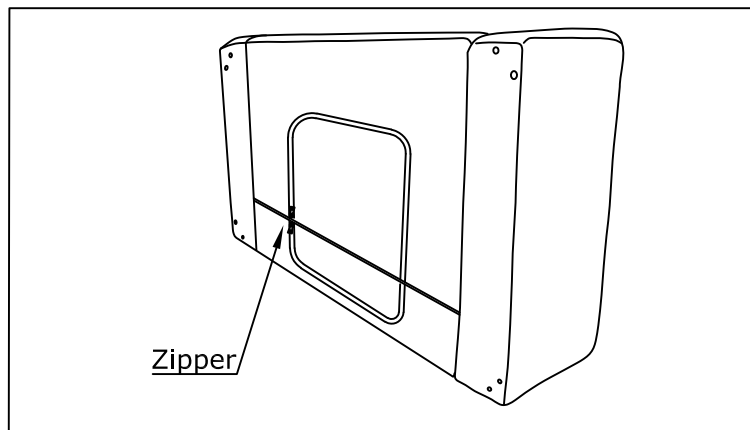

Step 1:  
Open the zipper, legs inside

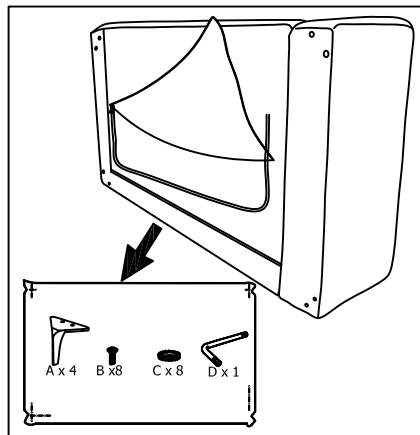

Step 2:  
Take out the legs

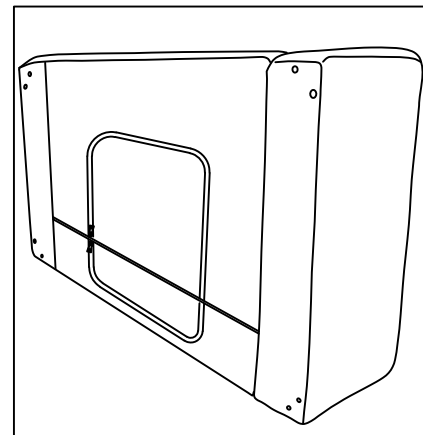

Step 3:  
Close the zipper

FIG. 2

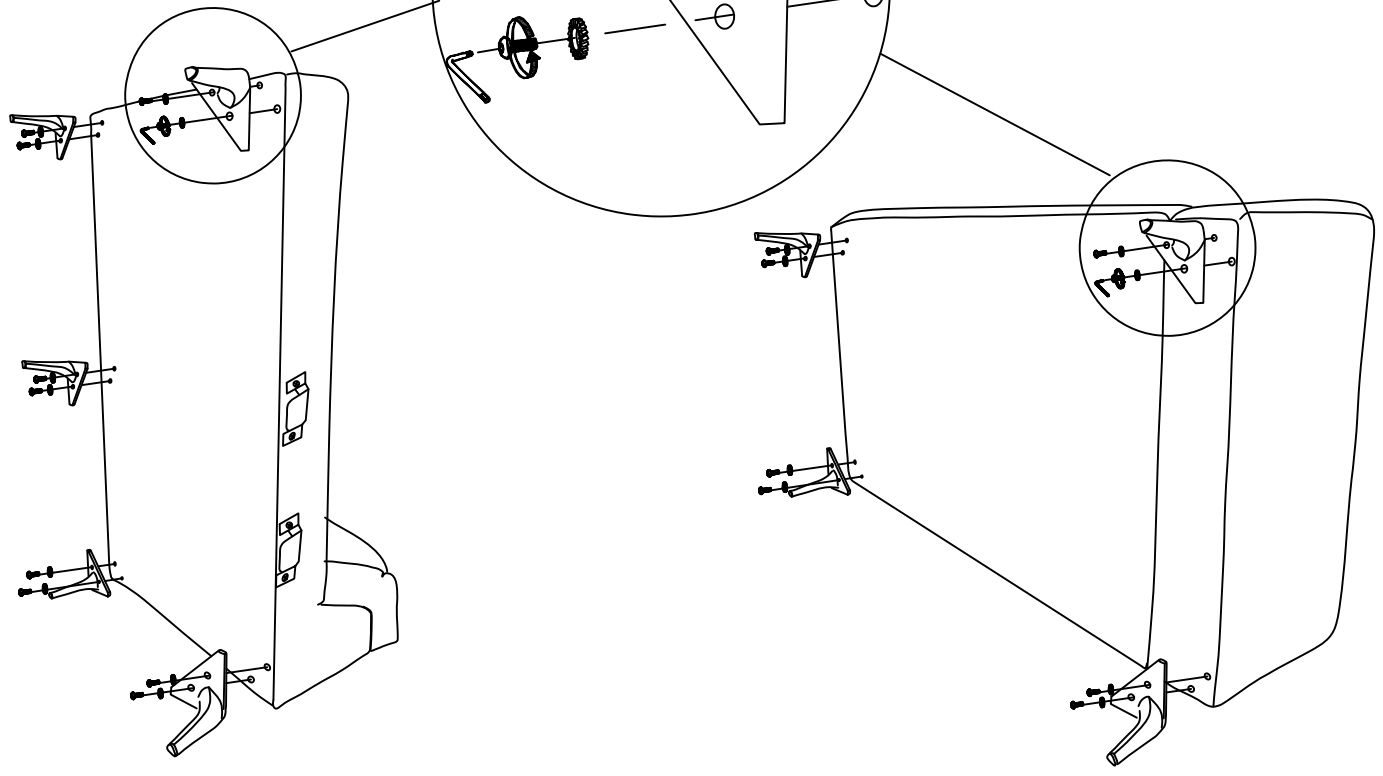
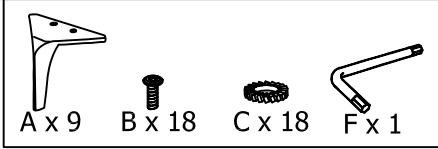
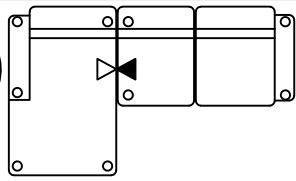


FIG. 3

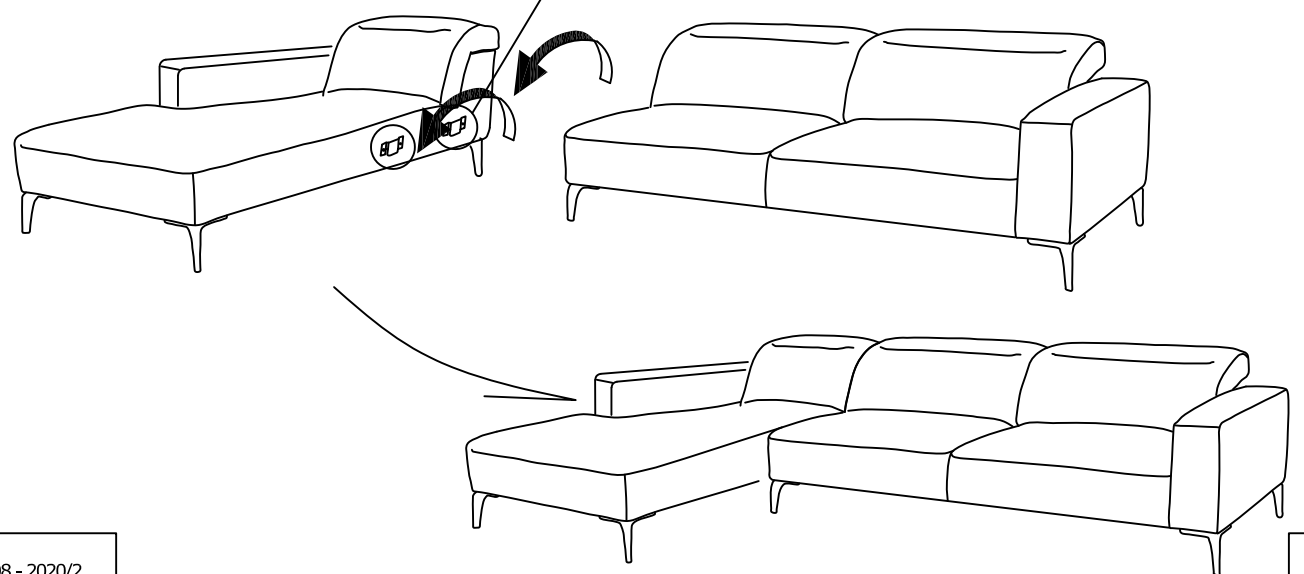
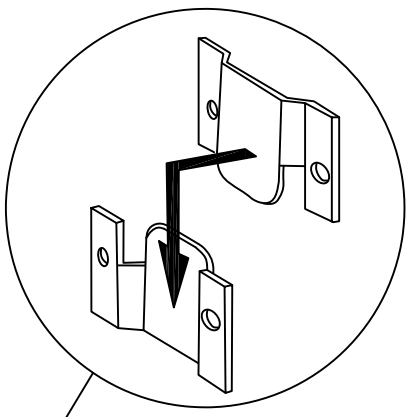
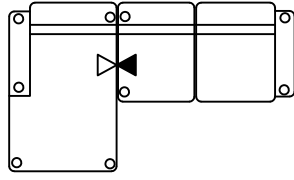








FIG. 3

-  Ax 8
-  Bx 16
-  Cx 16
-  Dx 1
-  Ex 1
-  Fx 1

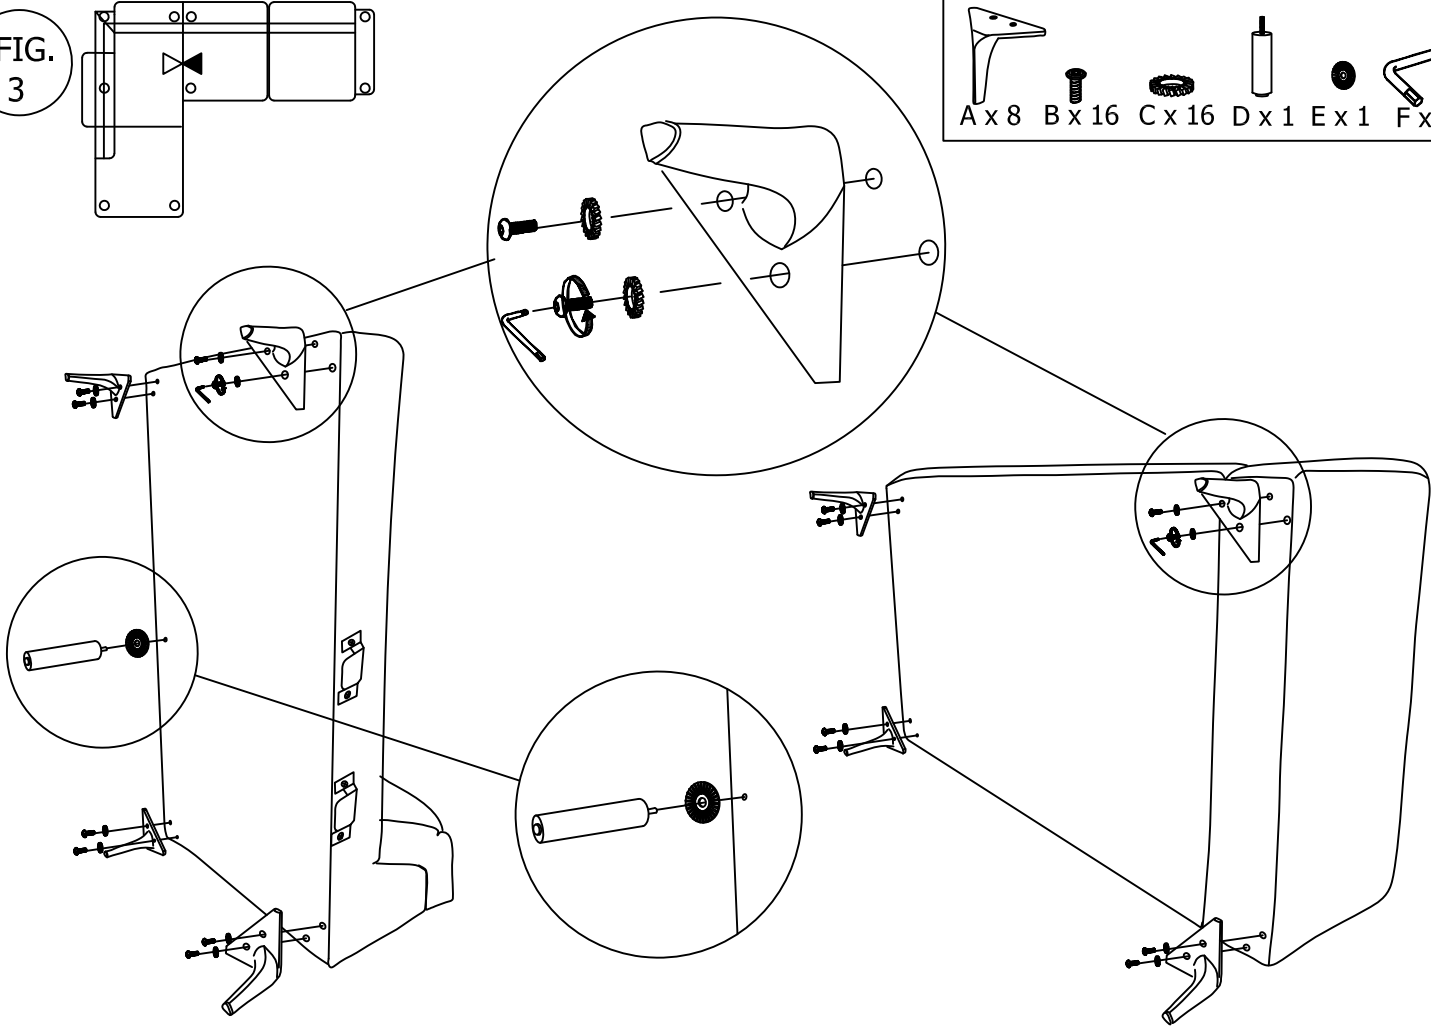


FIG. 4

