
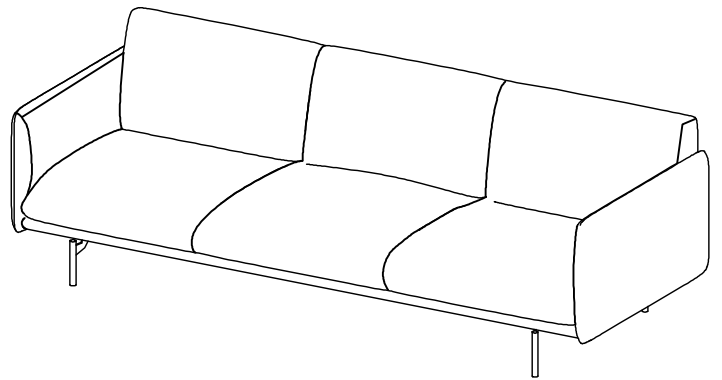
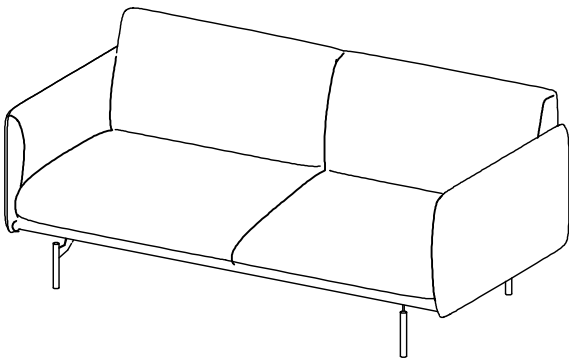
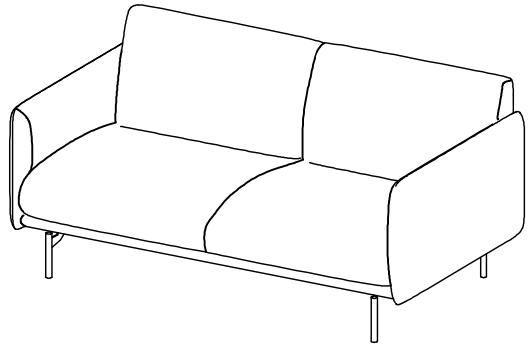


Berne

Design by BoConcept


Samvejledning - Assembly Instructions - Montageanleitung - Instructions d'assemblage - Instrucciones de montaje

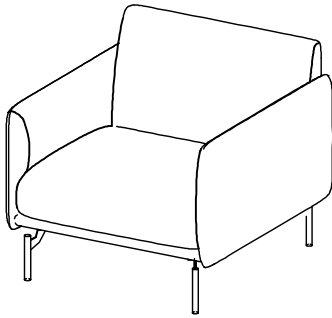

Fitting bag

697000072 (4pcs. legs + 16 pcs. screws + 1 pcs. Allen Key)


697000073 (16 pcs. screws + 1 pcs. Allen Key)



A x 4



B x 16
M8x25mm



C x 1
Allen Key 4mm

FIG.
1

instructions

Attention:

The legs are placed at the bottom of the sofa.

Please open the zipper at the bottom of the sofa to find the sofa legs.





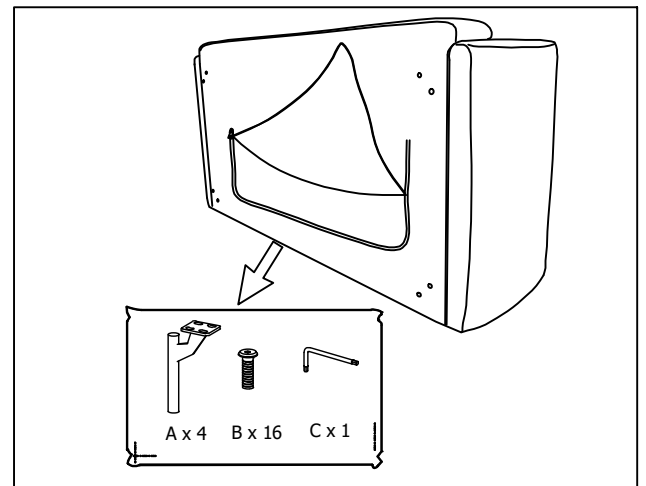


FIG. 2

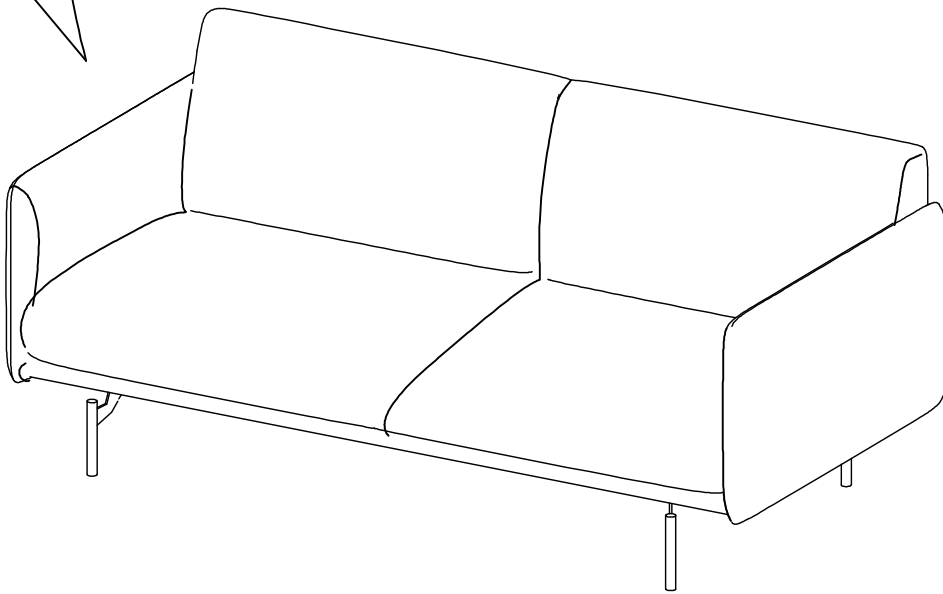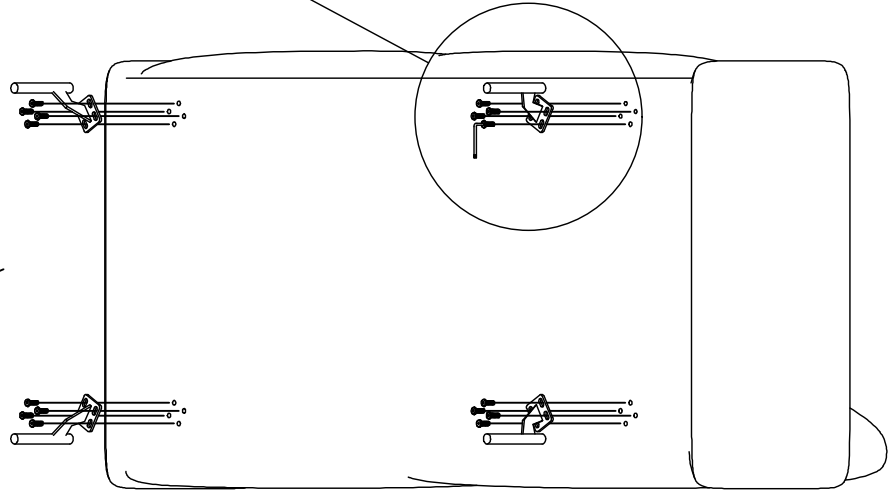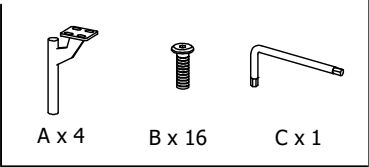

DK Ved reklamation oplyses følgende:
 D Im Reklamationsfall, bitte folgendes erläutern:
 US In case of claims, please state the following:
 F En cas de réclamation, veuillez indiquer:
 NL Bij service volgene mededelen
 E En caso de reclamación, indicar lo siguiente:
 P No caso de reclamação, por favor indique o seguinte:
 JP お気づきの点等ございましたら、以下の点をお知らせください。

Example!

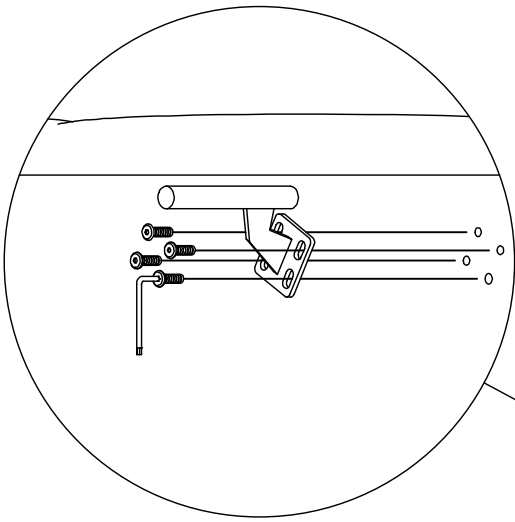