


# Vancouver


Design by BoConcept

Samvejledning - Assembly Instructions - Montageanleitung - Instructions d'assemblage - Instrucciones de montaje

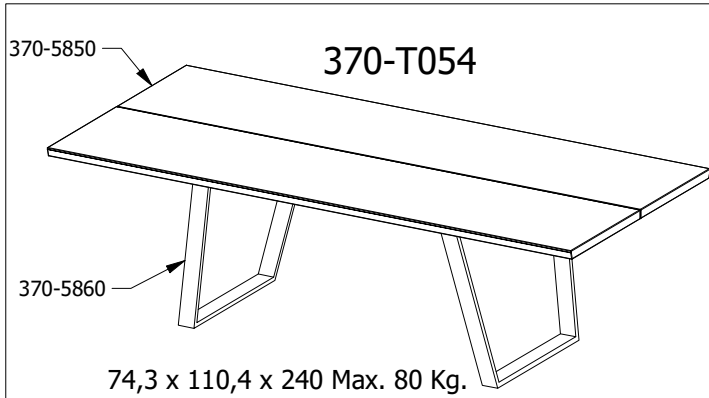


Korpus - Korpus - Carcase - Carcasse  
Col. **5851 x 2**

005341 Veneer  
005501 Solid Wood

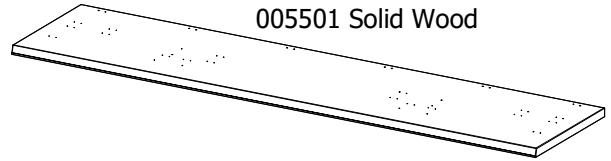

Beslag - Beschläge - Fittings - Set de montage Model 5850  
937000039




**A x 6**  
970001669




**B x 24**  
970001419  
6,2x13

Korpus - Korpus - Carcase - Carcasse  
Model **5860**

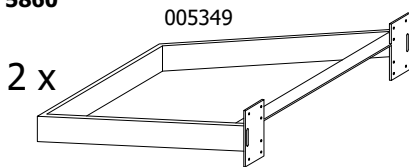

Fittingbag:  
937000109




005398

Beslag - Beschläge - Fittings - Set de montage Model 5860  
937000038






**C x 24**  
970001749  
5,0x30


FIG.  
1

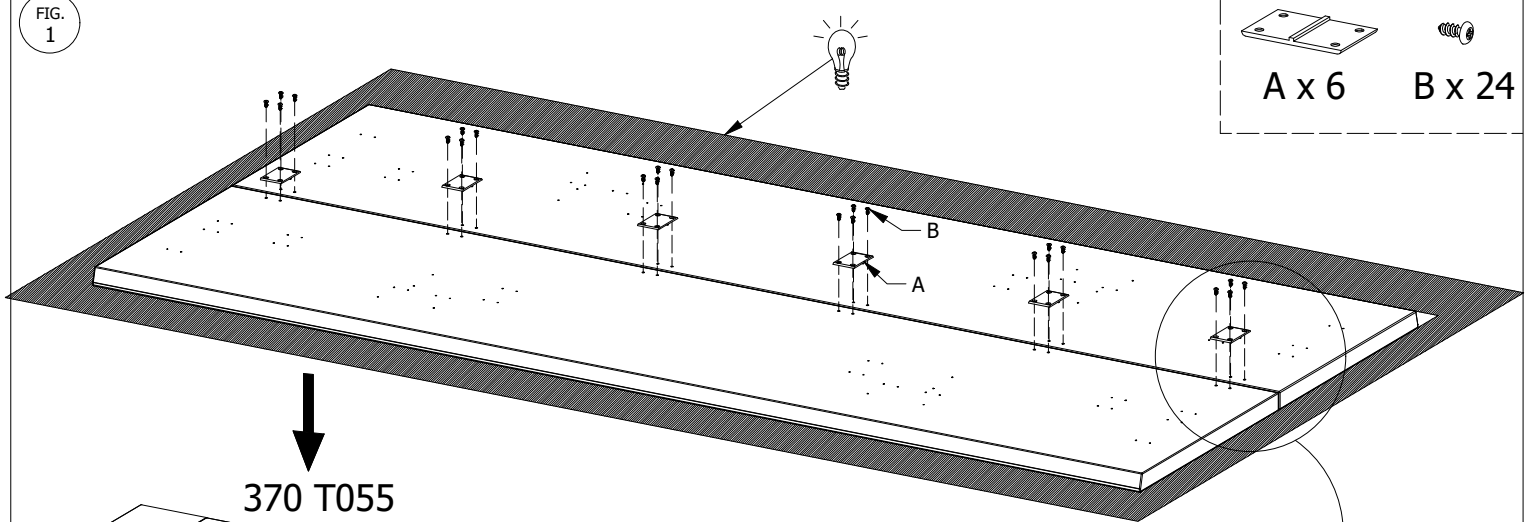

370 T055

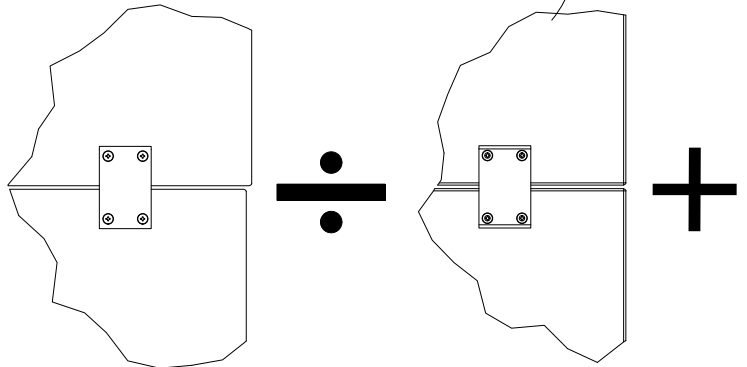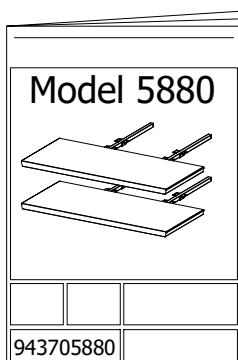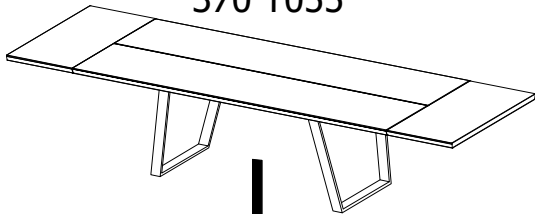

C x 24

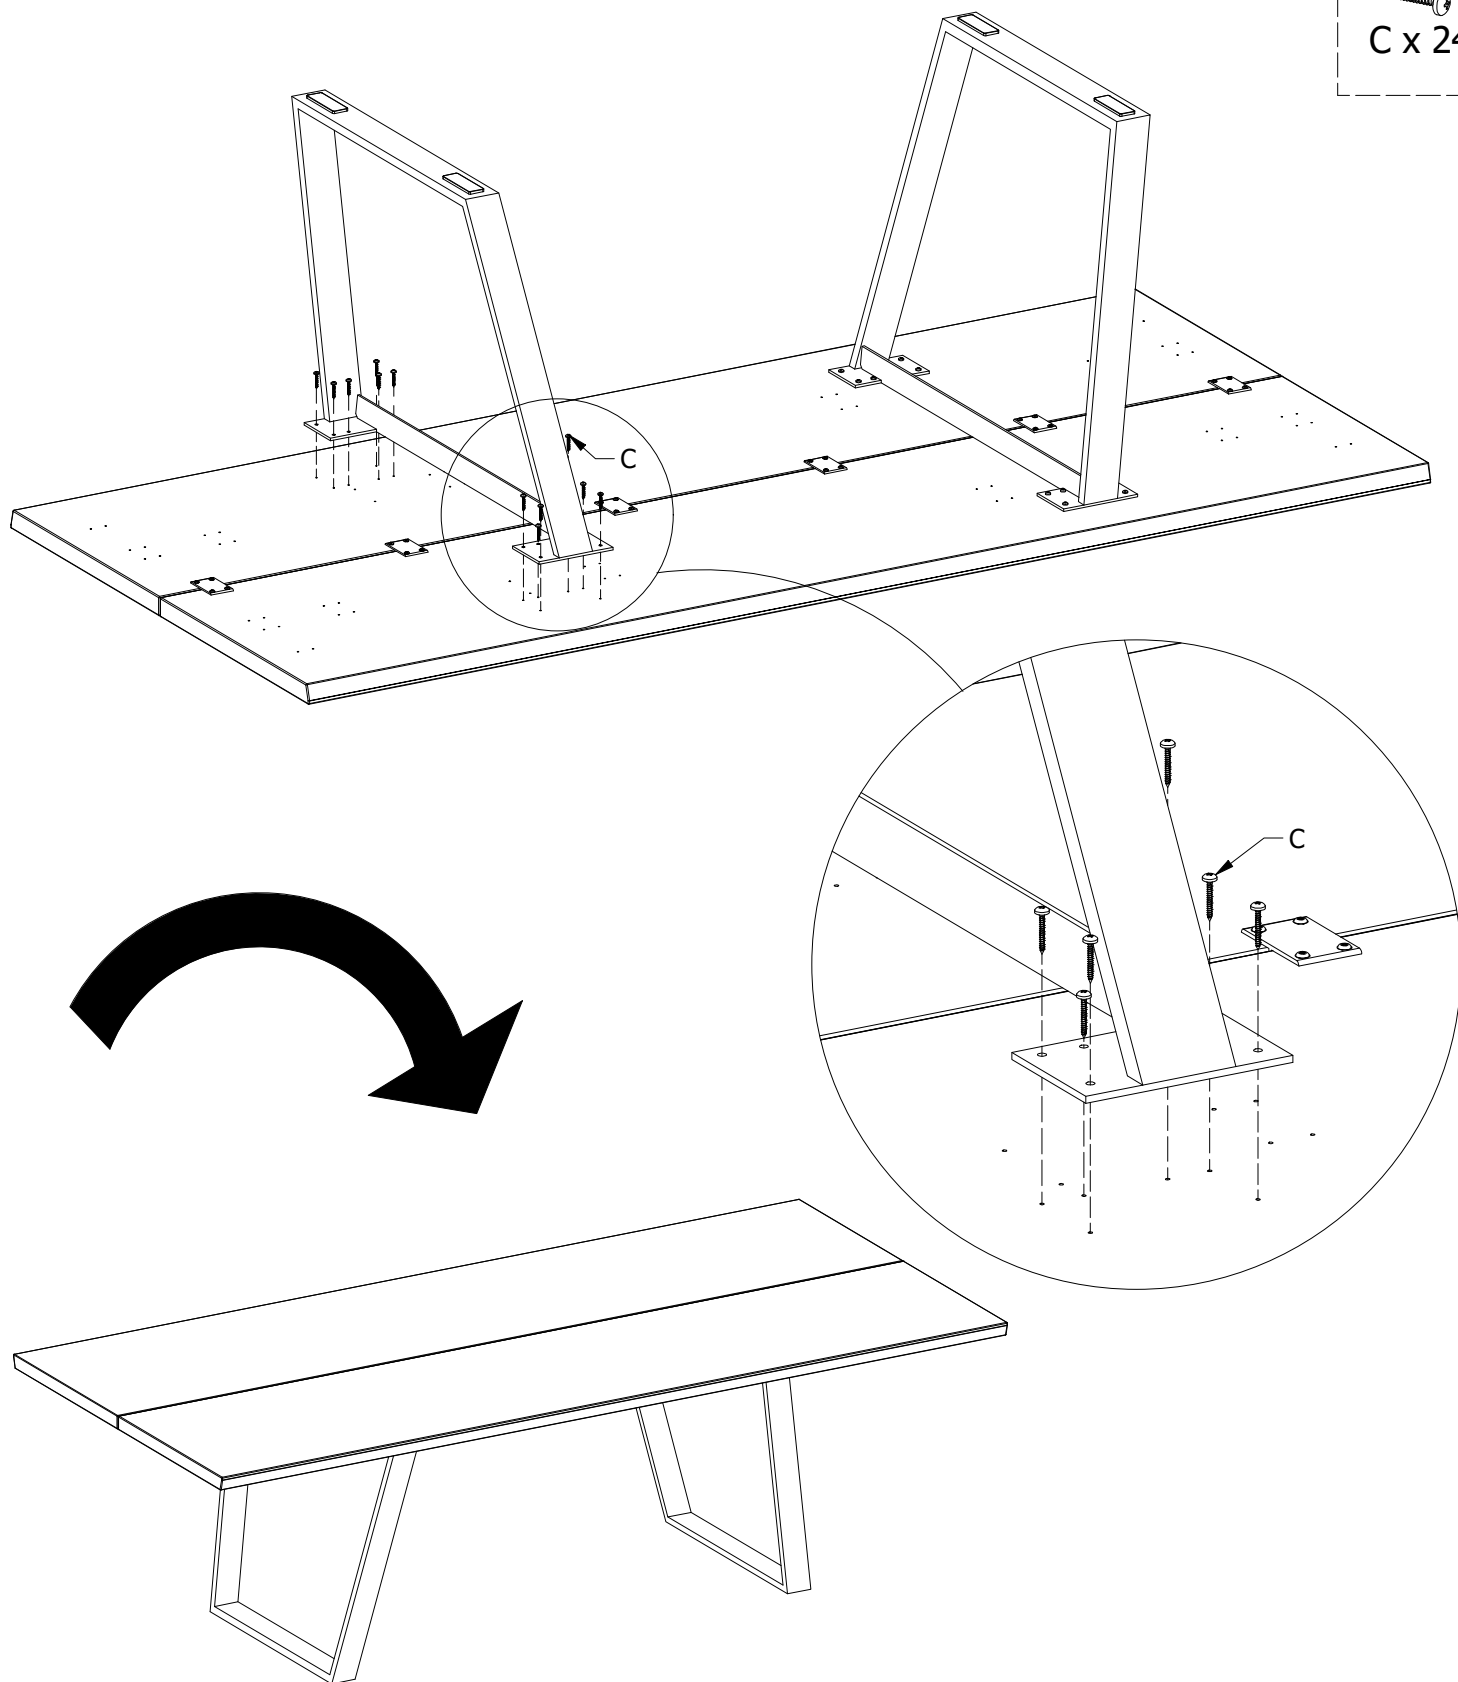

DK Ved reklamation oplyses følgende:

D Im Reklamationsfall, bitte folgendes erläutern:

US In case of claims, please state the following:

F En cas de réclamation, veuillez indiquer:

NL Bij service volgene mededelen


E En caso de reclamación, indicar lo siguiente:

P No caso de reclamação, por favor indique o seguinte:

JP お気づきの点等ございましたら、以下の点をお知らせください。

### Example!

Korpus - Korpus - Carcase - Carcasse



Beslag - Fittings - Beschläge - Set de Montage

