


# Torino Outdoor


Design by BoConcept

Samvejledning - Assembly Instructions - Montageanleitung - Instructions d'assemblage - Instrucciones de montaje

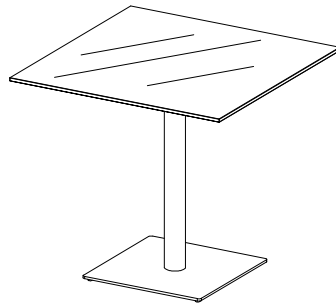


**D003** 1520 + 1570  
74x80x80cm

Model 1520

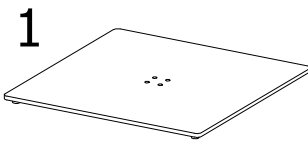


006214



006216

Model 1570

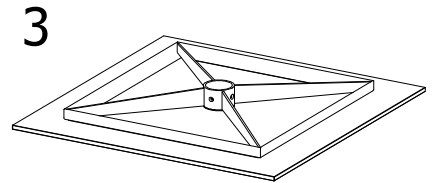

Sparepart bag

937000129



x4

970001774

Beslag - Beschlage - Fittings - Set de montage


No. 937000130



**A x 4**  
M6x16 mm



**B x 1**  
4mm




**C x 4**  
M8 x 30mm




**D x 1**  
5mm

FIG. 1  
Step 1

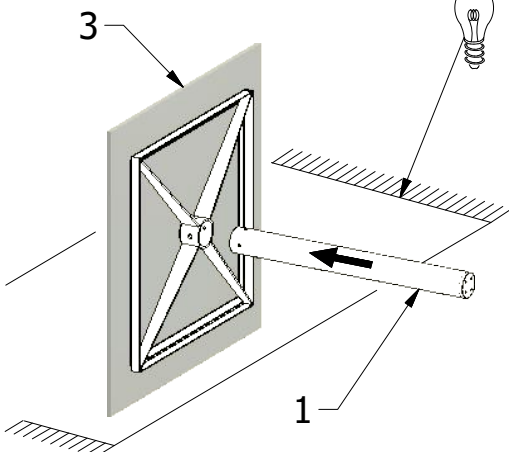

Step 2

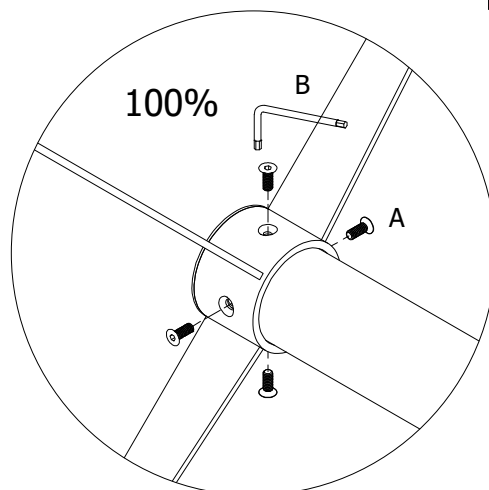

**A x 4**

**B**

FIG. 2

C x 4

D


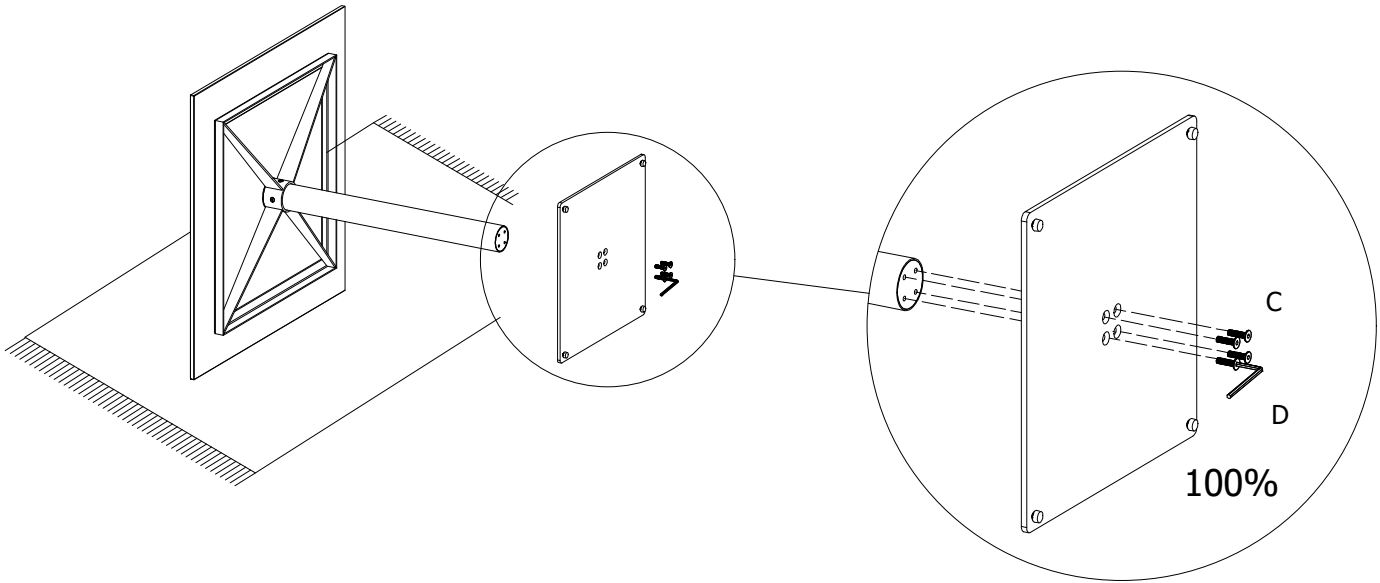


FIG. 3



- DK Ved reklamation oplyses følgende:
- D Im Reklamationsfall, bitte folgendes erläutern:
- US In case of claims, please state the following:
- F En cas de réclamation, veuillez indiquer:
- NL Bij service volgene mededelen
- E En caso de reclamación, indicar lo siguiente:
- P No caso de reclamação, por favor indique o seguinte:
- JP お気づきの点等ございましたら、以下の点をお知らせください。

**Example!**

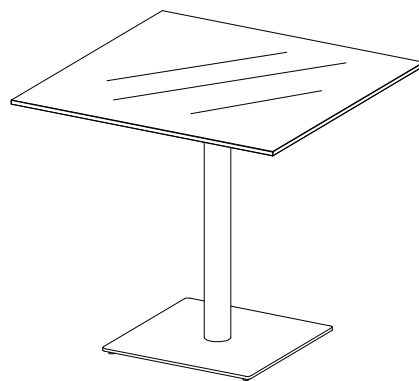