


Bed Concept

Design by BoConcept



Samlevejledning - Assembly Instructions - Montageanleitung - Instructions d'assemblage - Instrucciones de montaje

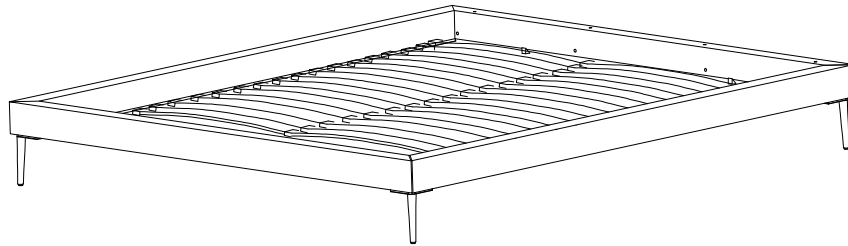

1450 + 0450
1460 + 0460
1480 + 0480
1490 + 0490

Coll.1: 1450, 1460, 1480, 1490

Coll.2: 0450, 0460, 0480, 0490

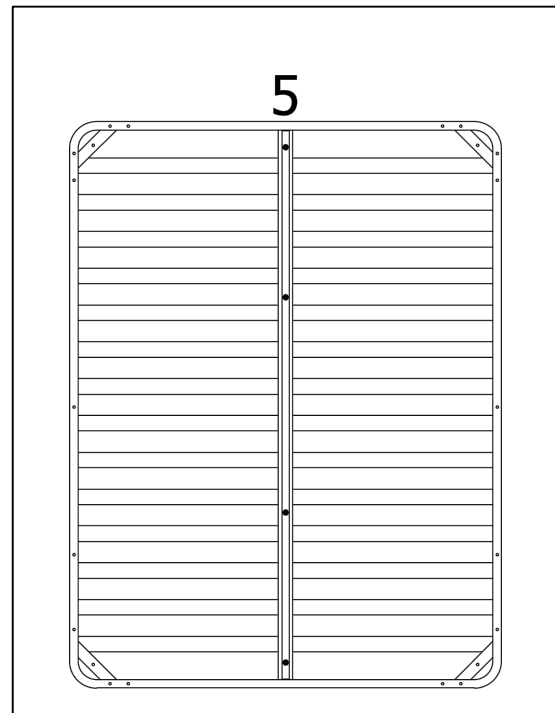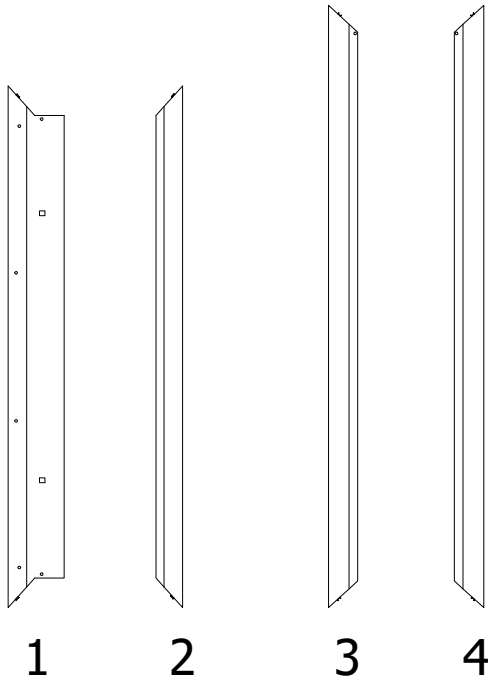

Beslag - Beschläge - Fittings - Set de montage
No. 937000154

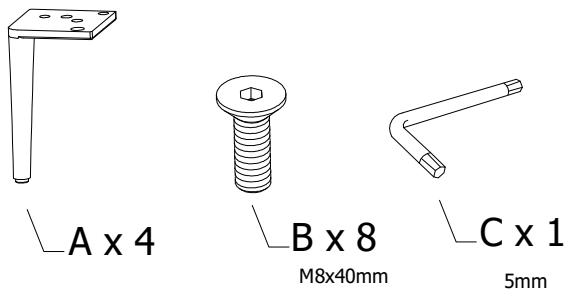


FIG.
1

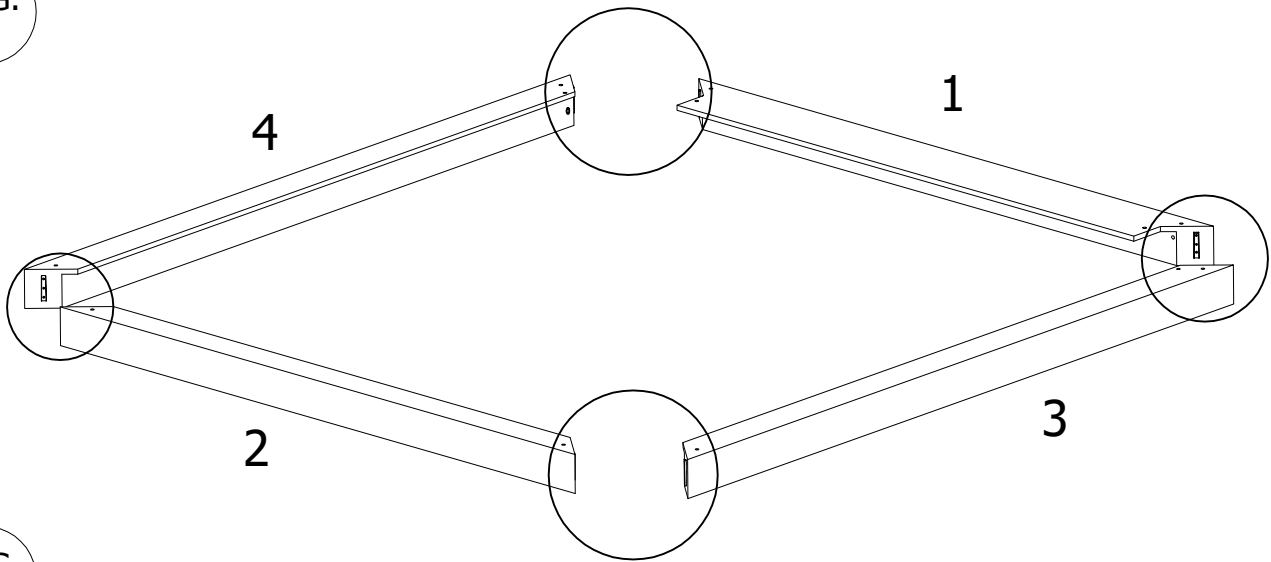


FIG.
2

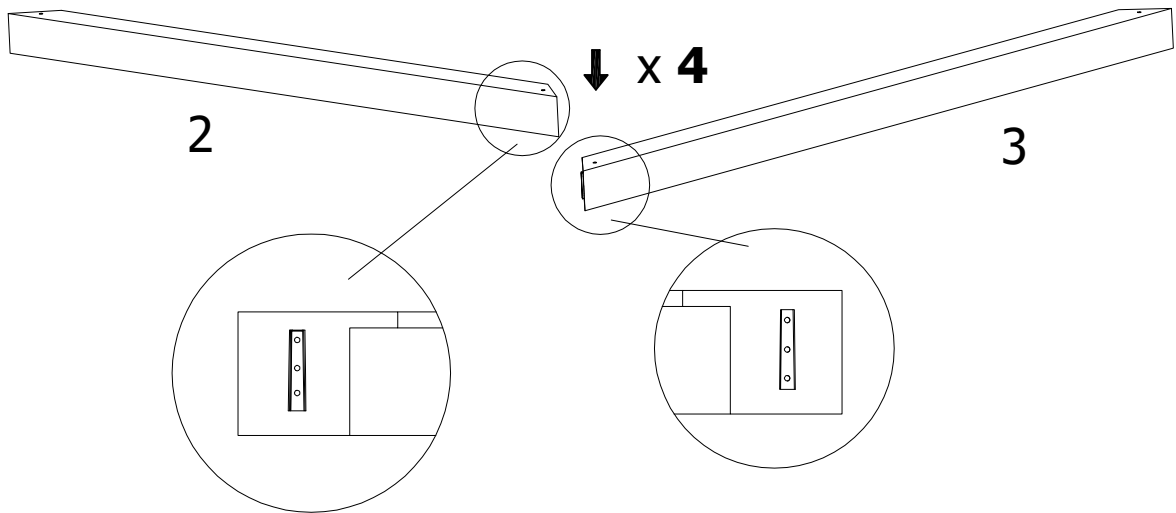


FIG.
3

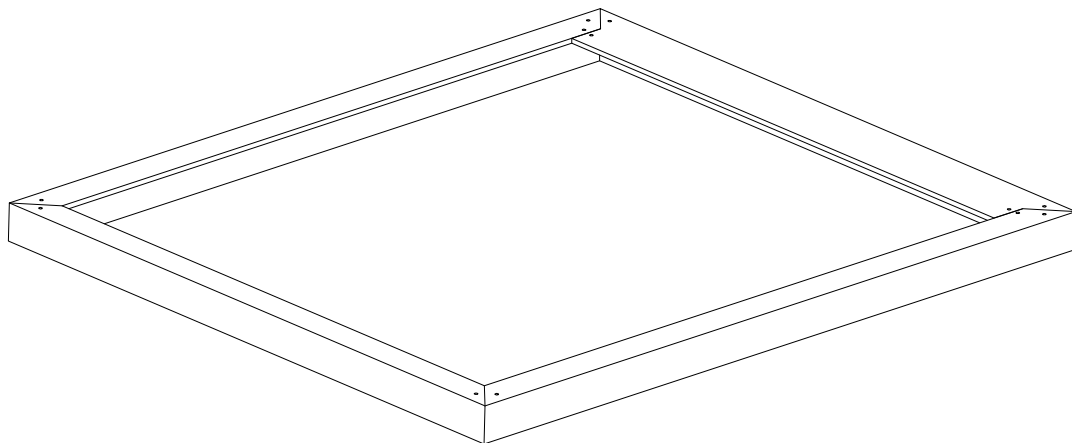


FIG.
4


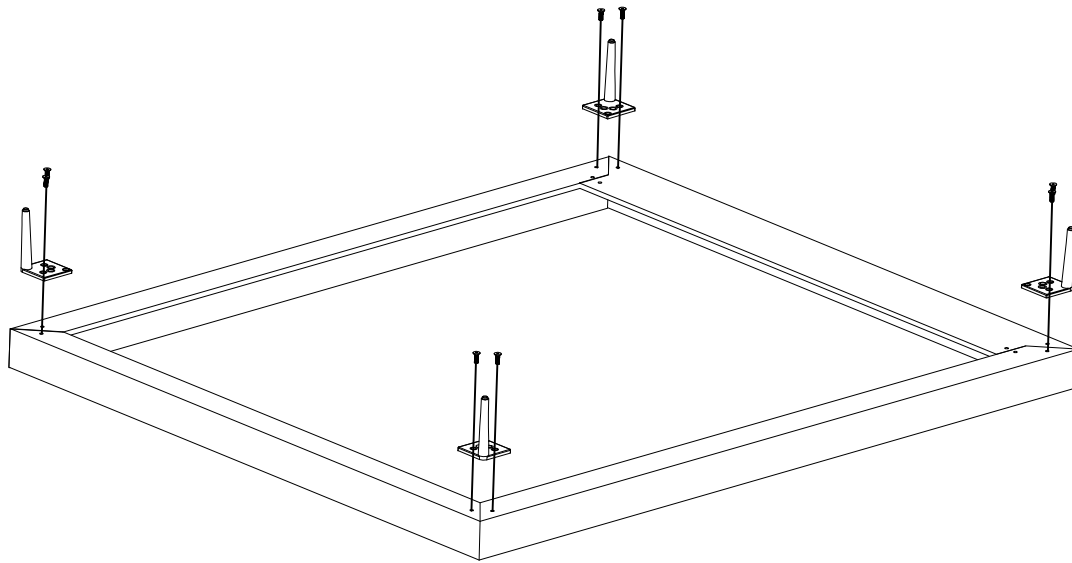


FIG.
5

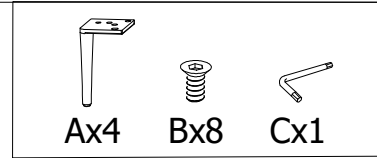