


# Lausanne

Design by BoConcept

Samvejledning - Assembly Instructions - Montageanleitung - Instructions d'assemblage - Instrucciones de montaje

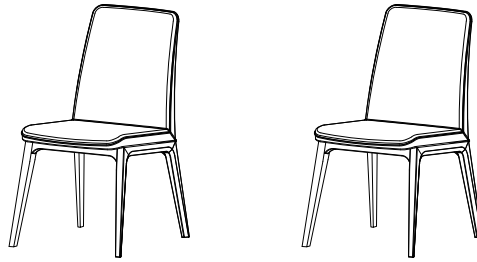


125kg/275lb




**D018** (2220+2210)

hxbxd: 87,5/47x50x61 cm

Korpus - Korpus - Carcase - Carcasse  
Lausanne 400-2220

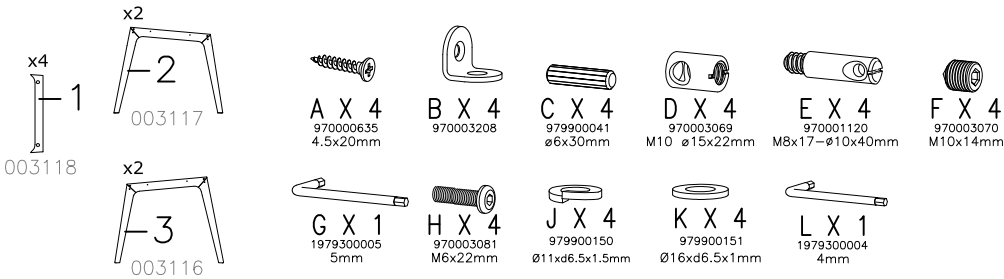

Seat 405-2210

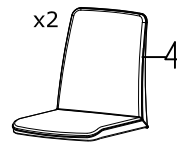

Verktøj -  
Werkzeuge -  
Tools - Outils

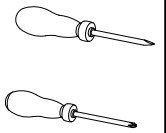


FIG. 1



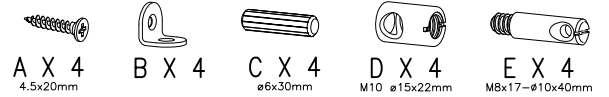


FIG. 2

- F X 4  
M10x14mm
- G X 1  
5mm

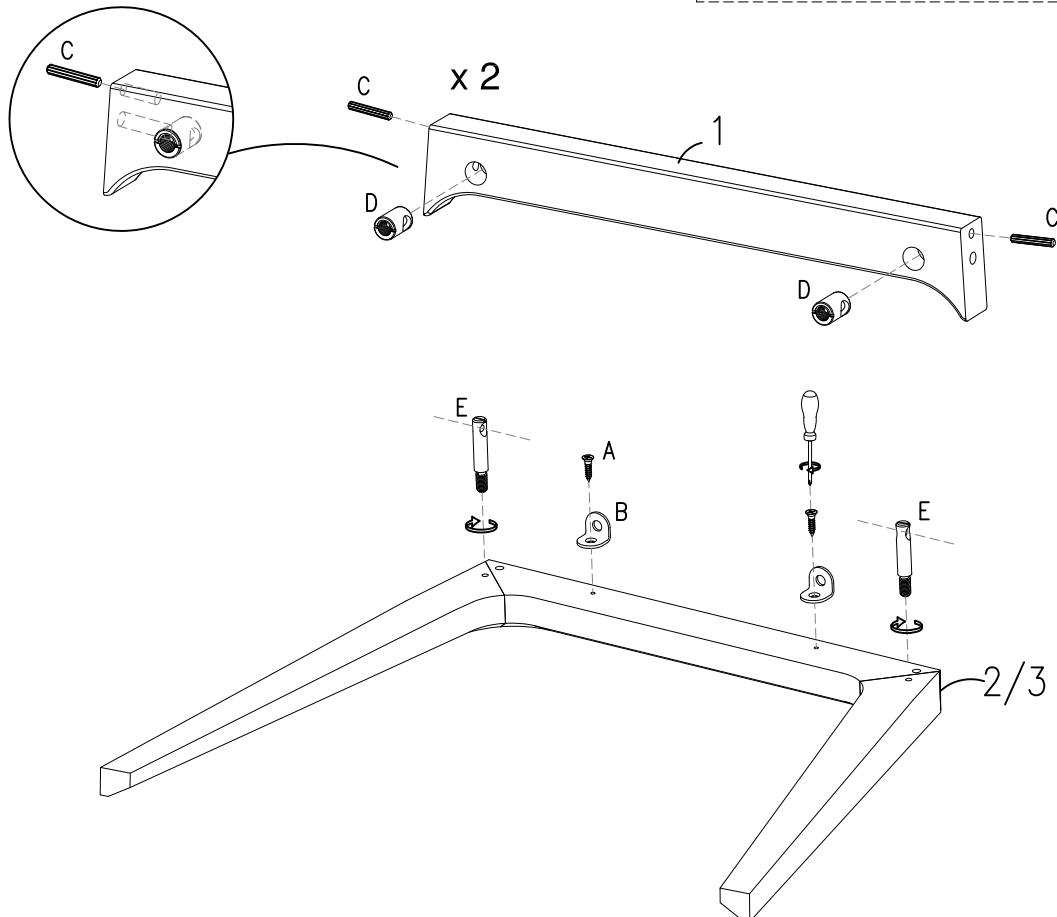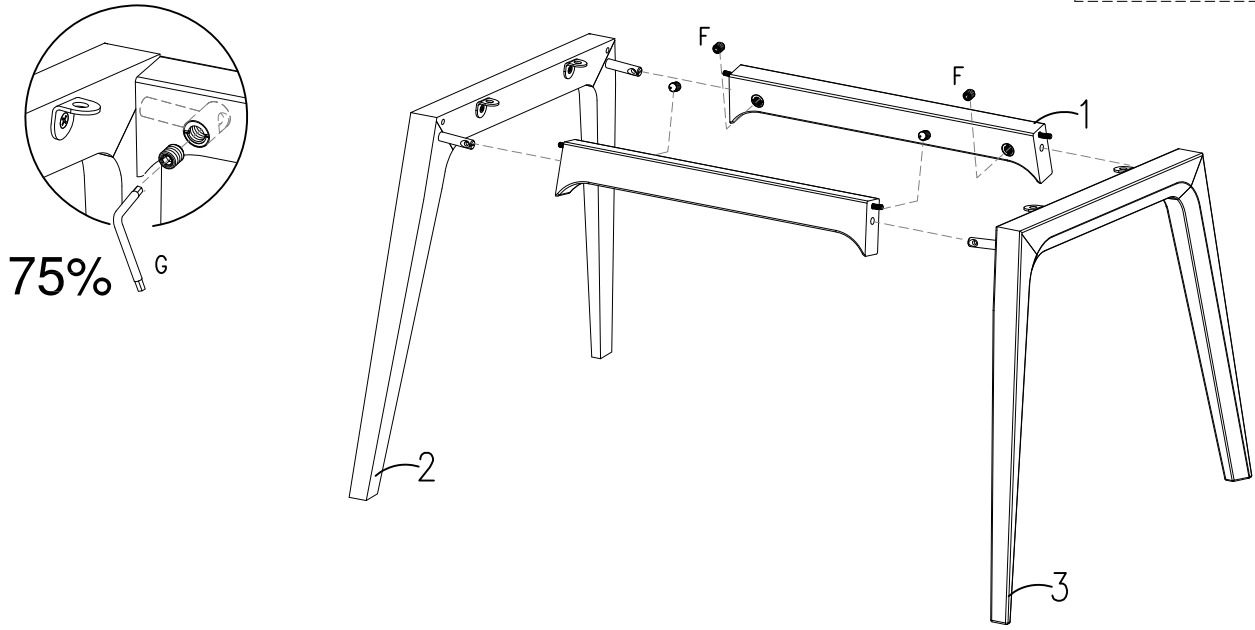

75%

FIG. 3

- H X 4  
M6x22mm
- J X 4  
Ø11x6.5x1.5mm
- K X 4  
Ø16x6.5x1mm
- L X 1  
4mm



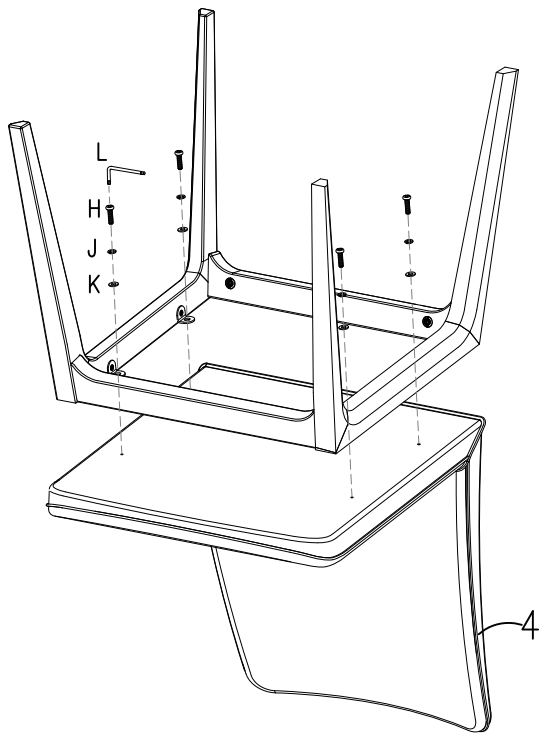


FIG. 4

- G X 1  
5mm

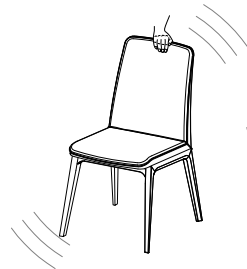

Step 1

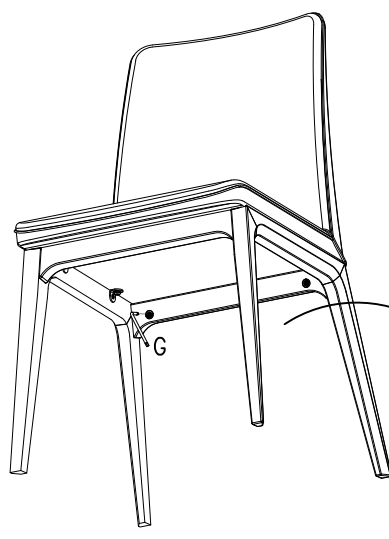

Step 2

100%

**DK** Ved reklamation oplyses følgende:  
**D** Im Reklamationsfall, bitte folgendes erläutern:  
**US** In case of claims, please state the following:  
**F** En cas de réclamation, veuillez indiquer:  
**NL** Bij service volgene mededelen  
**E** En caso de reclamación, indicar lo siguiente:  
**P** No caso de reclamação, por favor indique o seguinte:  
**JP** お気づきの点等ございましたら、以下の点をお知らせください。

Example!

